

First Alert[®]

**PORTABLE OUTDOOR BLUETOOTH SPEAKER
WITH FLASHLIGHT**



USER MANUAL

SFA900



**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

DEAR FIRST ALERT® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SFA900

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Only use attachments / accessories specified by the manufacturer.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
10. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
11. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
12. There is a high energy rechargeable battery inside the speaker box, do not throw it into fire to avoid danger of explosion.
13. Do not charge the internal rechargeable battery longer than specified to prevent danger of fire. Overcharging rechargeable batteries may shorten their life span.
14. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
15. Caution marking and nameplate are located on back of product.

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibration.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

CAUTION ON WEATHER RESISTANT:

This unit has been constructed to resist rain and moisture only. It should not be operated under running water and under no circumstances should it be fully immersed in water.

PRODUCT FEATURES

The SFA900 is a Bluetooth portable stereo speaker with the following features:

- Auxiliary input jack to play music from your iPod or digital audio player
- Wireless playback of music from your cell phone via the Bluetooth connection
- Up to 33 feet (10 meters) operating range
- Digital volume control
- Flashlight and SOS light

PREPARATION FOR USE

ACCESSORIES

Unpack the unit carefully to remove all the accessories from the packing. Verify that the following accessories are present before setting up the unit.

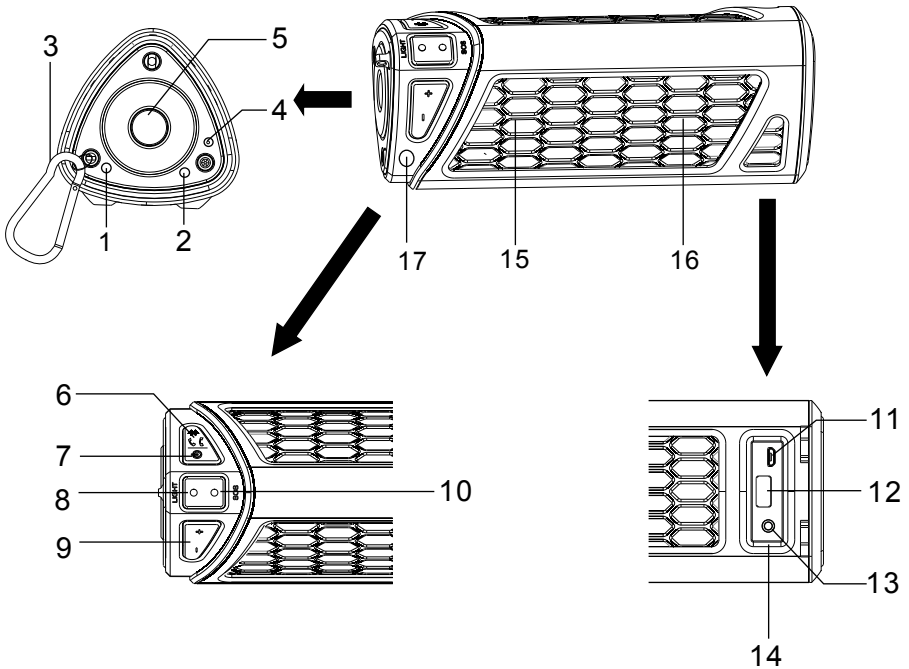
- Main Unit X 1
- USB charging cable X 1
- User Manual X 1

CARABINER CLIP

To use the carabiner clip,

- Press on the clip to open it.
- Use the carabiner clip for hanging the SFA900.

LOCATION OF CONTROLS



- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Bluetooth / AUX Mode Indicator 2. Battery Charging / Low Battery Indicator 3. Carabiner Clip 4. Built In Microphone 5. Flashlight 6. Bluetooth PAIRING / Phone Hands-Free 7. POWER ON / OFF BUTTON 8. FLASHLIGHT ON / OFF BUTTON 9. VOLUME UP (+) / Down (-) BUTTON | <ul style="list-style-type: none"> 10. SOS LIGHT ON / OFF BUTTON 11. Micro USB DC IN Port 12. USB Charging Output Port 13. AUX-IN JACK 14. Rubber Dust Cover 15. Left Speaker 16. Right Speaker 17. NFC linking Point |
|--|---|

LED Status Indicators

LED Position	Discription	LED Status
Power/MODE Indicator	No Power	LED Off
	Power on/Ready to link	BlueLED flashing fast
	Power on/Bluetooth Connected	Blue LED lights steadily
	Power on/Paired device is out of range or turned off	Blue LED flashing slow
	Power on/AUX Mode	Green LED lights steadily
Charging/Low Battery Indicator	No Charging	LED off
	Charging	Red LED on
	Fully charged	Green LED on
	Low Battery	Red LED flash

Remarks: Flashing Fast - less than 1 second apart.

Flashing Slow - around 2 seconds apart.

BUTTON DEFINITIONS

#	BUTTON NAME	BUTTON ACTION	AUX MODE	BLUETOOTH MODE
1	VOLUME+	Press	Increases the volume level	
2	VOLUME-	Press	Decreases the volume level	
3	Bluetooth Button/ Hands-free Button	Press and hold for 2 seconds	N/A	Searching/Pairing
			Incoming call	
4	/ Button	Tap	N/A	Picks up an incoming call
	/ Button	Tap	N/A	Hangs up your current call
	/ Button	Press & hold	N/A	Rejects an incoming call
			Outgoing Call	
5	/ Button	Tap twice	N/A	Redials the last outgoing call

POWER SOURCE

 
This unit operates on a built-in Li-ion battery. The internal battery may not fully charged out of the box, even if the Green charging LED lights. We recommend that you charge the SFA900 for at least 10 hours before first use.

CHARGING INSTRUCTION

 
This unit operates on a built-in Li-ion battery that can be recharged either using the USB port on your computer or from an AC adaptor (not included) with a rated output of DC 5V, 500mA.

Note: The micro USB DC IN jack is located on the side of the unit under rubber dust cover, and is designed for charging the internal Li-ion battery. The unit will still operate while charging, but doing this may reduce the battery life, and increase the charging time.

CHARGING THE BATTERY USING THE micro USB PORT

1. Charge the built-in Li-ion battery a minimum of 10 hours prior to first use.
2. Place the unit standing upright on a table or flat surface and pull the tab on the rubber dust cover to open it.
3. Use the included USB charging cord, and plug the SFA900 into a USB port on your computer or into a USB power adaptor (not included).
4. The Red charging LED located on the top panel  (flashlight side) will light. It will turn Green when the battery is fully charged.
5. Unplug the USB cable from the power source once the battery is fully charged. Close the rubber dust cover.
6. After prolonged use, the battery voltage may discharge and operation might become intermittent. When this happens, please recharge the internal battery.

LOW BATTERY INDICATION

1. When operating the unit on battery power, the low battery top panel  (flashlight side) will flash indicating that the battery is low, please connect the unit to USB power for charging.
2. After prolonged use, the battery voltage will discharge and operation might become intermittent. When this happens, please recharge the internal battery.

- Note:**
- 1.) Charging time will vary if you are listening to music while charging the speaker battery. We recommend you turn off the speaker power during the charging process or until the speaker batteries are fully charged.
 - 2.) To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
 - 3.) Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.



Battery Note and Care

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Li-ion batteries. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

NOTE: These speakers are not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the speakers further away from the TV or monitor if unnatural color shifts or image distortion occurs.

TURNING THE SPEAKER POWER ON/OFF

1. In Power Off mode, press and hold the POWER ON /OFF button to turn on the unit, the Bluetooth / AUX mode LED will light up and fast flashing to available for Bluetooth enable devices for searching.
Note : In Bluetooth mode, the unit will turn off automatically if no Bluetooth device is connected to the speaker within 15 minutes.
2. In Power On mode, press and hold the POWER ON /OFF button to turn OFF the unit, the Mode LED will go off.

BLUETOOTH OPERATION

Press and hold the Power ON/OFF button to turn ON the unit and follow the directions below to connect via Bluetooth.

CONNECTING YOUR BLUETOOTH DEVICE USING NFC

ABOUT NFC

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as mobile phones and IC tags. Thanks to the NFC function, data communication can be achieved easily just by touching the relevant symbol or designated location on NFC compatible devices.


1. Make sure your Smartphone or Bluetooth device has the NFC feature, and it is turned ON (enabled).
2. Turn on SFA900 power and wait for 5 seconds to enter pairing mode, Bluetooth pairing MODE indicator flash fast.
Note : If the SFA900 is connected to other smartphone, press and hold the Bluetooth button to enter Bluetooth pairing mode.
3. Touch the back of your smartphone to the NFC linking point (#17) located on the left hand side of the unit (near top panel when unit standing up). Check the owner's manual of your Bluetooth device to locate the NFC touch point if you are not sure where it is.
4. If the SFA900 is in pairing mode, it will turn on and enter Bluetooth mode automatically and pair with your smartphone.
5. Some smartphones may ask you to confirm the pairing if they are not paired before.

NOTE: If you have multiple NFC compatible devices to link, just touch the smartphone to a different device to switch the connection to that device. For example, when your smartphone is connected to the SFA900, just touch the linked smartphone to the system or smartphone you want to change the Bluetooth connection to (one touch connection switching). The connection will automatically be transferred from your smartphone to the new device.

PAIRING (Linking) a BLUETOOTH ENABLED cell phone OR OTHER BLUETOOTH ENABLED DEVICE to the SFA900

If the SFA900 has never been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the SFA900 with your Bluetooth device.

1. Wait 5 seconds after the power switch is turned on, the Blue LED backlight on the left panel will be flashing fast. The SFA900 is ready to pair (link) with your Bluetooth device.
2. Turn on the Bluetooth feature of your cell phone and enable the search or scan feature to find the SFA900.
3. Select "SFA900" from the device list when it appears on your screen. If required, enter the pass code "0000" to pair (link) the SFA900 with your cell phone. A tone will be heard if pairing successful and blue MODE LED will begin flashing slow.

4. After successfully pairing (linking) your cellphone with the SFA900, the MODE indicator lights Blue (solid), and you can play music from your cell phone wirelessly to the SFA900.
5. If you want to connect the SFA900 to another cell phone after pairing successfully, press and hold  for 2 seconds, the Blue LED backlight will change to flashing fast, repeat step 2-4 above.

Note : The SFA900 may automatically reconnected to a previously linked device that is in range, so you may need to turn off the Bluetooth on any paired device first before going through the above steps.

NOTE to iPhone/iPod/iPad users : If you are using an iPhone, iPod or iPad and you clear all the Bluetooth connections stored in the SFA900, you may need to delete (“Forget this Device”) the previous connection with the SFA900 located in the Devices list under Bluetooth settings. Once the SFA900 connection is deleted from the Devices list, you will need to go through above pairing steps again to reconnect to the SFA900.

6. To turn off the SFA900 Bluetooth, press and hold the Power button, the MODE indicator LED goes off. Don't forget to also turn off the Bluetooth feature on your device.
7. Always turn off the unit when not in use to prevent draining the internal battery.




Notes:

- 1.) Refer to manual of your cell phones, iPad, computer or other Bluetooth enabled device for Bluetooth operation, since it may vary from model to model.
- 2.) SFA900 will be off if pairing is unsuccessful within 15 minutes to save battery power, blue LED turns off.
- 3.) Your Bluetooth enabled device will not play the music through the speaker, even it can be connected, if the device does not support A2DP.
- 4.) Do not plug in the Audio jack when the Bluetooth is in operation.
- 5.) If you are pairing (linking) your computer to the SFA900 using Bluetooth, you may need to set the SFA900 as your computer's default sound device.


PLAYBACK MUSIC ON YOUR BLUETOOTH DEVICE

1. Press and hold the Power button to turn on the unit.
2. Turn on Bluetooth of your cell phone or device which has been successful pairing with SFA900 before, the unit can connect the latest device automatically.
3. After the Bluetooth device is paired with the SFA900, press the Play/Pause button on your Bluetooth device to start playback music in your cell phone or Bluetooth device. If music has not been started playback, please go to music library of your bluetooth device and start it manually.
4. Press the Play/Pause button on your bluetooth device to pause or resume playback.
5. Press the VOLUME+/- button to adjust the volume level
6. Always turn the power OFF when not in use to prevent draining the internal battery.


Using the SFA900 as a Hands Free Bluetooth Speakerphone

1. Link your cellphone to the SFA900 via Bluetooth as described above.
2. When receiving an incoming call on your cell phone, tap the  button on the SFA900 to switch an incoming call from cell phone to the SFA900. Complete your call using the built-in microphone and speaker of the SFA900.
3. Press the VOLUME UP(+) /DOWN (-) buttons on the SFA900 to adjust the volume to your desired sound level.
4. To end the call, tap the  button again. If you were streaming music from your cell phone to the SFA900, the music will automatically resume streaming to the SFA900.
5. To reject an income-call, simply press and hold the  button on the SFA900 for about 2 seconds.

Redialing the last number with the SFA900

The SFA900 will automatically redial the last number you dialed by tap the SFA900  button twice.

Hanging up your call with the SFA900

When your phone call is finished, tapping the  button will end the call in progress.

Re-linking to the cell phone

If your cell phone is already paired with the SFA900, but became unlinked even with both Bluetooth devices turned on. You can re-link them by:

1. Turn the unit Power off and then turn it on again, wait for 10 seconds, the blue backlight LED will flash fast and re-link your cell phone automatically. The blue backlight LED will change to solid lighting and a short tone will be heard if the SFA900 and your cell phone have been re-linked successfully.
2. You can also re-link the SFA900 by using Bluetooth operation of your cell phone. Please refer to operation manual of your cell phone for more information.

AUXILIARY INPUT

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and listen to your external source through the speakers of this system.

1. Place the unit standing up on table, open the rubber dust cover.
2. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable. The SFA900 will switch to AUX mode automatically, the MODE indicator LED lights green.

3. Plug one end into the Aux-in jack on the main unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
4. Turn on the external audio device.
5. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.

Note: Always turn the unit OFF when not in use to prevent draining the internal battery. Don't forget to switch off the power of your external device as well.

CHARGING YOUR SMART PHONE OR PORTABLE DEVICE

This unit features a USB port for charging your portable device (iPod, iPhone, Android phone, etc.) when used with the USB charging cord that came with your device.

Note : To use USB charging function, please fully charge the internal battery before using.

1. Place unit standing up on table, open the rubber dust cover.
2. Plug the standard end of the USB cable (not included) into the USB CHARGING PORT located on the back of the unit. Plug the other end of the cable into the device you wish to charge.
3. Observe the battery charge indicator on your device to make sure the charging process starts normally.
4. Unplug the cable when your device is fully charged.

CAUTION:

Before charging, please refer to the user manual of the device you wish to charge to make sure the charging current requested does not exceed 1A (1000mA). Overloading the charging circuit may damage the unit permanently and void the warranty.

1. The USB charging port of this unit supplies a DC 5V output at 1000mA maximum current to charge your smart phone or portable device battery and it cannot support any other voltage range.
2. Make sure the device you want to charge has a battery charge rating of DC 5V only.
3. The USB port of this unit is designed for smart phone or portable device battery charging only and it cannot support data transfer or connect to computer.
4. Do not connect the USB port of this unit to other external power charger USB ports, it may damage both units and void the warranty.

Note:

- 1.) Some smartphones and portable devices use proprietary USB connections and circuitry, so they may not charge when plugged into the USB port. Please refer to your device user manual before you attempt to charge them.
- 2.) It is normal if the unit gets warm while the USB port is in use and charging your smart phone or portable device.
- 3.) Do not charge your smart phone over 12 hours continuously. Disconnect your smart phone or other portable device from the USB cord once it is fully charged.

FLASHLIGHT

Flashlight

Press the LIGHT button once to turn on the flashlight, , press it again to turn it off.

SOS Signal

Press the SOS button once to turn on flashlight in SOS signal mode, press it again to turn it off.

Note: The Flashlight & SOS power is independant of the Power button.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. Unplug the unit from the electrical power outlet immediately in case of malfunction.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the USB port of power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
No Charging	The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the micro USB jack on the SFA900	Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the micro USB jack on the SFA900
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
	Computer USB port is not functioning.	Make sure your computer power is turned on and try another USB port.
No Sound	Speaker batteries are dead	Recharge the speaker batteries
	Bluetooth speaker is not linked with the cell phone	Go through “Bluetooth Operations” process to link the speakers.
	Speaker placement out of range	Relocate the speaker within Bluetooth operating range
	Volume set too low	Press the Volume+ button to turn the sound level up.
Sound is distorted.	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	<p>If the cell-phone original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.</p> <p>If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.</p>
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower volume.

SPECIFICATIONS

Power Requirement

DC Input DC 5V 500mA (Micro USB)

Built-in 2 X DC 3.7V 2000mAh rechargeable Li-ion Battery

©2014 BRK Brands Inc. All rights reserved. First Alert® is a registered trademark of the First Alert Trust.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A ONLY

This product is manufactured, distributed or sold by SPECTRA MERCHANDISING INTERNATIONAL, INC., official licensee for this product. All right, title and interest to use the "First Alert" logo trademarks and the "First Alert" trade dress are exclusively licensed by BRK Brands, Inc. and are used under license from BRK Brands, Inc.. Please contact SPECTRA's Service Department for questions/comments, warranty, support, or service related to this product.

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants that this product 1) is free from defects in materials and workmanship and 2) conforms to its specifications for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicated copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated
 - b. It has not been subjected to accident, misuse, abuse, improper service usage outside the descriptions and warnings covered within the owner's manual or non-SPECTRA approved modifications
 - c. Claims are made within the warranty period
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA owner's manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the owner's manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it prepaid by insured parcel post or UPS to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so include your name, address, phone number and e-mail address to speed the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$ 30.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by e-mail at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below on the website to enter your information.
<http://www.spectraintl.com/wform.htm>

0514

Printed in China