



 
## LED DIGITAL ALARM CLOCK



### OWNER'S MANUAL MODEL KT3005P

#### SAFETY INSTRUCTION

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

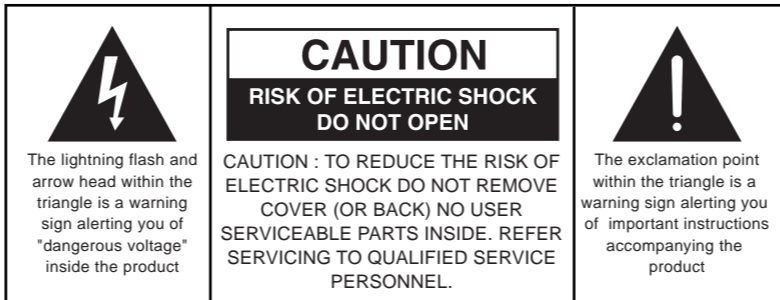

The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product

#### CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product

 
THE IMPORTANT SAFETY INSTRUCTIONS SHALL INCLUDE, AS APPLICABLE TO THE APPLIANCE, STATEMENTS THAT CONVEY TO THE USER THE INFORMATION ITEMIZED IN THIS PARAGRAPH:

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions - All operation and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall ad Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance.
13. Protective Attachment Plug - The appliance is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines - An outdoor antenna should be located away from power lines.



1

16. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No.7-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.

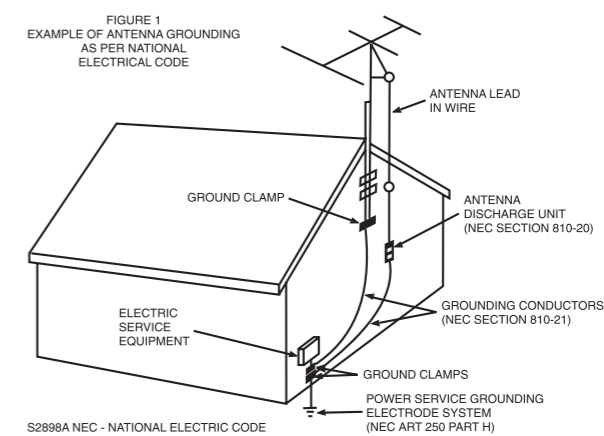

17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has been spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

2


#### WELCOME TO THE WORLD OF HELLO KITTY

 We have taken great care to make sure that your Clock Radio was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years. For future reference, record the serial number in the space provided. The serial number can be found on the bottom of the unit.

Model Number: KT3005P

Serial Number: \_\_\_\_\_


#### LOCATION OF CONTROLS AND INDICATORS

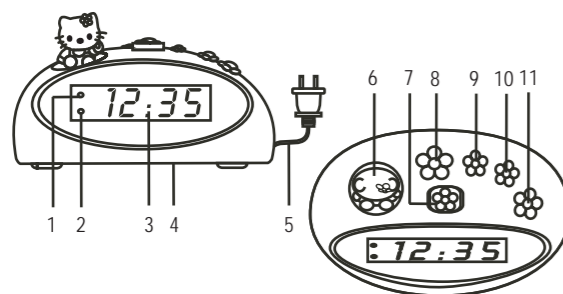

#### SURE-ALARM BATTERY BACK UP SYSTEM

This alarm clock has a Sure-Alarm battery back up system that will maintain the time and alarm settings in the event of a temporary power interruption. In addition the battery can still operate the alarm even if the power is 'Off' at the wake up time.

 Open the battery compartment cover on the bottom of the cabinet and attach a 9 volt battery, (not included) to the battery terminal. It can only be attached one way. Use an alkaline battery for longest life. Push the battery into the compartment and close the cover.



If the power is interrupted the display goes 'Off'. However, the battery will maintain the time and alarm settings, and when the power is restored the display will come on again and the time and alarm settings will be correct.

If there is no battery, or a dead battery, in the battery compartment and the power is interrupted, the clock and alarm settings will be lost. When the power is restored the clock display will be flashing. This indicates that the time display is incorrect and that both the time and alarm time must be reset.


A fresh 9 volt alkaline battery should last for at least one year, but this depends on the number and duration of the power interruptions you experience. For best performance we recommend that you install a new battery every 12 months

3

#### POWER SUPPLY

 This alarm clock is designed to operate on 120V 60 Hz AC house current only. It should be connected to an AC outlet that is always "live". Do not connect it to an outlet that is controlled by a wall switch.

This unit has a polarized AC plug with one wide blade and one narrow blade. This plug will only fit into a matching polarized AC outlet. This is a safety feature to reduce the possibility of electric shock. If this plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified, licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.



#### SETTING THE TIME

After installing the back up battery, unwind the AC cord completely and connect the plug to your AC outlet. The display will show "12:00" and begin to flash.

1. Depress the TIME and HOUR buttons to adjust the hours. Release the buttons when the correct hour appears on the display.
 

NOTE: Be sure to observe the AM indicator when adjusting the hours. If the AM indicator is 'On' the hour displayed is AM. If the AM indicator is 'Off', the hour displayed is PM.
2. Depress the TIME and MINUTE buttons to adjust the minutes. Release the buttons when the correct minute appears on the display.

#### SETTING THE WAKE-UP TIME

1. Depress the ALARM / RESET and HOUR buttons to adjust the hours. Release the buttons when the correct wake-up hour appears on the display.
 

NOTE: Be sure to observe the AM indicator when adjusting the hours. If the AM indicator is 'On' the hour displayed is AM. If the AM indicator is 'Off', the hour displayed is PM.
2. Depress the ALARM / RESET and MINUTE buttons to adjust the minutes. Release the buttons when the correct wake-up minute appears on the display.

#### SETTING THE ALARM

1. Depress the ALARM / RESET button to check the wake-up time setting. When the button is depressed the display will change from the actual time to the wake-up time. Adjust the wake-up time setting if necessary.
2. Set the Alarm ON / OFF switch to the ON position. The ALM (Alarm On) Indicator appears in the display.
3. At the selected wake up time the electronic 'buzzer' comes on. It will continue for one hour and 59 minutes and then shut itself off automatically, and reset itself for the following day.
4. To stop the buzzer immediately, press the ALARM / RESET button. The buzzer stops and the alarm resets itself for the following day.
5. To shut the alarm off completely set the alarm ON / OFF switch to the OFF position.

#### SNOOZE / REPEAT ALARM

If you need a few extra minutes sleep after the buzzer comes on, press the SNOOZE button. The buzzer stops for approximately 9 minutes and then it starts again. The Snooze operation can be repeated several times if necessary.

4

#### CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Do not drop your unit or subject it to strong impacts.
3. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
4. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
5. This manual should be kept for future reference since it contains important information.

#### COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Radio Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

#### SERVICE

Please refer to the instructions on the enclosed warranty card for returning your unit for service. When returning the unit, please remove batteries to prevent damage to the unit in transit and/or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

Distributed by:  
Spectra Merchandising International, Inc.  
Chicago Industry Tech Park  
4230 North Normandy Avenue  
Chicago, IL60634, U.S.A.

Please have model number ready, for Customer Service, call 1-800-777-5331

809-3005000-120R

Printed in China

5