



★ ★ ★ ★ ★ **HELLO KITTY** ★ ★ ★ ★ ★

© 1976, 2012 SANRIO CO., LTD.

1800 Watt Hair Dryer



USER MANUAL

KT3052

WARNING: This is an electric appliance – not a toy!
To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it. Not appropriate for use by children 12 years of age and younger.

WELCOME

Welcome to the world of Hello Kitty. This Hello Kitty hair dryer under license from Sanrio Company Ltd. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER - As with most electrical appliance, electrical parts are electrically live even when switch is off:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to person:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operated this appliance if it has a damaged cord or plug, if it is not working properly, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with appliance.
11. Do not direct hot hair toward eyes or other heat sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.

SAVE THESE INSTRUCTIONS

HOW TO GET THE BEST STYLING RESULTS

1. Shampoo and rinse your hair thoroughly. If you use a conditioner make sure that no residue of shampoo or conditioner remains in your hair. This will leave your hair looking dull.
2. To maximize your hair's natural shine, rinse you hair in cool water.
3. Pat your hair gently with a towel, and then tough dry to remove excess moisture.
4. Comb your hair with a wide toothed comb or a special de-tangling brush to remove tangles before styling.
5. Remember that no hair dryer can correct a bad haircut. A great style begins with a great cut. Visit a qualified hair stylist regularly.

USING THE DRYER

While your hair is still damp, follow the chart below to select the proper speed and temperature settings for your particular type of hair.

FAN SPEED SWITCH

Switch	Fan Speed	Temperature
OFF	OFF	OFF
LOW	SLOW	LOW
HIGH	FAST	HIGH

COOL SHOT BUTTON

Your hair dryer has a cool shot button to lock in style. When styling your hair, press and hold the cool shot button for a few seconds and the "cool air" flow will lock in your hair setting.

1. Air concentrator
2. Cool shot button
3. Fan speed switch
HIGH
LOW
OFF
4. Hanger



ATTACHMENT:

Air concentrator-Directs airflow accurately for all types of styling. Use with a brush and blow dry in sections. Direct airflow down to the roots of hair for a smooth style, ensuring you do not over dry the ends. The concentrator can be turned 360° to direct the airflow wherever you need it. You may also remove it from the dryer for a wider airflow.

CAUTION

Never allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the hair dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord of the hair dryer is damaged or does not operate properly, return it for repair or replacement. This hair dryer has no user serviceable parts. No repairs should be attempted by the user.

CARE AND STORAGE

1. Always unplug your unit before cleaning. Clean it with a dry cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Regularly clean all the air openings of the unit to ensure a clear airflow so as to prevent overheating.
4. When not in use, your hair dryer should be disconnected and stored in a safe, dry location, out of reach of children.
5. Do not wrap the line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the hair dryer.

TECHNICAL INFORMATION

Power Source: 220-240V ~50 Hz
Power Consumption : 1800W