

JENSEN®

DOCKING STEREO SPEAKER FOR iPod AND iPhone



USER MANUAL

JiSS-10i

(iPod/iPhone Not Included)

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: JiSS-10i

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. The system has an AC plug and will only fit into matching AC outlets. This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your AC outlets, you should have the outlet changed by qualified licensed electrician. Do not use an adaptor to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.
11. Only use attachments / accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
16. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

17. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
18. Caution marking and nameplate are located on bottom of product.

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibration.
- Dusty, humid or moist places.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE


This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

PRODUCT FEATURES

The JiSS-10i is an iPod / iPhone Docking Music System with incorporates the following features:

- Player / Charger for iPhone, iPod nano, iPod touch, iPod classic, and iPod (5th generation)
- Auxiliary input jack
- Enhanced functions in JiSS-10i App: FM stereo tuner, Date, Weather, Alarm clock with snooze function, Wake to iPod/iPhone, radio or alarm.

LOCATION OF CONTROLS

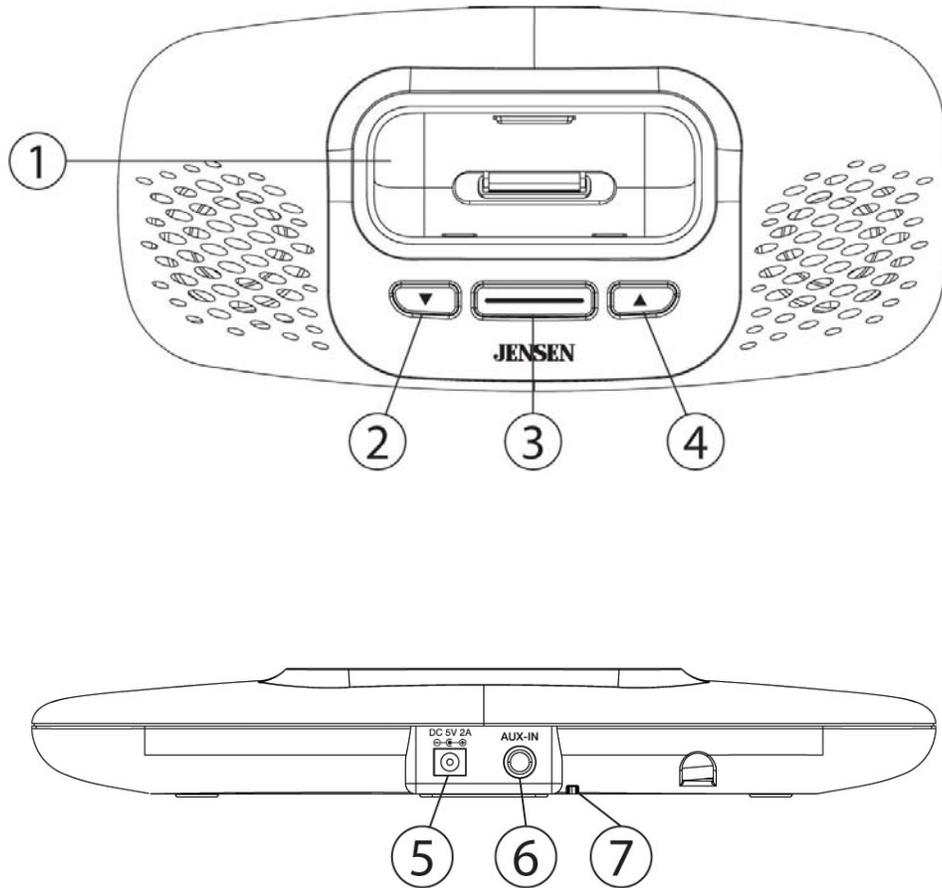

1. iPod/iPhone Dock
2. Volume/Tuning Down Button
3. Multiple Function Button: A.) POWER ON/OFF Button
B.) Play/Pause Button in iPhone/iPod mode
C.) Snooze Button for alarm (Only with App)
4. Volume/Tuning Up Button
5. DC INPUT JACK
6. AUX-IN JACK
7. FM Wire Antenna

INSTALLATION

CONNECTING THE AC POWER

An AC-DC Adaptor with the output DC5V 2000mA (included) is required for operating the main unit. Plug in the AC-DC Adaptor by:

- 1.) Firmly and securely inserting the DC plug side of the adaptor into the DC Jack on the back of unit
- 2.) Plug the Adaptor plug into an outlet rated at 120V AC~ 60Hz.

NOTES:

1. Make sure you dock your Apple device prior to turning the power on. If you turn on the power without having an Apple device docked, the FM radio will be heard. See the “FM Radio Operation (without Apple Device)” section below for more information on using the FM scan radio.
2. This unit is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

LISTENING TO iPod/iPhone

CONNECTING

Before docking any iPod model in the docking bay of the system, please select the proper adaptor for your particular iPod model. The iPod adaptor included with this model is for the iPod Classic 160GB, but it should also work with other models too. If the included adaptor does not fit your iPod, you can still use the dock without an adaptor or use the original adaptor included with your iPod instead by inserting it into the docking area. No adaptor is required if you use an iPhone.

- 1.) Your iPod/iPhone can now be inserted into the docking bay by placing the connector on the bottom of the iPod/iPhone onto the connector in the docking bay.

Note: Please be careful when attaching the iPod/iPhone onto the docking connector to avoid damaging the 30-pin connector on the iPod/iPhone or in the docking bay. Never force the iPod/iPhone onto the connector.

- 2.) Once docked, wait a few seconds to let unit communicate with your iPod/iPhone. Press the POWER ON/OFF button to turn on the unit and the blue LED on the front will light.

Note: With the power off, if your iPod/iPhone is playing a track while it is being docked, it will automatically turn on the unit power and continue playing the same track through the speakers.

- 3.) Press the PLAY/PAUSE button to start or pause iPod/iPhone playback.

Note: If you turn on the unit before the iPod/iPhone is docked, the Play/Pause button

will not function and you must use your iPod/iPhone Play/Pause control instead. It is recommended to always turn off the unit before docking your iPod/iPhone.

- 4.) Adjust the sound level by pressing the VOLUME UP/DOWN buttons on the top of the unit.
- 5.) The iPod/iPhone charges even during playback.
- 6.) Press and hold the POWER ON/OFF button to turn off the unit when you finish listening. Blue LED goes off.

iPhone/iPod playback control:

Use the iPod/iPhone's screen controls PLAY/PAUSE, Skip/Fast Forward and Backward.

Note: If you plug a 3.5mm cable into AUX IN jack, the unit will automatically switch to AUX IN mode. You have to turn on the unit power again if you want to listen to your iPod/iPhone after remove the AUX IN cable.

AUXILIARY INPUT

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and older, non-dockable iPods (except iPod shuffle 3rd gen) and listen to them through the speakers of this unit.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the AUX-IN jack on the back of main unit and plug the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. The unit should turn on automatically when you plug in the cable. If it doesn't, press the Power ON/OFF button to turn on the unit, blue LED lights.
4. Turn on the external audio device and select a music track to play.
5. The volume level can now be controlled through the VOLUME UP/DOWN buttons on the main unit. All other functions are operated from the auxiliary device as usual.

Notes:

- (1) If you connected the Line Out Jack of your external device then you only need to adjust the volume control of this system. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control on your external device and the volume control on this unit to find the most desirable volume setting.
- (2) Press and hold the POWER ON/OFF button to turn off the unit when you finish listening. Don't forget to switch off the power on your external device as well.

FM RADIO OPERATION (WITHOUT APPLE DEVICE)

Note: The FM scan radio can be used without having an Apple device docked in the JiSS-10i.

To operate the FM scan radio:

1. Make sure no Apple device is docked in the JiSS-10i.
2. Press the Center "Power" button and the blue power LED will light. Static or an FM station will be heard through the speaker.
3. Press and hold the center "Power" button and at the same time tap either the left (down) button or right (up) button to tune down or up the FM frequency band.
4. The scanner will automatically stop on the next strongest FM station.
5. Continue to tap the left or right buttons until you get to a station you want to listen to, release the center button.
6. The left (down) button and right (up) button can now be used to adjust the volume down or up.

Note: Using the Free App on your iPhone or iPod touch will allow you greater control when using the FM radio. You can search by station frequency and also save your favorite stations in memory for easy access.

Hints for the Best Reception

To obtain the best FM reception, unwrap and fully extend the FM Antenna and adjust its direction.

FM RADIO OPERATION (ONLY AVAILABLE USING THE APP)

Note: The FM scan radio be used with the Free App is installed on your iPhone/iPod touch. Please refer to App operation manual for more information on using the FM Radio feature of the App.

Hints for the Best Reception

To obtain the best FM reception, unwrap and fully extend the FM Antenna and adjust its direction.

ALARM OPERATIONS (ONLY AVAILABLE USING THE APP)

Notes: 1. The Alarm feature can only be used if the Free App is installed on your iPhone or iPod touch. Please refer to App operation manual for more information on using the Alarm feature of the App.

2. When the alarm is sounding, all buttons on the main unit will be disabled except for the POWER/SNOOZE button.

SNOOZE FUNCTION

Press the SNOOZE button once to temporarily stop the wake alarm. The snooze function can be repeated again, but only if it's within one hour from the initial alarm time. Please refer to App operation manual for details.

USING THE ENHANCED FUNCTIONS OF JiSS-10i APP

The JENSEN JiSS-10i App is a free download from Apple App Store and it provides handy enhanced features such as; FM stereo tuner, time & calendar, alarm clock, wake to alarm, radio or music player.

From the Apple App Store, search for “Jensen JiSS-10i” and download the Free App to you iPhone or iPod touch. Once installed tap on the “JiSS-10i” icon to launce the App. Please check the App Store regularly for new updates.

Note: When the App is running, all controls will be available on the App screen.

For details of JENSEN JiSS-10i App, please refer to the separate instruction sheet.

RESETTING

If the unit is not responding or operating erratically, it may need to be reset. Disconnect the main power and wait three minutes before connecting the main power again. This should resolve the problem.

CARE AND MAINTENANCE

1. Avoid operating this unit in direct sunlight or in hot, humid or dusty places.
2. Keep this unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. For better Clock Display clarity, avoid operating this unit under direct sunlight or in rooms with strong illumination.
4. Unplug this unit from the electrical power outlet immediately in case of malfunction.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect this unit from the AC power source when cleaning.
- The finish on this unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
The unit does not respond (no power).	AC Adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
iPod/iPhone does not respond to the speaker system.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseal it on the dock.
	Your iPod/iPhone is locked up.	Please make sure that your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for info on resetting the iPod/iPhone.
iPod/iPhone does not charge up.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseal it in the dock.
	iPod/iPhone is locked up/ frozen. iPod/iPhone battery has problem.	Please make sure your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for details on resetting.
FM no function	JiSS-10i App not installed on your iPhone/iPod touch	Search the App Store for Jensen JiSS-10i, download and install the free app.
	iPhone/iPod touch App not running	Tap the "JiSS-10i" app icon to launch the app on your iPhone/iPod touch and select navigate to the "Radio" screen.
FM reception is weak	FM antenna wire is not fully extended.	Extend or rotate the wire antenna for best reception.
Sound is distorted.	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	If the iPod/iPhone original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD. If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.
Unit gets warm after playing for an extended time at high volume.	This is normal.	Turn the unit off for a period of time or lower volume.

SPECIFICATIONS

Power Requirement

Main unit

AC-DC Adaptor Input: 120 V~ 60HZ

Output: 5V  2000mA 

Frequency Range

Radio Band

FM 87.5 - 108 MHz, 0.1 MHz tuning step

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod and iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

**90 DAY LIMITED WARRANTY AND SERVICE
VALID IN THE U.S.A ONLY**

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$20.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>

Printed in China