

JENSEN®

Universal Docking Station with RF Wireless Speakers for iPod



USER MANUAL

JiSS-585

(iPod® Not Included)

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



Customer's Record:

The serial number of this product is found on the unit. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: JiSS-585

Serial Number: _____

WARNING

- Do not throw the product into fire to avoid danger of explosion.
- Do not immerse into water or get soaked since the battery charging function will be lost.
- Place the product far away from heat sources, and protect the product from direct sunlight.
- Do not use the product where electric appliances are prohibited.
- Protect the product from violent impact and vibrations.
- No compensation responsibility for malfunctions caused by improper use.
- Do not attempt to disassemble or alter any part of the unit that is not expressly described in this guide. Internal inspections, alternations and repairs should be conducted by qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture

The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a set basement.

2. Ventilation

This unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

3. Heat

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

4. Power Source

The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

5. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into a DC outlet.

6. Cleaning

The unit should be cleaned properly with care.

7. Objects and Liquid Entry

Care should be taken so that objects do not fall and liquids are not spilled into any opening or vents located on the product.

8. Attachments

Do not use attachment not recommended by the product manufacturer.

9. Lightning and Power Surge Protection

Unplug the unit from the wall outlet and disconnect the periods of time. This will prevent damage to the product due to lightning and power-line surges.

10. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electrical shock.

11. Damage Requiring Service

This unit should be serviced by qualified service personnel when:

- A. The power supply cord or plug has been damaged.
- B. Objects have fallen into or fluid has been spilled into the enclosure.
- C. The unit has been exposed to rain.
- D. The unit has been dropped or the enclosure damaged.
- E. The unit exhibits a marked change in performance or does not operate normally.

12. Periods of Nonuse

If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.

13. Servicing

The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instruction should be referred to qualified service personnel.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

POWER SOURCES

1. Power of Main Base

The main base is operated by AC power.

AC adaptor Input: 120V ~ 60Hz

 Output: 9V  1500mA

Power installation: Insert the AC adaptor plug into DC Jack at the rear side of base.

 
2. Power of Individual Speaker

Each speaker has 1 built-in rechargeable lithium battery for independent playback. Before the first use, we recommend to charge each speaker for 4 hours. When speaker is placed on the powered base (Power ON/OFF switch turns to blue), charging will start automatically. The charging LED indicator is in red color during charging, and will turn green afterwards.

3. Power of Remote Control

To use the remote control, please ensure the remote control battery CR2025 (included) is installed properly. Replace the remote control battery when it stops working. It is highly recommended to use a good quality button cell.

Note: Room lighting and battery life can affect the operating range of remote control.

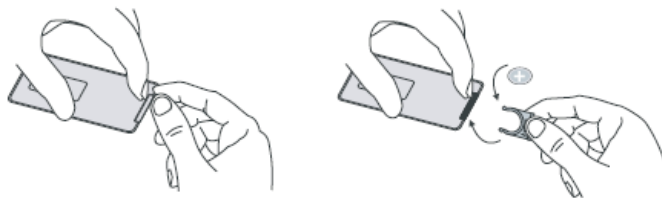

ACCESSORIES

 
Please see below items are included in the package:

1. AC Adaptor
2. AUX in Cord (3.5mm)
3. Remote Control (include button cell CR2025)
4. User Manuals (English and Spanish)
5. Warranty Card

LOCATION OF CONTROL


1. Base (Top View)

- A1. VOL-
- A2. POWER ON/OFF
- A3. VOL+

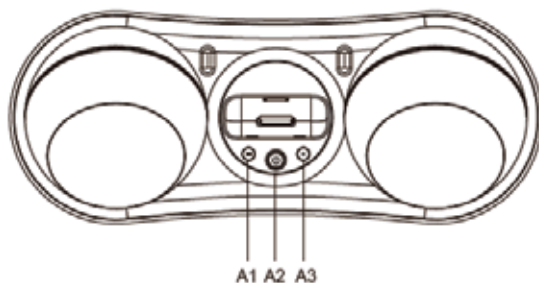

2. Base (Rear View)

 - B1. AUX in jack
- B2. DC power jack(9.0V \equiv 1.5A)
- B3. CH1、CH2、CH3 (For wireless channel switch)

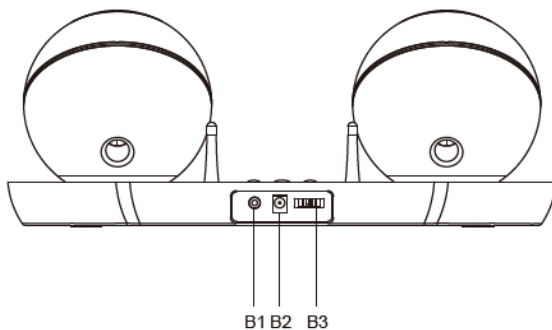


3. Speaker Unit

  
C1. POWER ON/OFF and VOL-/+





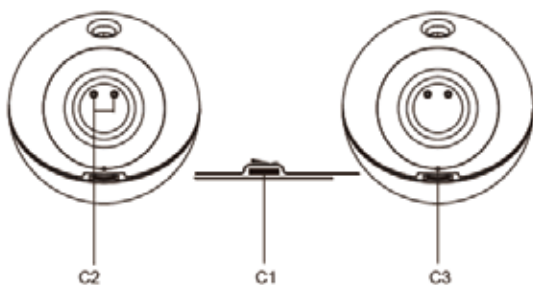



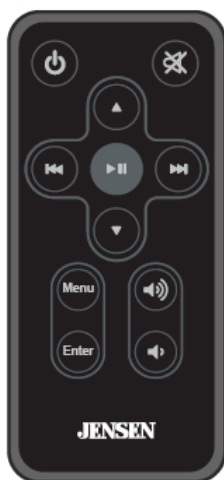


C2. Charging pins

C3. Charging LED indicator



4. Remote Control



 
-  Power on/off
-  Mute
-  Menu up
-  Menu down
-  Skip backward
-  Skip forward
-  Play/pause
-  Menu Go to the menu
-  Enter Enter the selected option
-  Increase volume
-  Decrease volume

GENERAL OPERATION

1. Select a proper docking adaptor (enclosed when purchase an iPod) and place it into the base, then dock your iPod gently.



2. Plug the AC adaptor plug into DC power Jack at the rear side of base.

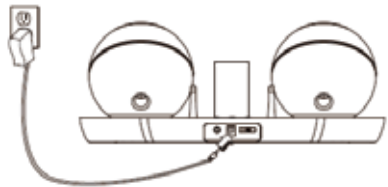

3. Press the power button on the base or remote control to turn the unit on. Switch on the speakers to play your iPod. Choose the best channel through the “Channel” button at the rear of the base until the speakers receive the right signal.
4. Press ‘Vol+’ or ‘Vol-’ to choose a proper volume level, then you should now be able to take the speakers freely from room to room without disruption (Subject to its surroundings, approximately 100 feet in the open area without any interference).
5. If using iPod shuffle or other audio source with 3.5 mm headphone output jack, connect it to the AUX line in jack on the rear of base. (AUX in will not work when an iPod is docked)
6. Press the power button on the base or remote control to turn off the unit.

TROUBLESHOOTING GUIDE

Should you experience difficulties in the use of this player, please refer to the following chart or call 1-800-777-5331 for Customer Service.

Symptom	Possible problem	Solution
The base does not switch on (no power)	AC adaptor is not plugged into a wall outlet or the connector is not plugged into the DC jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the DC jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
	Using no/wrong iPod cradle.	Make sure the dock cradle is the proper fit for your iPod.
iPod does not respond to the speaker system	iPod is not installed properly.	Remove your iPod from the dock and check for any obstruction on the connectors in the docking and on your iPod. Then reseal it in the dock.
	Your iPod is locked up.	Please make sure that your iPod is

		working properly before docking into the unit.
iPod does not charge up	iPod is not installed properly.	Remove your iPod from the dock and check for any obstruction on the connectors in the docking and on your iPod. Then reseal it in the dock.
	iPod battery has problem.	Please make sure your iPod is working properly before docking into the unit.
Speakers do not play the sound from docked device	Speakers receive signal from other devices, or the other set of JiSS-585	Slide the channel switch to select another channel. Place the unit to a location where receive lesser external signal.
Sound is cut off or noisy	The unit experiences interference	Move the channel switch from one channel to the other channel (3 for selection) at the rear of base for the best reception. Do not turn on other wireless devices simultaneously.
Sound is distorted	Sound source is distorted.	If the source is iPod, try to check the sound at personal computer before putting into the iPod. If you are using an external sound source like digital audio player, try reducing the output volume on the device itself. Also try turning bass boost OFF or change the EQ setting.
	Volume level is set too high.	Decrease the volume.

The specification and external appearance of the set are subjected to change without prior notice. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

SPECIFICATIONS

Power Supply

Power adaptor (included): Input AC 120V ~ 60Hz

Output DC 9V $\overline{\text{---}}$ 1500mA

Power of remote control: 1 x DC 3V CR2025 button cell (included)

Frequency

RF Channel Transmission: 915.0MHz (Channel 1)

914.5MHz (Channel 2)

914.0MHz (Channel 3)

SERVICE

Please refer to the instructions on the enclosed warranty card for returning your unit for service.

When returning the unit, please remove batteries to prevent damage to the unit in transit and/or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

Distributed by:

Spectra Merchandising International, Inc.

Chicago Industry Tech Park

4230 North Normandy Avenue

Chicago, IL60634, U.S.A.

Please have model number ready, for Customer Service, call 1-800-777-5331

Printed in China