



# WALKIE TALKIE

Thank you for purchasing the  
M&M's Walkie Talkie

Model#: M9WT1

©/™ M&M's the letter M and M&M's characters are registered trademarks of Mars, Incorporated and its affiliates.  
Manufactured and distributed under licensed by Brands Unlimited, LLC™, Ridgfield, NJ 07657. ©Mars, Inc. 2011 www.mms.com

### BATTERY INFORMATION:

1. Replacement of batteries must be done by a Adult.
2. Do not mix old and new batteries.
3. Do not mix Alkaline and standard(Carbon-zinc) or rechargeable(Nickel-cadmium) batteries.
4. Do not use rechargeable batteries.
5. The supply terminals are not to be short-circuited.
6. Do not recharge batteries not intended to be recharged.
7. Exhausted batteries are to be removed from toy.
8. Only batteries of equivalent type are to be used.
9. Batteries are to be inserted with the correct polarity.
10. Remove batteries when not in use or discharged.

### USING THE MORSE CODE FUNCTION:

1. For transmitting a signal, turn the transceiver by rotating the **On/Off Volume** control past click.
2. While pushing the **Push-To-Talk** button, press in the **Morse Code** button momentarily and release for desired signals.
3. For receiving a signal, adjust **Volume** control for normal listening level.
4. When back to voice communications again, use normal push-to-talk operation.

### OPERATING YOUR TRANSCIVER:


1. Remove screw, open battery door and snap in a 9 Volt battery.
2. Turn the transceiver by rotating the **On/Off Volume** control past click. Your transceiver is now ready to operate.
3. Press the **Push-To-Talk** button for transmitting.
4. Release the **Push-To-Talk** button for receiving.
5. When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
6. Best transmission and reception are obtained when the antenna is held in a vertical position.

### CAUTION:

1. Your Transceiver Set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing the batteries.
2. When the sound becomes weak, it is time to change the batteries.
3. After use, always return the **On/Off Volume** control to the **OFF** position.
4. Keep your set in a dry and clean place.

Morse code is a way of transmitting information, using sequences of short and long signals known as 'dots and dashes' - which represent letters, numerals, punctuation etc. A dot is a quick beep (press the button and release quickly) and a dash is a longer beep (hold the button down for longer).

A	•••••	J	•••••	S	•••••	1	•••••	6	•••••
B	•••••	K	•••••	T	•••••	2	•••••	7	•••••
C	•••••	L	•••••	U	•••••	3	•••••	8	•••••
D	•••••	M	•••••	V	•••••	4	•••••	9	•••••
E	•••••	N	•••••	W	•••••	5	•••••	0	•••••
F	•••••	O	•••••	X	•••••				
G	•••••	P	•••••	Y	•••••				
H	•••••	Q	•••••	Z	•••••				
I	•••••	R	•••••						

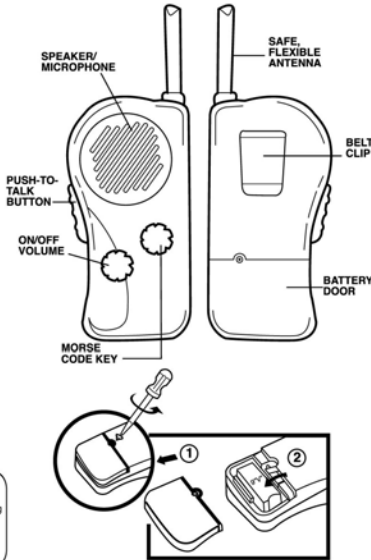

FCC ID : YG8EA-218

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$7.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectrainc.com](mailto:custserv@spectrainc.com) for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.

4230 North Normandy Avenue,

Chicago, IL 60634, USA.

1-800-777-5331

To register your product, visit the link below to enter your information.

<http://www.spectrainc.com/wform.htm>

Printed in China

PRINTED IN CHINA