

Studebaker

# Portable Bluetooth AM/FM Radio

SB2003BT USER MANUAL

 


Please read this Instruction Manual carefully before using the unit and retain it for future reference

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



**CAUTION:**  
TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT THE PLUG TO MAIN POWER SOCKET.

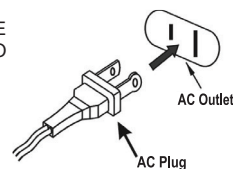

## SAVE THESE INSTRUCTIONS

### COMPLIANCE WITH FCC REGULATIONS

FCC ID: 2ACM4R3972T

This equipment has been tested and found to comply with the limits for a radio receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

E - 3

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

|                                                                                                                                                                                                                                                                                        |                                                                                                                                                                        |                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                        | <b>CAUTION</b><br><b>RISK OF ELECTRIC SHOCK</b><br><b>DO NOT OPEN</b>                                                                                                  |                                                                                                                                                                                                                         |
| <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> | <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |

The Caution Marking is located at the bottom enclosure of the apparatus.  
The Rating plate is located at the bottom enclosure of the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.



E - 1

### PROTECT YOUR FURNITURE

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

### DEAR STUDEBAKER CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

#### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

#### Once you have established a comfortable sound level:

- Set the dial and leave it there.
- Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

#### We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



#### Customer's Record:

The serial number of this product is found on its bottom. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SB2003BT

 
Serial Number: \_\_\_\_\_

E - 4

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. The (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Excessive sound pressure from earphones and headphone can cause hearing loss.
25. Minimum distances of 10 cm around the apparatus for sufficient ventilation.
26. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
27. No naked flame sources, such as lighted candles, should be placed on the apparatus.
28. The use of apparatus in moderate climates.
29. Attention should be drawn to the environmental aspects of battery disposal.
30. CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
31. High or low extreme temperatures that a battery cannot be subjected to during use, storage or transportation and low air pressure at high altitude.
32. Replacement of a battery with an incorrect type that can defeat a safeguard.
33. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
34. Leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

E - 2


### LOCATION OF CONTROLS

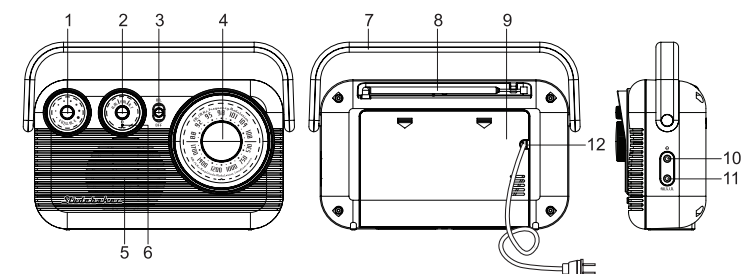

|   |                                     |    |                                    |
|---|-------------------------------------|----|------------------------------------|
| 1 | VOLUME CONTROL                      | 7  | FOLDABLE CARRYING HANDLE           |
| 2 | FUNCTION SELECTOR (AM/FM/BLUETOOTH) | 8  | FM TELESCOPIC ANTENNA              |
| 3 | ON/OFF SWITCH                       | 9  | BATTERY AND POWER CORD COMPARTMENT |
| 4 | TUNING KNOB                         | 10 | HEADPHONE JACK                     |
| 5 | SPEAKER                             | 11 | AUX IN JACK                        |
| 6 | BLUETOOTH INDICATOR                 | 12 | POWER CORD                         |


E - 5

## POWER SUPPLY

 The SB2003BT can be operated from the following power sources:  
 AC: 120V ~ 60Hz  
 DC: 4 x 1.5V , battery type R14/ UM-2/ "C" size (not included)

### CONNECTING TO AC POWER AND INSTALLING BATTERIES

 1. Insert the plug of Power Cord into a standard wall outlet with a constant AC power supply.
2. Install 4 fresh alkaline batteries into the battery compartment following the polarity diagram inside. Use only the specified size and type of batteries. To open the battery door, press on the arrows firmly and then slide downward.

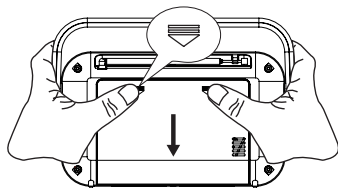

### IMPORTANT:

- Be sure that the batteries are installed correctly. Wrong polarity may cause permanent damage to the unit.
- For best performance and longer operating time, we recommend the use of alkaline batteries.
- If the unit is not to be used for an extended period of time, remove all the batteries. Old or leaking battery can cause damage to the unit and will also void the warranty.
- Do not dispose of battery in fire. Battery may leak or explode.
- Battery shall not be exposed to excessive heat, such as sunshine, fire or the like.

### CAUTION:

Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

### Note:

When the unit is plugged into an AC outlet, it automatically switches to AC power source even if batteries are installed.

E - 6

## AUX IN OPERATION


This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players, smart phones and iPods (except iPod shuffle 3rd generation) to listen to your external source through the speakers of this system.

1. You need an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end of the cable into the AUX-IN jack (#11) located on the right hand side of the unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the external audio device.
4. Turn on your unit and it will switch to AUX mode automatically.
5. The volume level can now be controlled through the volume control of your radio. Operate all other functions on the auxiliary device as usual.
6. Switch the ON/OFF SWITCH (#3) to OFF position to turn off the unit when you finish listening.

### Notes:

- If you connected the Line-out Jack of your external device then you only need to adjust the volume control of this unit. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.
- Remove the audio cable from AUX IN jack (#11) when you finish listening. Don't forget to switch off the power on your external device as well.

## SPECIFICATIONS

**POWER SUPPLY:** AC - 120V ~ 60Hz, 6W  
 DC - 4 x 1.5V , battery type R14/ UM-2/ "C" size batteries (not included)

**FREQUENCY RANGE:** FM 88 - 108 MHz  
 AM 530 - 1700 KHz

### BLUETOOTH

Bluetooth Version: V5.0+EDR  
 Bluetooth: 2.402-2.48GHz  
 RF Output Power: +2 dBm  
 Working Distance: Up to 10 meters (32.8 feet) measured in open space (wall and structures may affect range of device).

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.

E - 9

## LISTENING TO THE RADIO



1. Use the FUNCTION SELECTOR (#2) to select the AM or FM band.
2. Switch the ON/OFF SWITCH (#3) to ON position to turn on the unit.
3. Use the TUNING KNOB (#4) to tune to your desired radio station.
4. Adjust the VOLUME CONTROL (#1) to the desired volume level.
5. Switch the ON/OFF SWITCH (#3) to OFF position to turn off the unit when you finish listening.

### TIPS FOR BEST RECEPTION:

AM - The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of unit until the internal antenna picks up the strongest signal.  
 FM - To ensure maximum FM tuner reception, fully extend the FM TELESCOPIC ANTENNA (#8) and rotate it for the best FM radio reception.

## BLUETOOTH OPERATION

### Pairing a Bluetooth enabled device with the SB2003BT.

1. Use the FUNCTION SELECTOR (#2) to select the Bluetooth function.
2. Switch the ON/OFF SWITCH (#3) to ON position to turn on the unit.
3. The BLUETOOTH  INDICATOR (#6) below the FUNCTION SELECTOR (#2) will turn on and flash.
4. Turn on the Bluetooth function of your device and enable the search or scan function to find the SB2003BT.
5. Select SB2003BT from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) SB2003BT with your device.
6. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the SB2003BT as your computer's default sound device.
7. After pairing SB2003BT with your Bluetooth device successfully, the BLUETOOTH INDICATOR (#6) will light steadily.
8. If you want to change the SB2003BT to pair with another Bluetooth device, turn off the Bluetooth on the paired Bluetooth device, the BLUETOOTH  INDICATOR (#6) of SB2003BT will change to flashing slow, repeat step 4-5 above.

Note: The SB2003BT may automatically reconnect to a previously linked device that is in range.

E - 7

## TROUBLESHOOTING GUIDE

If you experience difficulties in the use of this music system, please check the following or call 1-800-777-5331 for Customer Service.

| Symptom                                         | Possible Cause                                                                                                                                | Solution                                                                                                                                                                                                                                                        |
|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Noise or sound distorted on AM or FM broadcast. | - Station not tuned properly for AM or FM.<br>- FM: Telescopic antenna is not extended.<br>- AM: The bar antenna is not positioned correctly. | - Retune the AM or FM broadcast station.<br>- Fully extend the FM telescopic antenna.<br>- Reposition the unit until the best reception is obtained.                                                                                                            |
| AM or FM no sound.                              | - Unit not set to AM or FM band.<br>- Volume at minimum.                                                                                      | - Switch the function selector to AM or FM position.<br>- Increase Volume.                                                                                                                                                                                      |
| No sound on Bluetooth                           | - The unit is not linked with the cell phone.<br>- Speaker placement out of range.<br>- Volume set too low.                                   | - Go through "Bluetooth Operations" process to link the speakers.<br>- Relocate the speaker within Bluetooth operating range.<br>- Rotate the volume knob to turn the sound level up.                                                                           |
| Sound is distorted on Bluetooth                 | - Volume level is set too high.<br>- Sound source is distorted.                                                                               | - If the cell-phone original sound source quality is poor, distortion and noise are easily noticed with high-power speakers.<br>- If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. |

E - 10

### Now you can play music from your Bluetooth device wirelessly to SB2003BT.

1. Selecting your favorite song, press Play/Pause Button on your Bluetooth device to play or pause the Bluetooth device playback.
2. Slowly adjust both the volume controls of your SB2003BT and your Bluetooth device until you reach a comfortable listening level.

### Notes:

1. Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
2. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
3. Remember to turn off the SB2003BT when you have finished listening.
4. Don't forget to switch off the power of your Bluetooth device as well.

## USING HEADPHONES (NOT INCLUDED)

Inserting the plug of your headphones into the HEADPHONES JACK (#10) will enable you to listen to the Radio music in private. When using headphones, the Built-in Speakers will be disconnected.

### CAUTION:

- Avoid excessive volume levels for long period of time when using the earphones. Prolonged use at high levels may impair your hearing.
- Keep the volume at a reasonable level even if your headset is an open-air type designed to allow you to hear outside sounds. Please note that excessively high volume may still block outside sounds.

E - 8

## 1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectrainl.com](mailto:custserv@spectrainl.com) for updated information on the unit requiring service. In some cases, the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
 4230 North Normandy Avenue,  
 Chicago, IL60634, USA.  
 1-800-777-5331

To register your product, visit the link on the website below to enter your information.  
<http://www.spectrainl.com/wform.htm>

0222

Printed in China  
 (SB2003BTBG/RB/RG/TE)

E - 11