

First Alert[®]

WIRELESS OBJECT AND KEY FINDER



**USER MANUAL
SFA200**

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

Follow the advice below for safe operations

- This product is intended solely for non-commercial & non-industrial use. Do not use for any other purpose.
- Do not immerse in water/liquid.
- Do not press the Function Buttons with a ball point pen or any other pointed object.
- Do not expose the product to direct sunlight for extended periods.
- To avoid damage to internal circuitry, do not expose the product to excessive humidity or dust.
- Do not drop the product or subject it to a strong impact.
- Do not twist or bend.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stands for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

 
PRODUCT FEATURES

- 1 x Transmitter
- 4 x Receivers
- Operates on 433 Mhz


The SFA200 will help you find up to 4 items within 145 feet of the transmitter (open area).

LOCATION OF CONTROLS

Transmitter

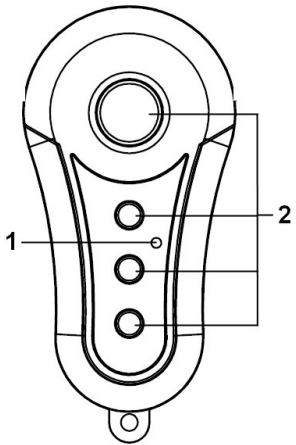

Receiver

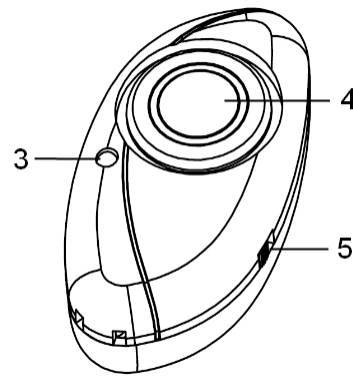 

- | | |
|-----------------------------|-----------------------|
| 1 TRANSMITTER LED INDICATOR | 4 COLOR CODED MARKING |
| 2 COLOR CODED BUTTONS | 5 ON/OFF SWITCH |
| 3 RECEIVER LED INDICATOR | |

GETTING STARTED

Power Supply :

- Transmitter : Powered using 1 x DC 3V CR1632 lithium button cell battery (included).
- Receiver : Each receiver is powered by 2 x DC 6V CR2032 lithium button cell batteries (included).

- Remove the battery insulator tabs by pulling them out of the battery compartments on the transmitter and receivers before first use.

Note : Remove and reinstall the batteries if there is no response after pulling out the insulation tab.

⚠ WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

BATTERY WARNING

1. Be sure that the batteries are installed correctly. Wrong polarity may damage the unit
2. Use only the size and type of batteries specified.
3. Do not mix old and new batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions)
6. Do not dispose of batteries in fire, batteries may leak or explode.

PAIRING THE TRANSMITTER WITH THE RECEIVERS

1. The transmitter will automatically turn ON when you remove the battery insulator tab from the battery compartment on the transmitter.
2. Remove the battery insulator tabs from the receivers.
3. Slide the receiver ON/OFF SWITCH (#5) to the ON position.
4. The LED INDICATOR (#3) on the receiver will flash and a beeping sound will start. The receiver is now ready for pairing with the transmitter.
5. Press the COLOR CODED BUTTON (#2) on the transmitter that matches the COLOR CODED MARKING (#4) on the receiver that is beeping.
6. The beep sound will stop and the transmitter is now paired with that receiver.
7. Repeat steps 3 to 6 to pair the other 3 receivers.

Note :

- Make sure the transmitter and receiver are close to each other when pairing.
- If the pairing fails, the beep sound will continue and will not stop.

- If the pairing fails, turn off the receiver (slide the RECEIVER ON/OFF SWITCH (#5) to the OFF position to reset the receiver. Repeat steps 3 to 6 to try again.
- The LED INDICATOR (#3) on the receiver will continue to flash when it is turned on.

HOW TO FIND THE LOST OBJECT

 
Attach one of the SFA200 receivers to an object like a set of keys, or something else that easily gets misplaced. Press the COLOR CODED BUTTON (#2) on the transmitter. The LED (#1) on the transmitter will turn on for about 4 seconds. The receiver with same COLOR CODED MARKING (#4) as the button you pressed on the transmitter will start beeping, and continue beeping for about 10 seconds.

NOTE : Do not press any other button on the transmitter when the TRANSMITTER LED INDICATOR (#1) is ON.

BATTERY REPLACEMENT


Transmitter

- Unscrew the three screws on the back cover and remove the back cover of the SFA200 transmitter.
- Carefully replace the battery with a new “CR1632” (or equivalent) lithium button cell battery (replacement battery not included). Insert the battery into the compartment with the “+” side facing up.
- Replace the back cover, insert the three screws and tighten them. Be careful not to over tighten the screws and strip out the screw holes.

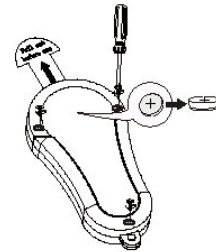

Receiver

 - Unscrew the one screw on the battery door located on the back of the receiver, and remove the battery door.
- Carefully replace the batteries with 2 new “CR2032” (or equivalent) lithium button cell batteries (replacement batteries not included). Insert the batteries into the compartment with the “+” side facing up.
- Replace the battery door, insert the one screw and tighten it. Be careful not to over tighten the screw and strip out the screw hole.

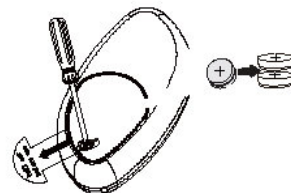

Note :

Clean the battery contacts and terminals in the device prior to installing new batteries.

CARE AND MAINTENANCE

- Do not use harsh or abrasive cleaners or pads on this product.
- A soft, dry or damp (with water) cloth may be used to clean the SFA200.
- Store the product in a cool, dry place when not in use.

SPECTRA GREEN NOTICE



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

©2014 BRK Brands Inc. All rights reserved. First Alert® is a registered trademark of the First Alert Trust.

1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A ONLY

This product is manufactured, distributed or sold by SPECTRA MERCHANDISING INTERNATIONAL, INC., official licensee for this product. All right, title and interest to use the "First Alert" logo trademarks and the "First Alert" trade dress are exclusively licensed by BRK Brands, Inc. and are used under license from BRK Brands, Inc.. Please contact SPECTRA's Service Department for questions/comments, warranty, support, or service related to this product.

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants that this product 1) is free from defects in materials and workmanship and 2) conforms to its specifications for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicated copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return

charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the owner's manual or non-SPECTRA approved modifications
 - c. Claims are made within the warranty period
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA owner's manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the owner's manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it prepaid by insured parcel post or UPS to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so include your name, address, phone number and e-mail address to speed the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$12.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by e-mail at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link below on the website to enter your information.
<http://www.spectraintl.com/wform.htm>

0514

Printed in China