 




◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ Hello Kitty® ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆

© 1976, 2009 SANRIO CO., LTD.

## CD KARAOKE SYSTEM / CD PLAYER

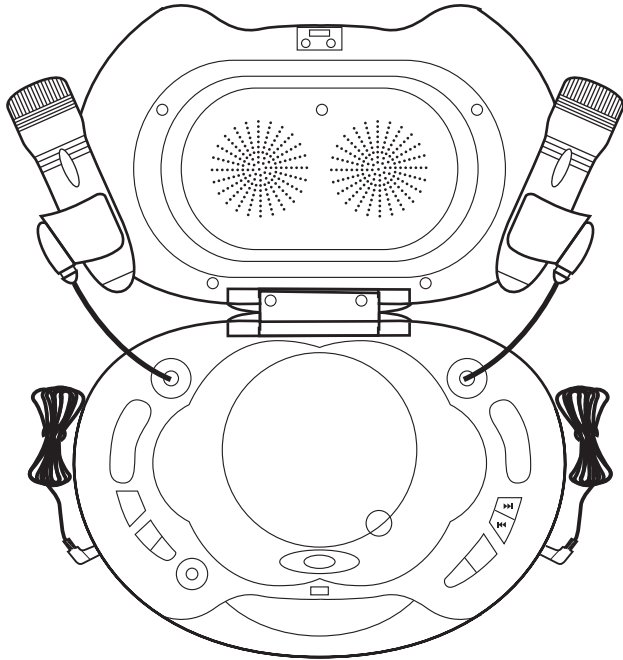

### OWNER'S MANUAL

### KT2003A

# WELCOME TO THE WORLD OF Hello Kitty®

We have taken great care to make sure that this unit was in perfect working order when it left our factory. It has been designed to give you many years of enjoyment and trouble free operation. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years.

For future reference, record the serial number in the space provided.

Model Number: KT2003A

Serial Number: \_\_\_\_\_

PLEASE READ THIS OPERATING MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

## WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Table of Contents	Page No
CAUTION.....	3
PRECAUTIONS FOR DISCS .....	4
WARNING .....	4
FUNCTIONS AND CONTROLS .....	5
PREPARATION .....	7
BASIC OPERATION .....	8
COMPACT DISC PLAYER OPERATION .....	8
CD KARAOKE OPERATION .....	9
CARE AND MAINTENANCE .....	10
TROUBLESHOOTING GUIDE .....	10
SPECIFICATIONS .....	11

- Periodically inspect for damage, if damaged properly repair the CD player before use.
- Adult supervision is recommended.

## CAUTION

**CLASS 1 LASER PRODUCT**  
CLASS 1 LASER PRODUCT  
APPAREIL LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

**CAUTION**  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED  
AVOID EXPOSURE TO BEAM



**This product contains a low power laser device.**

Follow the advice below for safe and appropriate operations.

### **ON PROTECTION AGAINST LASER ENERGY EXPOSURE**

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC-DC adaptor from the wall outlet. Make it a practice to remove the AC-DC adaptor by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

### **ON PLACEMENT**

- Do not use the unit in places, which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the airflow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

### **ON CONDENSATION**

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stands for 1 or 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occurs, remove the power source and refer servicing to qualified personnel.

### **COMPLIANCE WITH FCC REGULATIONS**

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

## PRECAUTIONS FOR DISCS

### HANDLING DISC

- To keep the disc clean, do not touch the play side of the disc.
- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.

### CLEANING DISC

- Before playback, wipe the disc with a clean cloth from the center outwards.
- Do not use any type of solvent such as thinner, done by qualified service personnel.

### CLEANING

- Use a soft cloth moistened with a little neutral detergent to wipe the cabinet, panel and controls. Never use abrasive paper, polishing powder or solvent like alcohol, gasoline, benzene, commercially available cleaners or anti-static spray.

## WARNING

### PLEASE TAKE GOOD NOTE OF THE FOLLOWING INSTRUCTION

Read the instruction manual before you attempt to use the unit.

Consult your dealer or service personnel if you have questions about the installation or operation of the unit.

### MAKE SURE

- This unit was design use battery or AC adaptor (not included) rated DC 9V 800mA. Using others voltage could cause the unit to malfunction or catch fire. Make sure all electrical connections (including extensions and inter connectors) are properly made.
- Turn unit OFF before unplugging it from power source.
- Protect system from dust, moisture, water and other liquids.

### DO NOT

- Expose to temperatures above 35°C.
- Place system near heaters or in areas subjected to direct sunlight.
- Place system where there is poor air circulation.
- Place system near TVs, speakers and other objects that generate strong magnetic fields.
- Clean with strong chemical agents.
- Add grease or oil components, running mechanisms, etc. CD player is designed to be maintenance-free.
- Attempt to service this system yourself. Take to an approved service center if repairs are necessary.
- Operate system if it is not working normally or has been damaged in any way. Turn unit off, unplug it from the power source and consult service personnel.
- Remove any fixed cover. This will increase the chance of electrical shock.
- Leave system unattended when in use.
- Listen to the headphone at high volume.
- Obstruct vents on unit.
- Push object into any holes, slots or openings on unit.
- Allow children to operate unit without adult supervision.

**Erratic performance may occur if system is used in rooms lit with fluorescent lights.**

 
### ABOVE ALL

- **NEVER** let anyone, especially children, push anything into holes, slots or any other openings in the case this could result in fatal electric shock.
- **NEVER** guess or take chances with electrical equipment of any kind.
- It is better to be safe than sorry!


NOTE: If the unit was used in a room with energy saving lamps (Fluorescent) erratic operation may occur.

# FUNCTIONS AND CONTROLS


TOP SIDE

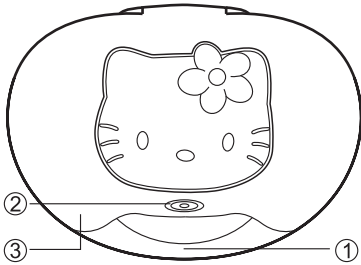


RIGHT SIDE

 


LEFT SIDE

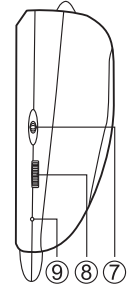 


REAR SIDE

 


BOTTOM SIDE

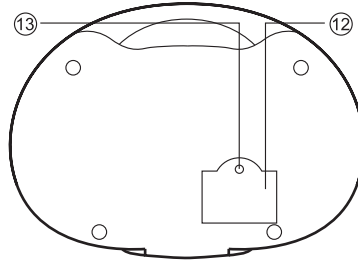 

MIC HANDSET

 

TOP VIEW (OPENED TOP COVER)

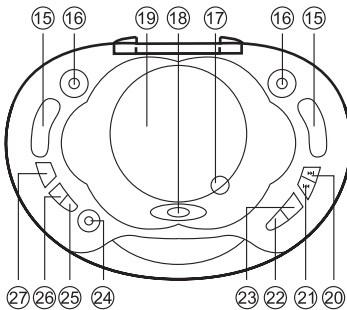 

## **TOP SIDE**

1. Handle
2. Top Cover Release (OPEN/CLOSE)
3. Top Cover

## **RIGHT SIDE**

4. MIC 2 Input Jack
5. MIC 2 VOLUME knob
6. DISCO LIGHT switch

## **LEFT SIDE**

7. MIC 1 Input Jack
8. MIC 1 VOLUME knob
9. Power switch

## **REAR SIDE**

10. Headphones Jack
11. DC Input Socket

## **BOTTOM SIDE**

12. Battery Cover
13. Battery Cover Screw

## **MIC HANDSET**

14. MIC Switch

## **TOP VIEW (OPENED TOP COVER)**

15. DISCO LIGHT
16. MIC Slot
17. CD Door OPEN
18. LCD Display
19. CD Door
20. ►► SKIP + Button
21. ◀◀ SKIP - Button
22. ■ STOP Button
23. ►|| PLAY/PAUSE Button
24. MASTER Volume
25. RANDOM Button
26. REPEAT Button
27. PROGRAM Button

 
 
## PREPARATION

### POWER SOURCE

This STEREO CD PLAYER operations on 6 "C" size (UM-2) batteries or from AC-DC 9V adaptor (not included)

#### A. BATTERY INSTALLATION

1. Turn over the unit and remove the **Battery Cover Screw (13)** to open **Battery Cover (12)**.
2. Install 6pcs UM-2 / "C" size batteries into battery compartment, according to the polarity diagram on the bottom of unit.
3. Close the **Battery Cover (12)** and assemble **Battery Cover Screw (13)**.

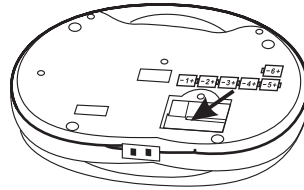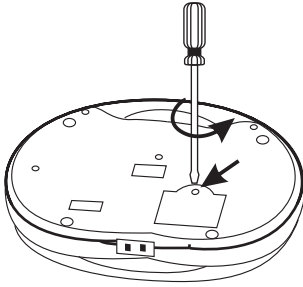

Install or remove batteries

REMOVE : Turn screw counterclockwise to open.

TIGHTEN : Turn screw clockwise to close.


#### BATTERY PRECAUTIONS

 Follow these precautions when using battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. Reversed battery may cause damage to the device.
3. If the device is not to be used for a long period of the time, remove the battery to prevent damage or injury from possible battery leakage.
4. Do not try to recharge battery that is not intended to be recharged they can overheat and rupture. (Follow battery manufacturer's directions.)

#### B. AC OPERATION


This unit may also be used with an AC adapter (not included), when the AC adapter is connected to the **DC Input (11) Jack**, the batteries are automatically disconnected. Please sure to use an AC adapter with a rating of 9 Volts DC, 800mA with the following polarity.



If you are using a universal adapter with an output polarity switch or polarized plug, be sure to set the polarity to "-".

#### HAND MIC INSTALLATION

 1. Insert MIC Stand into **MIC slot (16)**.
2. Insert Hand MIC into MIC Stand as shown in the figure.
3. Plug in MIC 1 into **MIC 1 (7) Input Jack**.
4. Plug in MIC 2 into **MIC 2 (4) Input Jack**.

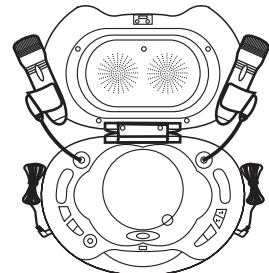

## BASIC OPERATION

**TURN ON** the unit Slide **POWER** (9) switch to "ON" position to turn ON the unit.

**TURN OFF** the unit Slide **POWER** (9) switch to "OFF" position to turn OFF the unit

### LISTEN TO THE PHONES

You can use headphones (not included) to listen in privacy. Insert the headphone 3.5mm plug into **PHONES** (10) Jack. Use corresponding adaptors (specialist shops) if you have different plugs. The speakers will automatically switched off when the headphones are being used.

#### NOTE :

To protect your hearing, follow these guidelines when you use headphones.

- Turn the volume to counter clock wise before you begin listening. After you begin listening, adjust the volume to comfortable sound level.
- Do not listen at extremely high volume level. Extended high volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it, overtime, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

### MASTER VOLUME (24) Knob

**Maximum** : Turn clockwise to increase the sound level.

**Minimum** : Turn counterclockwise to decrease the sound level.

## COMPACT DISC PLAYER OPERATION

**NOTE** : This player plays not only commercial CDs, but also self-compelled CD-R / RW discs.

### LOADING COMPACT DISC

- Slide the Top Cover Release (2) to open top cover.
- Raise the CD Door **OPEN** (17) upward to open **CD Door** (19).
- Load a disc with label side upward onto the black holder fitted with 3 retaining bearings until locked, push down **CD Door** (19) to close.

### PLAYING COMPACT DISC

1. Slide **POWER** (9) switch to "ON" position to turn ON the unit.
2. Load a disc into the CD compartment and close the CD Door. the CD player will start reading the TOC automatically, press **▶▶ PLAY/PAUSE** (23) to start playback.
3. Press **■ STOP** (22) button to terminate playback.
4. Slide **POWER** (9) switch to "OFF" position to turn OFF the unit.

**NOTE**: If no disc or damaged disc was loaded, "00" shown on the **LCD Display** (18)  
If loaded disc contains 18 tracks, "18" shown on the **LCD Display** (18).

#### ▶▶ **PLAY/PAUSE** (23) button

**PLAY** : Press once after loading disc to start playback and « ▶ » shown in the **LCD Display** (18).

**PAUSE**: Press once during playback to suspend and « ▶ » blinks in the **LCD Display** (18).

**RESUME**: Press once during play, playback continues and « ▶ » stop blinking in the **LCD Display** (18).

#### ▶▶ **SKIP +** (20) and **◀◀ SKIP -** (21) button

Button	PLAY mode		STOP mode
	Press once	Press twice	Press once
◀◀	Back to the beginning of the current track	Previous track	Last track
▶▶	Next track	N/A	Next track

**■ STOP** (22) button      Press to terminate playback.



### **REPEAT (26) button**

**REPEAT 1** : Press once to playback on the current track repeatedly and "REPEAT" blinks in the **LCD Display** (18).

**REPEAT ALL** : Press twice to playback all the tracks on the disc repeatedly and "REPEAT" shown on **LCD Display** (18).

**Disable** : Press repeatedly until above indicator disappear from the **LCD Display** (18).

### **RANDOM (25) button**

**Enable** : Press **RANDOM** (25) button to begin random play during play, "RDM" will light in the **LCD Display** (18).

**Disable** : Press **RANDOM** (25) button once to resume normal playback. "RDM" will disappear in the **LCD Display** (18).

## **PROGRAMMING CD**

The CD player enables program up to 20 programmed track in a sequence of your choice.

1. Press **PROGRAM** (27) button in stop mode, "PROG" and "01" blinking in the **LCD Display** (18).
2. Press **▶▶ SKIP +** (20) or **◀◀ SKIP -** (21) button to select the desired track to be programmed.
3. Press **PROGRAM** (27) button to enter your selection.
4. Repeat steps 2 and 3 to program other tracks in the memory.
5. Press **▶▶ PLAY/PAUSE (23)** button on program made to playback programmed tracks "PROG" lights steadily in the **LCD Display** (18).

**NOTE** : The programmed from first track will be erased automatically when you enter over 20 tracks.

### **CLEARING THE PROGRAMMED TRACKS**

- Press **■ STOP** (22) button while in program playback mode or
- Open the CD door by lifting the CD door while sliding **Open / Close** (28) button to "OPEN".

### **Note on CD-R / RW discs**

- Because of non-standardized format definition / production of CD-R / RW, playback quality & performance are not guaranteed.
- Do not attach a seal or label to either side (the recordable side or the labeled side) of a CD-R / RW disc. It may cause malfunction.
- Do not load a un-recorded CD-R / RW disc. It will take over 30 seconds to read the disc, the disc may be damaged if you try to open the CD door while reading the disc.

## **CD KARAOKE OPERATION**

**This unit provided funny feature similar to ENJOYING KARAKOE function**

1. Plug in MIC Handset into Input Jack **MIC 1** (7) or **MIC 2** (4) or both.
2. Slide the **MIC** (14) Switch to "ON" position, you can now sing together with your favorite artists.
3. Adjust **MIC 1 VOLUME** (8) or **MIC 2 VOLUME** (5) Knob to your desired level.

**NOTE**: To avoid feedback, do not turn MIC VOLUME to max position and leave the MIC Handset far away from the speaker.

### **MIC 1 VOLUME** (8) and **MIC 2 VOLUME** (5) knob

**Maximum** : Turn clockwise to increase MIC input level.

**Minimum** : Turn counterclockwise to decrease MIC input level.

### **DISCO LIGHT** (6) Switch

**ON** : DISCO Light without flashing effect.

**FLASH**: DISCO Light with blinking effect.

**OFF** : Shut off the light.

## CARE AND MAINTENANCE

### COMPACT DISC CARE

- Treat the disc carefully, handle the disc only by its edges, Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers etc, to the disc label side.
- Clean the disc periodically with soft, lint-free, dry cloth, Never use detergents or adhesive cleaners to clean the disc, If necessary, use a CD cleaning kit.
- If disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the edge of the disc, Never wipe in circular motions.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Fingerprints and dust should be carefully wiped off from the discs recorded surface with a soft cloth, unlike conventional records, compact disc has no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should remove most particles.

### CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- If the cabinets become dusty, wipe them with a soft dry dust cloth, Do not use any wax or polish sprays on the cabinets.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloth or polished as these will mar the finish of your system.

**CAUTION :** Never allow any water or other liquids to get inside the system while cleaning.



## TROUBLESHOOTING GUIDE

Should the system exhibit a problem, check the following before seeking service.

Symptom	Possible Cause	Solution
<b>Compact Disc player</b>		
CD Player will not play	System not switched on	Slide power switch to "ON" position
	CD is not installed or installed incorrectly	Load CD with label side upward
	If the CD is defective or the media used may not be compatible	Use better quality blank media and retest
CD skips while playing	Disc is dirty or scratched	Wipe disc with cloth or use another disc
CD skips after closing Top Cover	Volume level too high	Decrease volume level until no skipping occurs
<b>SING A SONG</b>		
MIC no sound	MIC volume at minimum position	Increase MIC volume level
	MIC at OFF position	Slide MIC switch to ON position
Shrilling noise (feedback heard)	MIC too close the speaker	Hold MIC far away from speakers
	MIC/MASTER Volume set at maximum position	Decrease MIC/MASTER volume

## SPECIFICATIONS


### CD Player

Playback System .....	Top Load CD mechanism
Memory Program .....	20 Tracks

### Audio Section

Power Output .....	2x500mW / Channel @10%THD
Headphone Impedance .....	8 – 32 ohm
Impedance .....	4 ohm
Driver .....	3" full range

### General

Power Source .....	DC 9V, UM-2/"C" size x 6 batteries (not included) AC adaptor (not included) DC 9V, 800mA 
Dimensions (mm) .....	UNIT : 380(W) x 97 (H) x 273 (D) MIC : 48.5 (DIA) x 152 (L)

### Accessories:

Instruction Manual .....	1 pc
MIC Hand Set .....	2 pcs
MIC Stand .....	2 pcs

Design and specification subject to change are without notice.

## **SERVICE**

Please refer to the instructions on the enclosed warranty card for returning your unit for service. When returning the unit, please remove batteries to prevent damage to the unit in transit and / or from possible battery leakage. We are not responsible for batteries returned with the product or for the cost of replacement.

Distributed by:

Spectra Merchandising International, Inc.

Chicago Industry Tech Park

4230 North Normandy Avenue

Chicago, Illinois 60634, U.S.A.

Please have model number ready, for Customer service, call 1-800-777-5331

Printed in china