



★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★  
**HELLO KITTY**<sup>®</sup>  
©1976, 2014 SANRIO CO., LTD.

## BLUETOOTH CD BOOMBOX WITH AM/FM STEREO RADIO





KT2029BT  
USER MANUAL



**CAUTION:** Electrically Operated Product – Please use care  
when plugging into AC outlet.

## WARNING

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (ON BACK), NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
---	--	---

**The Caution Marking is located at the bottom enclosure of the apparatus.**

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.

 


17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Excessive sound pressure from earphones and headphone can cause hearing loss.

**This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.**



**CAUTION: TO PREVENT ELECTRIC SHOCK,  
MATCH WIDE BLADE OF PLUG TO WIDE SLOT,  
FULLY INSERT**

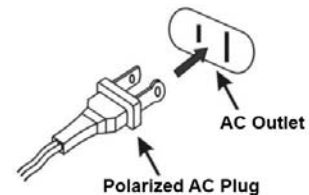

**SAVE THESE INSTRUCTIONS**

## CAUTION

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LÁSER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
AVOID EXPOSURE TO BEAM.



This product contains a low power laser device.

Follow the advice below for safe operations.

#### ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be "ON" when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment, and unplug the AC cord from the wall outlet. Make it a practice to remove the AC cord by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

#### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

#### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

## COMPLIANCE WITH FCC REGULATIONS

**FCC ID KKI-F-6088**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **WARNING**

**Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

## PROTECT YOUR FURNITURE!!

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.

To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

## DEAR HELLO KITTY CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

Start your volume control at a low setting.

Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

**We Want You Listening For a Lifetime**

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



**Customer's Record:**

 
The serial number of this product is found on its bottom. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: KT2029BT


Serial Number: \_\_\_\_\_

## LOCATION CONTROLS OF UNIT


### FRONT VIEW

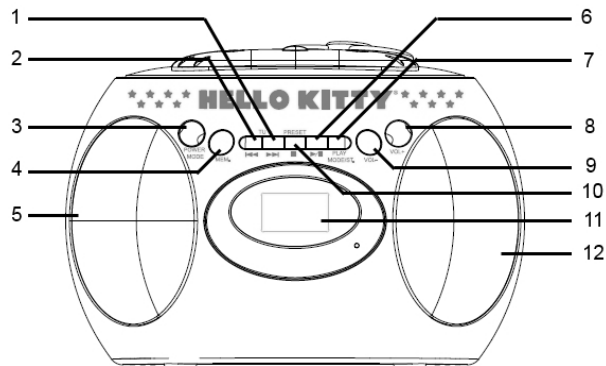

### BACK VIEW

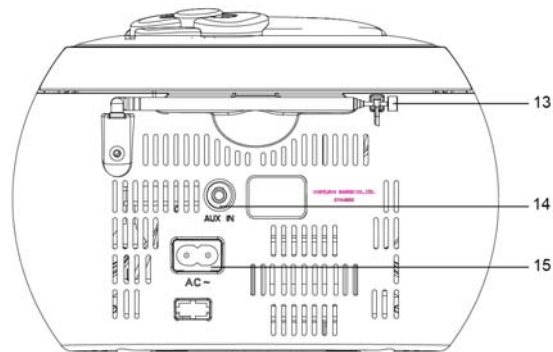 

### TOP VIEW

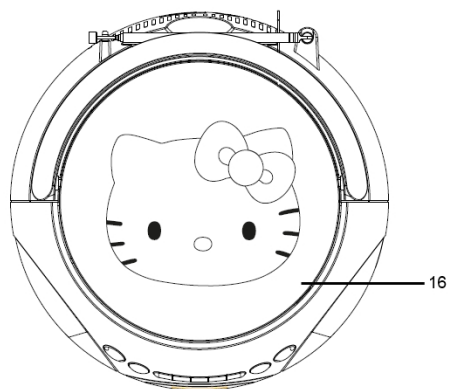 

- |                           |                        |
|---------------------------|------------------------|
| 1. SKIP+/TUNER+ BUTTON    | 9. VOLUME – BUTTON     |
| 2. SKIP-/TUNER- BUTTON    | 10. STOP/PRESET BUTTON |
| 3. POWER/MODE BUTTON      | 11. LCD DISPLAY        |
| 4. MEMORY BUTTON          | 12. RIGHT SPEAKER      |
| 5. LEFT SPEAKER           | 13. TELESCOPE ANTENNA  |
| 6. PLAY/PAUSE BUTTON      | 14. AUX IN JACK        |
| 7. PLAY MODE/FM ST BUTTON | 15. AC SOCKET          |

## POWER SOURCES

The KT2029BT operates using standard 120V~ 60Hz AC household power or 6 x "C" size (UM-2) batteries (Not included).

### BATTERY OPERATION

For best performance and longer operating time, we recommend the use of alkaline batteries.

1. Remove the Battery Door.
2. Following the polarity (+ and -) diagram as shown inside the battery compartment, insert 6 'C' size (UM-2) batteries.
3. Replace the Battery Door.

### BATTERY WARNING

1. Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
2. (a) Do not mix old and new batteries.  
(b) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
4. Do not dispose of batteries in fire. Batteries may explode or leak.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. ( Follow battery manufacturer's directions ).

### AC POWER CONNECTION

1. Insert one end of power cord to the AC Socket (#15) at the back of the KT2029BT.
2. Connect the power cord to AC power source.
3. When the unit is operated from AC power source, the internal battery source will automatically be disconnected.

## CD OPERATION

NOTE: This player plays not only commercial CDs but also self-compiled CD-R/RW discs.

Press the POWER/MODE BUTTON (#3) once to turn on KT2029BT. The LCD DISPLAY (#11) will light. The player will start reading the disc and will display "no" if no disc is loaded.

Press CD DOOR OPEN/CLOSE BUTTON (#16) to open the CD Door. Carefully place an audio CD with its label side upward in the CD compartment and close the CD Door.

The total number of tracks on the CD will appear in the LCD DISPLAY (#11) after a few seconds.

Press the PLAY/PAUSE BUTTON (#6). The CD will start playing from the first track.

Adjust the VOLUME + / VOLUME - (#8 / #9) to obtain the desired sound level from the Built-in Speakers. To suspend playing, press the PLAY/PAUSE BUTTON (#6) again. To resume playing, press the PLAY/PAUSE BUTTON (#6) again.


You can choose to play your favorite track directly by pressing either the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER - BUTTON (#2). The LCD DISPLAY (#11) will indicate the track number selected.




To locate a particular passage within a track, keep the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) depressed until it is found.

NOTE: Low level audio will be heard during the search process to assist in locating the correct point in the track.

### Repeat Play

To repeat a particular track, press the PLAY MODE / FM ST BUTTON (#7) once or until the REPEAT INDICATOR  shows on the LCD Display (#11) in CD Play Mode.

To repeat the entire CD, press the PLAY MODE / FM ST BUTTON (#7) twice or until the REPEAT

ALL INDICATOR  shows on the LCD DISPLAY (#11) in CD Play Mode.

To play the CD randomly, press the PLAY MODE / FM ST BUTTON (#7) three times or until the random indicator **RDN** shows on the LCD DISPLAY (#11) in CD Play Mode.

### Programmed Play

This function allows the tracks to be played in a programmed sequence.

1. In CD stop mode, press the MEMORY BUTTON (#4) once. The MEM indicator and Program Channel Number "P01" will appear and blink in the LCD DISPLAY (#11) to prompt for input.
2. Press the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) to select the song to be programmed.
3. Press the MEMORY BUTTON (#4) again to store selection. The Program Channel Number will change to "P02" and blink to prompt for input 90 seconds.
4. Press the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) again to select the next song to be programmed and press the MEMORY BUTTON (#4) to store selection.
5. Repeat steps 2 - 4 to program as many as 20 tracks.
6. You may repeat the current programmed track or all programmed tracks by pressing the PLAY MODE / FM ST BUTTON (#7) once (one track) or twice (all tracks).
7. Press PLAY/PAUSE BUTTON (#6) to start to play the tracks in a programmed sequence.
8. Press STOP/PRESET BUTTON (#10) once to stop playback.
9. To cancel programmed play, press the STOP/PRESET BUTTON (#10) again in STOP mode.

When you wish to turn off the CD PLAYER, press and hold the POWER/MODE BUTTON (#3). The KT2029BT will turn off.

### NOTES ON CD-R/RW DISCS

- Because of non-standardized format definition/production of CD-R/RW discs, playback quality & performance are not guaranteed.
- Manufacturer is not responsible for the ability of CD-R/RW discs to play due to recording conditions such as PC performance, writing software, media ability, etc.
- Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

## RADIO OPERATION

1. Press the POWER/MODE BUTTON (#3) once to turn on the unit.
2. Press the POWER/MODE BUTTON (#3) repeatedly to select AM or FM mode. The radio frequency will show on LCD DISPLAY (#11).
3. Press and hold the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) to search for the next / previous available station. If the reception is poor, try manual tuning to fine tune the station.
4. Press the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) briefly to manually tune through the frequency band.
5. Adjust the volume control to the desired volume level.
6. Press and hold the POWER/MODE BUTTON (#3) to turn off the KT2029BT after listening.

### FM Mono & FM Stereo reception

- IN FM mode, press the PLAY MODE / FM ST BUTTON (#7) to select stereo mode, the ST indicator will show on the LCD DISPLAY (#11).
- It is preferable to receive the program in mono when you are receiving a weak station. Press the PLAY MODE / FM ST (#7) to select Mono mode.

### Setting the Radio Station Presets

The unit allows you to store up to FM 20 stations and AM 10 stations for easy recall at any time.

1. Tune to the radio station you want to store in memory.
2. Press MEMORY BUTTON (#4). The preset program number “P01” will be flashing on display.
3. To change the program number location, press the STOP/PRESET BUTTON (#10) to step through the program numbers ( P01-20 in FM mode or P01-10 in AM mode ).
4. To confirm the preset location, press the MEMORY BUTTON (#4).
5. To store up to 20 station presets in FM mode or 10 stations presets in AM mode, repeat steps 1-4 above.

### RECALL PRESET STATION

In AM or FM mode, press STOP/PRESET BUTTON (#10) repeatedly to select the preset channel.

### TIPS FOR BEST RADIO RECEPTION

1. To insure maximum FM tuner reception, the Telescopic Antenna (#13) should be fully extended and rotated to obtain the best possible station reception.
2. The AM antenna is built into the unit. When tuning in AM reception, be sure to place the unit in a vertical position. To insure best AM reception, try repositioning the unit until the best station reception is obtained.

## AUX IN OPERATION

This KT2029BT provides an AUX IN JACK (#14) for connecting external audio devices like MP3 players and digital audio devices, and to listen to them through the speakers of the KT2029BT.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end of the cable into the AUX IN JACK (#14) and the other end into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the KT2029BT and your external audio device.
4. Press POWER / MODE BUTTON (#3) repeatedly to select AUX IN mode. AUX indicator will show on the LCD DISPLAY (#11).
5. Start playing the device you plugged into the AUX IN JACK (#14).
6. Slowly adjust both the volume controls of the KT2029BT and the external device until you reach a comfortable listening level.

### Note:

- If you connect this unit to the Line-Out Jack of your external device, you only need to adjust the volume control of the unit. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the unit to obtain the desirable volume setting.
- Remember to turn off the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.
- Remember to disconnect the connection cable from the unit after use in order to be able to listen to CD music again.

## BLUETOOTH OPERATION

Pairing a Bluetooth enabled device with the KT2029BT.

1. Press the POWER/MODE BUTTON (#3) repeatedly to turn on KT2029BT and select Bluetooth mode, "bt" will show on the LCD DISPLAY (#11) and flash.
2. Turn on the Bluetooth function for the device you want to link to, and enable the search or scan function to find the KT2029BT.
3. Select "KT2029BT" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) KT2029BT with your device.
4. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the KT2029BT as your computer's default sound device.
5. After successfully pairing the KT2029BT with your Bluetooth device, the "bt" indicator will stop flashing and remain lit.
6. If you want to pair (link) the KT2029BT with another Bluetooth device, press and hold PLAY/PAUSE Button (#6) a few seconds. The "bt" indicator will flash. The KT2029BT will go into Pairing/Discoverable mode. Repeat steps 2 & 3.

Now you can play music from your Bluetooth device wirelessly to the KT2029BT.

1. Selecting your favorite song, press the Play/Pause/▶|| Button on your Bluetooth device or the PLAY/PAUSE BUTTON (#6) on the KT2029BT to play or pause the the song from your Bluetooth

device.

2. Press the SKIP + / TUNER + BUTTON (#1) or SKIP - / TUNER – BUTTON (#2) to select the Next or Previous track.

NOTE: The search function does not apply to Bluetooth operation.

3. Press VOLUME + / VOLUME - BUTTONS (#8/9) of the KT2029BT and your Bluetooth device until you reach a comfortable listening level.

 
NOTE :

1. Refer to the manual of your cell phone, tablet PC, computer... or other Bluetooth enabled device for Bluetooth operation since it may vary from model to model.
2. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
3. Remember to turn off the KT2029BT when you have finished listening. Press and hold POWER/MODE BUTTON (#3) a few seconds to turn off the unit.
4. Don't forget to switch off the power of your external audio device as well.

NOTE: The music playback will automatically be paused when you have an incoming call. When the call is ended the KT2029BT will start playing again

## CARE AND MAINTENANCE

1. Children should be supervised when using this product.
2. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
3. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
4. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
5. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

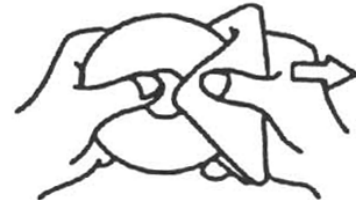

## TROUBLESHOOTING GUIDE

If you experience difficulties in the use of this music system please check the following or call 1-800-777- 5331 for Customer Service.

Symptom	Possible Cause	Solution
Noise or sound distorted on AM or FM broadcast	- Station not tuned properly for AM or FM. - FM: FM telescopic antenna is not sufficiently extended. - AM: The bar antenna is not	- Retune the AM or FM broadcast station. - FM: Fully extend the FM telescopic antenna. - AM: Reposition the unit until the

	positioned correctly	best reception is obtained.
AM or FM no sound	- Unit not in "RADIO" function mode. - Volume set at minimum	- Press MODE BUTTON to select AM or FM mode - Increase Volume.
CD player will not play	- Unit not in CD function mode. - CD is not loaded properly. - If the CD is self-compiled, the media used may not be compatible with the player. - Exhausted battery	- Select CD function mode. - Load CD with label side up. - Use better quality blank media and retest. - Replace the batteries.
CD skips while playing	- Disc is dirty or scratched.	- Wipe CD with clean cloth or use another disc.
Intermittent sound from CD player	- Dirty or defective disc - Dirty pick up lens - Player is subject to excessive shock or vibration	- Clean or replace the defective disc. - Use a CD lens cleaning disc to clean the lens. - Relocate the player away from shock or vibration.
Sound appears distorted at high volume setting	- Volume control is set to maximum. - Batteries become low	- Adjust Volume Control to a lower comfortable level. - Replace all the old batteries with new ones.
AUX IN no sound	- Unit not in AUX IN mode - AUX cable connect unstable	- Press MODE BUTTON to select AUX IN mode - Reconnect again
Bluetooth not operating	- Unit not in Bluetooth mode - Bluetooth connect unstable	- Press MODE BUTTON to select BLUETOOTH mode - Reconnect again

## SPECIFICATIONS AND LEGAL STATEMENT

Power Source	: AC: 120V~ 60Hz or 6 x "C" (UM-2) batteries (not included)
Power Consumption	: 10 W
Speaker Power Output	: 2 X 1W RMS
Speaker Impedance	: 8 ohm
Frequency Range	: AM 520-1710 KHz / FM 87.5-108 MHz

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising International, Inc. is under license. Other trademarks and trade names are those of their respective owners.

## 90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$20.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectraintl.com](mailto:custserv@spectraintl.com) for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue,  
Chicago, IL 60634, USA.  
1-800-777-5331

To register your product, visit the link below to enter your information.  
<http://www.spectraintl.com/wform.htm>

Licensed by:  
Marino Andriani, LLC  
Distributed by:  
Spectra Merchandising International, Inc.  
4230 North Normandy Avenue  
Chicago, IL 60634, USA  
[www.spectraintl.com](http://www.spectraintl.com)

0714

Printed in China