

---

## Soothing Sounds Digital Clock Radio with Night Light



**MODEL: JCR-350  
USER MANUAL**

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING  
THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE**

# WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p>CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

The Rating plate is located at the back enclosure of the apparatus

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. AC adaptor is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adaptor should be disconnected form the mains socket outlet completely.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product.  
When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for a long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
15. Do not overload wall outlet. Use only power source as indicated.



16. Use replacement part as specified by the manufacturer.
17. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
18. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
19. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
21. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
22. Minimum distances of 4 inches around the apparatus for sufficient ventilation.
23. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
24. No open flame sources, such as lit candles, should be placed on the product.
25. The use of apparatus in moderate climates.
26. Attention should be drawn to the environmental aspects of battery disposal

**SAVE THESE INSTRUCTIONS**

# COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## PROTECT YOUR FURNITURE!!

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.

To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

## DEAR JENSEN CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening for a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.






### Customer's Record:

The serial number of this product is found on its bottom. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

**Model Number: JCR-350**

**Serial Number:**

# LOCATION OF CONTROLS

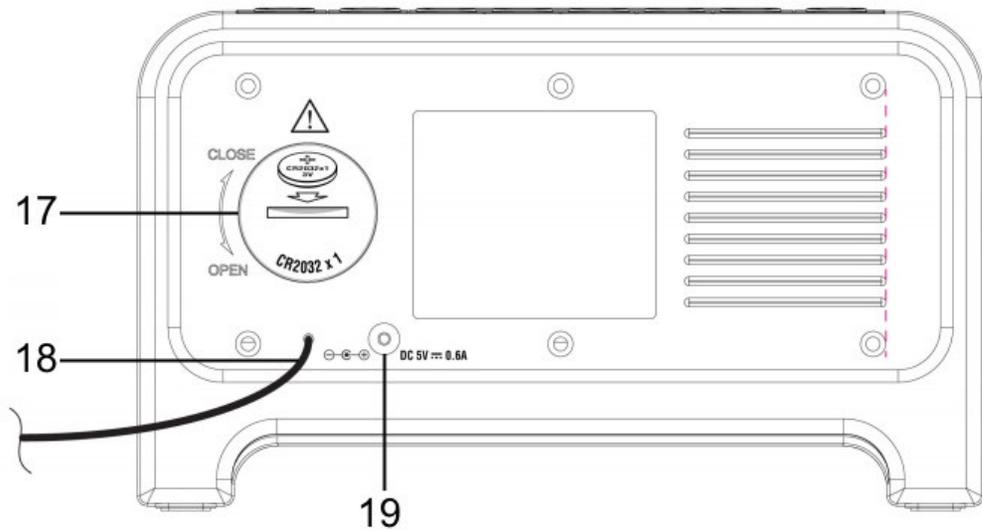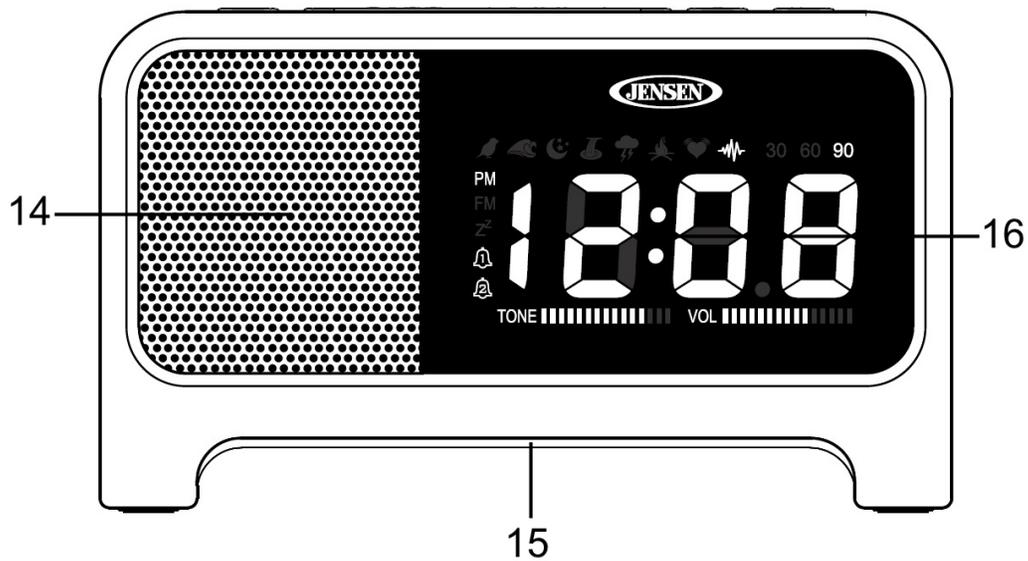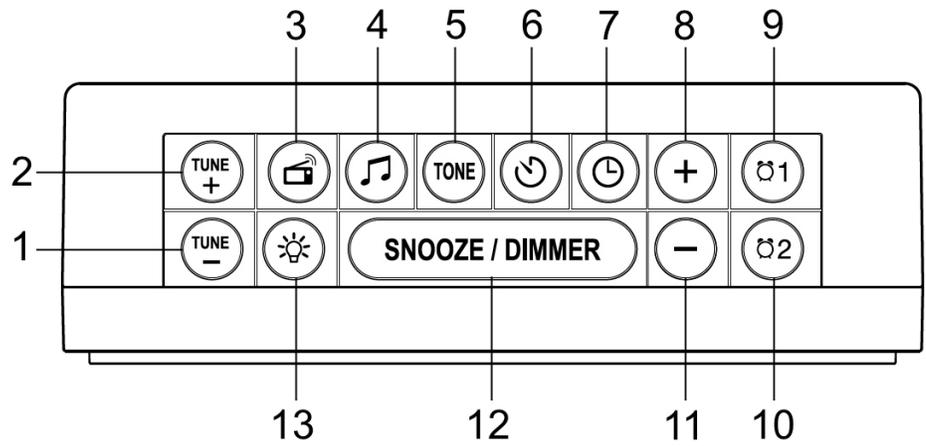

- |                   |                         |
|-------------------|-------------------------|
| 1 TUNE - BUTTON   | 11 VOLUME - BUTTON      |
| 2 TUNE + BUTTON   | 12 SNOOZE/DIMMER BUTTON |
| 3 RADIO BUTTON    | 13 NIGHT LIGHT BUTTON   |
| 4 SOUNDS BUTTON   | 14 SPEAKER              |
| 5 TONE BUTTON     | 15 NIGHT LIGHT          |
| 6 TIMER BUTTON    | 16 LCD DISPLAY          |
| 7 TIME BUTTON     | 17 BATTERY COMPARTMENT  |
| 8 VOLUME + BUTTON | 18 FM ANTENNA           |
| 9 ALARM 1 BUTTON  | 19 DC IN JACK           |
| 10 ALARM 2 BUTTON |                         |

### POWER SOURCE (AC ADAPTOR ONLY)

The JCR-350 is powered by an external AC-DC adaptor with an output of DC 5V  $\ominus$   $\oplus$  600mA  $\ominus$   $\oplus$ .

The unit is also equipped with a battery back-up system for the clock that uses 1 x CR2032 lithium battery (Not included).

#### **POWER CONNECTION**

1. Connect the cord of the power adaptor to the DC IN JACK (#19) of the JCR-350.
2. Plug the power adaptor into a household wall socket. The unit is powered up and in standby mode when you see the display turn on.

#### **Battery Back-up system**

- The unit is equipped with a battery back-up system that requires a 3V CR2032 lithium battery (not included).
- Use a coin to rotate/open the BATTERY COMPARTMENT (#17) door. Remove the door once it's open.
- Insert the battery into the BATTERY COMPARTMENT (#17) and make sure the positive and negative (+ or -) sides of the battery are in contact with the corresponding terminals located in the BATTERY COMPARTMENT (#17).
- Replace the BATTERY COMPARTMENT (#17) door and use a coin to rotate/close it back in place.
- If a power outage occurs, the display will be off, but the back-up battery will preserve the clock and alarm settings until the power is restored.
- We recommend leaving the power adaptor connected when replacing the battery. All clock and alarm settings will be lost if you replace the battery with the power adaptor unplugged.

### **WARNING**

#### **DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD**

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## SETTING THE TIME

**NOTE:** When the unit is plugged in for the first time, the display will be flashing 12:00AM and will continue flashing until the time is set.

### Setting the Time

1. In standby mode, Press and hold the TIME BUTTON (#7) until the unit goes into TIME SET mode. The hour digits will begin flashing.
2. Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to set the hour. Press and hold the volume buttons to speed up advancing up or down through the hour digits.  
**Note:** The PM indicator in the top left corner of the LCD DISPLAY (#16) will light when the hour is set to PM and will be off when the hour is set to AM.
3. Tap the TIME BUTTON (#7) to confirm the hour setting, and the minute digits will begin flashing.  
Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to set the minutes. Press and hold the volume buttons to speed up advancing up or down through the minute digits.
4. Tap the TIME BUTTON (#7) to confirm the minutes and complete setting the time. The display will stop flashing.

### Note:

The unit will automatically save the current settings and exit the TIME SET mode if no buttons are pressed within 5 seconds during the set-up process.

## ALARM OPERATION

The JCR-350 features a dual alarm clock.

### Turning the alarms On and Off

Tap the ALARM 1 BUTTON (#9) to turn ON the Alarm 1, the Alarm 1 icon  will appear on the display and the alarm time will flash on the display for 5 seconds. Tap the ALARM 1 BUTTON (#9) again to turn Alarm 1 OFF. The Alarm 1 icon  will turn off.

Repeat the steps above for Alarm 2 using the ALARM 2 BUTTON (#10).

### Setting the alarm time:

1. Press and hold the ALARM 1 BUTTON (#9), until the unit goes into ALARM SET mode. The hour digits will begin flashing and the Alarm 1 icon  will appear on the display.
2. Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to set the hour. Press and hold the volume buttons to speed up advancing up or down through the hour digits.
3. **Note:** The PM indicator in the top left corner of the LCD DISPLAY (#16) will light when the hour is set to PM and will be off when the hour is set to AM.
4. Tap the ALARM 1 BUTTON (#9) to confirm the hour setting, and the minute digits will begin flashing.
5. Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to set the minutes. Press and hold the volume buttons to speed up advancing up or down through the minute digits.
6. Tap the ALARM 1 BUTTON (#9) to confirm the minutes and complete setting the Alarm 1 time. The display will stop flashing and the alarm sound source will flash on the display.

7. Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to select alarm sound source (AL, SPA or Radio).

**AL** - flashing on the display for “Wake to Alarm”

**SPA** – flashing on the display for “Wake to Sounds”, Default sound is

Chirping Birds  , repeatedly tap the SOUNDS BUTTON (#4) to select other Sound to wake to. The selected sound icon will flash at the top of the display.

**Radio** – Radio station frequency flashing on the display for “Wake to Radio” (last station played).

8. Tap the ALARM 1 BUTTON (#9) to confirm the “wake to” option. The Volume level will begin flashing.
9. Repeatedly tap the VOLUME + BUTTON (#8) or VOLUME - BUTTON (#11) to select the volume level.
10. Tap the ALARM 1 BUTTON (#9) to confirm “wake to” volume level and complete the alarm 1 setting.
11. Repeat the steps above for Alarm 2 using the ALARM 2 BUTTON (#10).

Once all the alarm setting steps are completed, the alarm time will be set and the corresponding alarm indicator will light.

**Note:**

The unit will automatically save the settings and exit the time set mode if you do not tap any button after 5 seconds.

**Turning OFF the Alarm**

- Once the Alarm time is reached, and the alarm sounds, the corresponding alarm indicator will flash.
- Press any button but the SNOOZE/DIMMER BUTTON (#12) to turn OFF the alarm.
- The alarm will turn on again the next day at the set Alarm time.

Notes:

- For setting a one-day alarm, just set the desired alarm time one day before.
- The alarm will sound at the time set the day prior. After having switched off the alarm sound, tap the corresponding alarm button to disable the alarm (the alarm indicator will turn OFF).
- To set another one-day alarm, just repeat the above steps.

## SNOOZE FUNCTION

Once the Alarm time is reached, and the alarm sounds, tap the SNOOZE/DIMMER BUTTON (#12) on the top panel to temporarily turn off the alarm and activate the snooze function. The alarm will stop and turn on again 9 minutes later.

NOTES:

- The corresponding alarm indicator and the snooze indicator  $Z^Z$  will flash on the display when the snooze function is activated.
- To cancel the snooze function and the alarm, press any button but the SNOOZE/DIMMER BUTTON (#12) and the snooze indicator  $Z^Z$  will turn OFF.

## RADIO OPERATION

### Listening to the Radio

1. Tap the RADIO BUTTON  (#3) to turn on the radio. The FM indicator and the current station frequency will show on the display. The display will automatically switch back to the time after 5 seconds.
2. Tap either one of the TUNE +/- BUTTONS (#2 / #1) to step through and adjust the radio station frequency.
3. Auto Tuning: Press and hold either one of the TUNE +/- BUTTONS (#2 / #1) to automatically tune to the next or previous available station.
4. Tap either one of the VOLUME +/- BUTTONS (#8 / #11) to obtain the desired volume level.
5. Press the RADIO BUTTON  (#3) to turn the radio off.

### Notes:

- Use manual tuning to select weaker stations that might be skipped during automatic tuning.
- If the automatic tuning does not stop on the exact frequency of the station, for example, it stops on 88.9 MHz instead of 88.8 MHz, use the manual tuning method to “fine tune” to the exact frequency of the desired station.
- To ensure maximum FM tuner reception, unwrap and fully extend the FM ANTENNA (#18) for best FM radio reception.

### Setting and Recalling the Radio Station Presets

1. Tap the RADIO BUTTON  (#3) to turn on the radio.
2. Tap either one of the TUNE +/- BUTTONS (#2 / #1) to step through and adjust the desired radio station frequency.
3. Press and hold the SNOOZE/DIMMER BUTTON (#12) until the memory location “P01” (or the next available preset location) starts flashing on the display.
4. Release the SNOOZE/DIMMER BUTTON (#12) and the memory location continues flashing on the display.
5. Tap either one of the VOLUME +/- BUTTONS (#8 / #11) to change the preset station number location (P01-P10) and select the one where you want to save the current station.
6. Press the MEM SNOOZE/DIMMER BUTTON (#12) again to confirm and save the preset. The memory location will stop flashing and the display will change back to the radio station.
7. Repeat steps 2 through 6 to store up to 10 stations.
8. To recall one of the preset stations already programmed, tap the SNOOZE/DIMMER BUTTON (#12) repeatedly until you reach the desired preset number/radio station.

## LISTEN TO SOOTHING SOUNDS

1. Tap the SOUNDS BUTTON (#4) to turn on the soothing sounds.
2. Repeatedly tap the SOUNDS BUTTON (#4) to select one of the sounds available. The sound indicator and sound will change every time the SOUNDS BUTTON (#4) is pressed. Available sounds include, Chirping Birds  (default) / Ocean  / Summer Night  / Waterfall  / Thunder  Storm  / Campfire  / Heartbeat  / White Noise .
3. Once a sound is selected, repeatedly tap the TONE BUTTON to change the tone level (0-14 - default is 6) of the sound playing.
4. Repeatedly tap the VOLUME +/- BUTTON (#8 / #11) to increase/decrease the volume level (0-15 levels - default is 7) of the sound playing.
5. Press and hold SOUNDS BUTTON (#4) for 2s to turn off the sounds.
6. The last sound settings will be stored in memory if you have a battery installed in the back-up compartment.

## SLEEP TIMER OPERATION

The sleep timer allows the unit to turn off automatically after a designated time has elapsed.

Press the TIMER button to set a sleep time of 30/60/90 minutes while playing sounds or the radio, the chosen sleep time duration will show in the top right corner of the LCD DISPLAY (#16).

## DIMMER OPERATION

In standby mode, press the SNOOZE/DIMMER BUTTON (#12) repeatedly to select the brightness settings of the display (High, Medium, Low or OFF).

## NIGHT LIGHT OPERATION

Press NIGHT LIGHT BUTTON (#15) repeatedly to select the brightness settings of the nightlight (High, Medium, Low or OFF).

## CARE AND MAINTENANCE

- Clean the radio with a soft damp cloth and let all parts dry completely after cleaning.
- Do not use any aggressive cleaners, brushes with nylon bristles, sharp or metallic cleaning utensils, knives, hard scrapers and the like. They could damage the surfaces of the radio.
- Do not immerse the radio in water and do not let water getting into the housing of the radio.
- Unplug the power adaptor and clean the radio before storage.
- Always store the radio in a dry and clean place.

## SPECIFICATIONS

Power:	AC Adaptor: Input AC 100-240V ~ Output: DC 5V === 600mA ⊖ ⊕
Backup battery:	1 x 3V === CR2032 (not included)
Frequency Range:	FM 87.5 – 108 MHz

## TROUBLESHOOTING GUIDE

If you experience difficulties in the use of this clock radio, please check the following or call 1-800-777-5331 for Customer Service and support.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Power does not come on	Power adaptor connection is unstable	Reconnect the adaptor
No sound	VOLUME control is turned down	Increase the Volume
Noise or the sound is distorted listing to the radio	<ul style="list-style-type: none"> <li>- The Station is not tuned properly</li> <li>- The Antenna is not extended</li> </ul>	<ul style="list-style-type: none"> <li>- Retune the station you wish to listen to</li> <li>- Fully extend the antenna</li> </ul>



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

## 90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt. You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$20.00** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectraintl.com](mailto:custserv@spectraintl.com) for updated information on the unit requiring service. In some cases, the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue, Chicago, IL60634, USA. 1-800-777-5331

To register your product, visit the link on the website below to enter your information.

<http://www.spectraintl.com/wform.htm>