

CONNECTING THE JSB-550 TO A Wi-Fi NETWORK

IMPORTANT:

- The JSB-550 only operates on a single band (2.4 GHz) Wi-Fi network. If you are having problems connecting the JSB-550 to your network, check your router settings and make sure the 2.4 GHz signal is turned and you are accessing the correct band before proceeding.
 - Before you begin, make sure you have an Amazon account. You need an Amazon account in order to use the Alexa voice control. Go to “www.Amazon.com” to register.
1. Download the JENSEN WI-FI AUDIO APP to your phone from Play store for Android phone and App store for iOS device.

 


Android App





iOS App



2. Turn On the unit, you will hear the voice indication for the unit in Wi-Fi mode and the Mode LED will flashing White. Press and hold the MODE button repeatedly to select Wi-Fi mode if necessary.
3. Run the JENSEN WI-FI AUDIO APP and follow on screen guide to setup the network.
4. Touch the “Add Device” button on your smartphone screen to add the first speaker to your network.

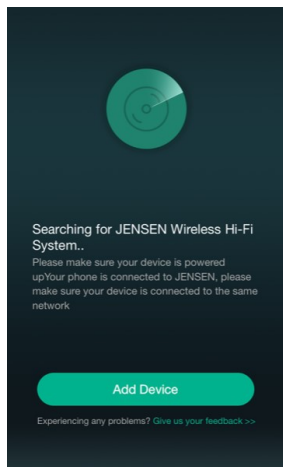

  5. Go to your phone's WiFi settings page and select the Wi-Fi starting with JSB-550XXXX to connect

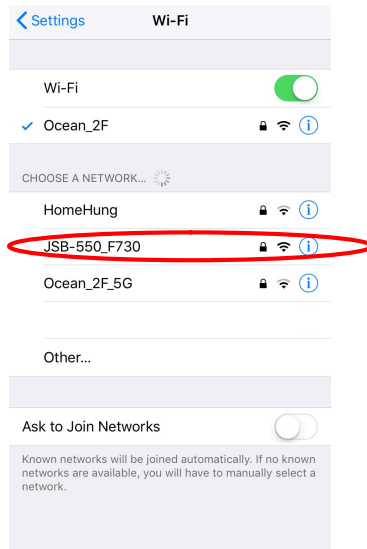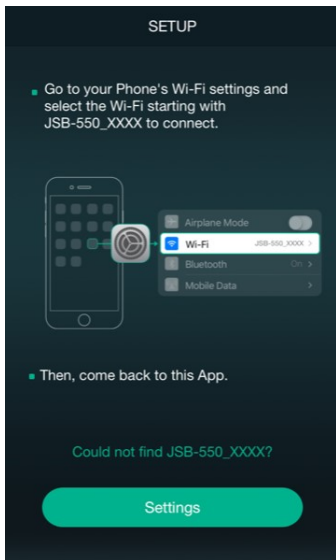


  6. You may need to input the password of the speaker, input **"JENSENJSB-550"** if need, after that your phone would link up with the speaker.

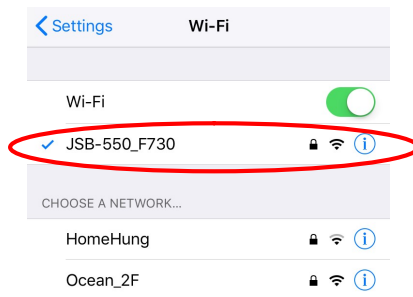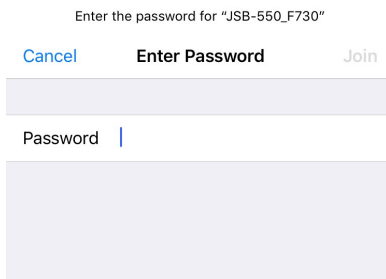


7. Go back to Jensen Apps, select your Wi-Fi network from the list and type the password of your Wi-Fi network when prompted, then touch the “Continue” button.






 
The Speaker would connect with your WiFi network now, touch “Next” to go ahead.

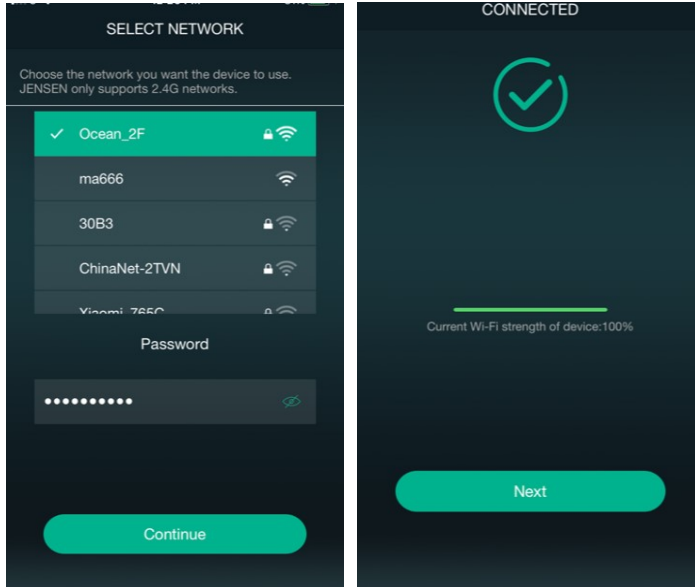

 8. After the JSB-550 is connected to Wi-Fi, touch the “Next” button to select the speaker’s name from the list or set a custom one.

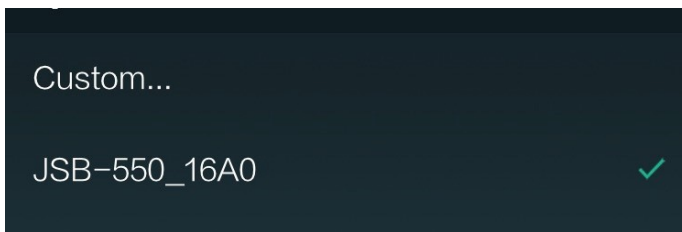

      
9. Sign in your Amazon account and set the Amazon language. Once you finish, you can enjoy the JSB-550 using the Alexa voice control features.

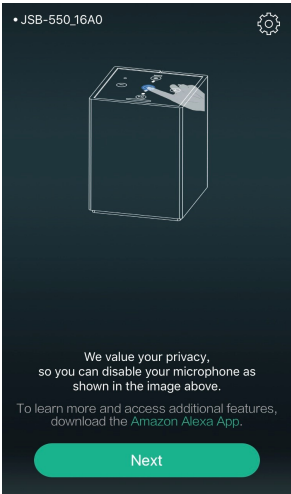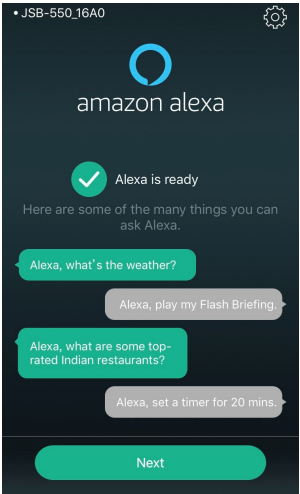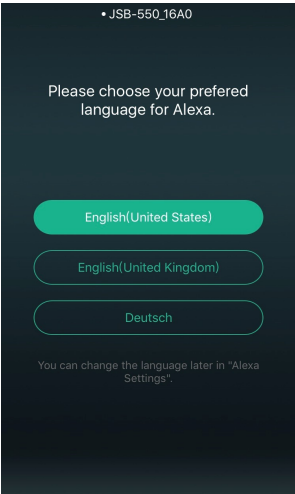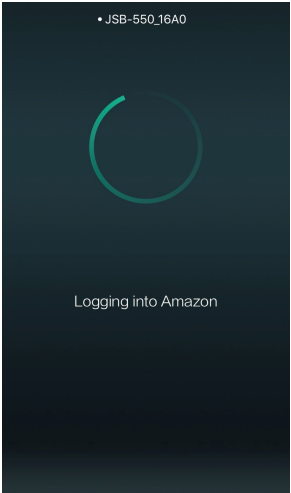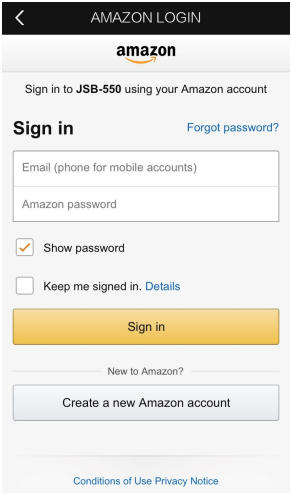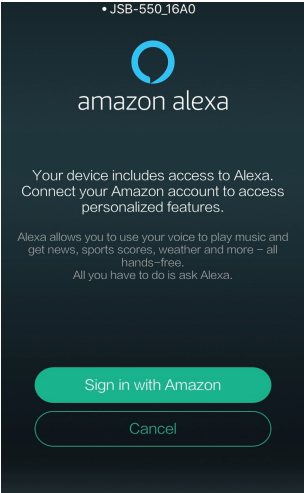

Notes:

To play music with Alexa, you also need to register the Amazon Prime Music service or upload the music on Amazon sever library.

 10. To add more speakers, touch the “+” icon in the top right corner of your smartphone screen and repeat the above steps.

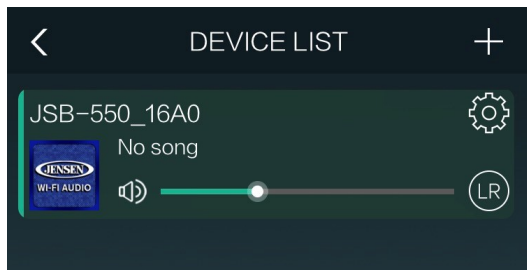

Resetting the JSB-550 Wi-Fi to Factory data reset

1. Turn on the unit and select Wi-Fi mode. Press and hold the WPS button for 5 – 6 seconds and release the button. You will hear “Factory data reset” from the speaker.
2. Wait for unit to restart , then unplug and replug the power and unit would restart again, you will hear the voice prompt for ready to set up.
3. Follow steps 3-8 above.

Note:

Always set-up the Wi-Fi connection with the JSB-550 ON and in Wi-Fi mode.

Do not press the WPS button unless you are instructed to during one of the steps above. This may cause WiFi setup error.