



Docking Digital Music System With Night Light For iPod and iPhone

Made for



iPod



iPhone



USER MANUAL

JiMS-185i

(iPod/iPhone Not Included)

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: JIMS-185i

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions.
2. Keep these instructions
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments / accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
13. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
14. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
15. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
16. Caution marking and nameplate are located on bottom of product.

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Places subject to constant vibrations.
- Dusty, humid or moist places.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE !

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

 
PRODUCT FEATURES

 
The Unit is an iPod/iPhone Docking Music System that incorporates the following features:

- Play and Charge Your iPod nano, iPod touch, iPod classic, iPod video and iPhone
- Auxiliary Input Jack
- FM digital tuner with 10 presets
- Time synchronization
- Digital Volume Control
- Sleep timer function
- Dual Alarm clock function – Wake to radio/alarm or iPod/iPhone
- Snooze function
- Night Light On/Off
- Remote Control

LOCATION OF CONTROLS

MAIN UNIT

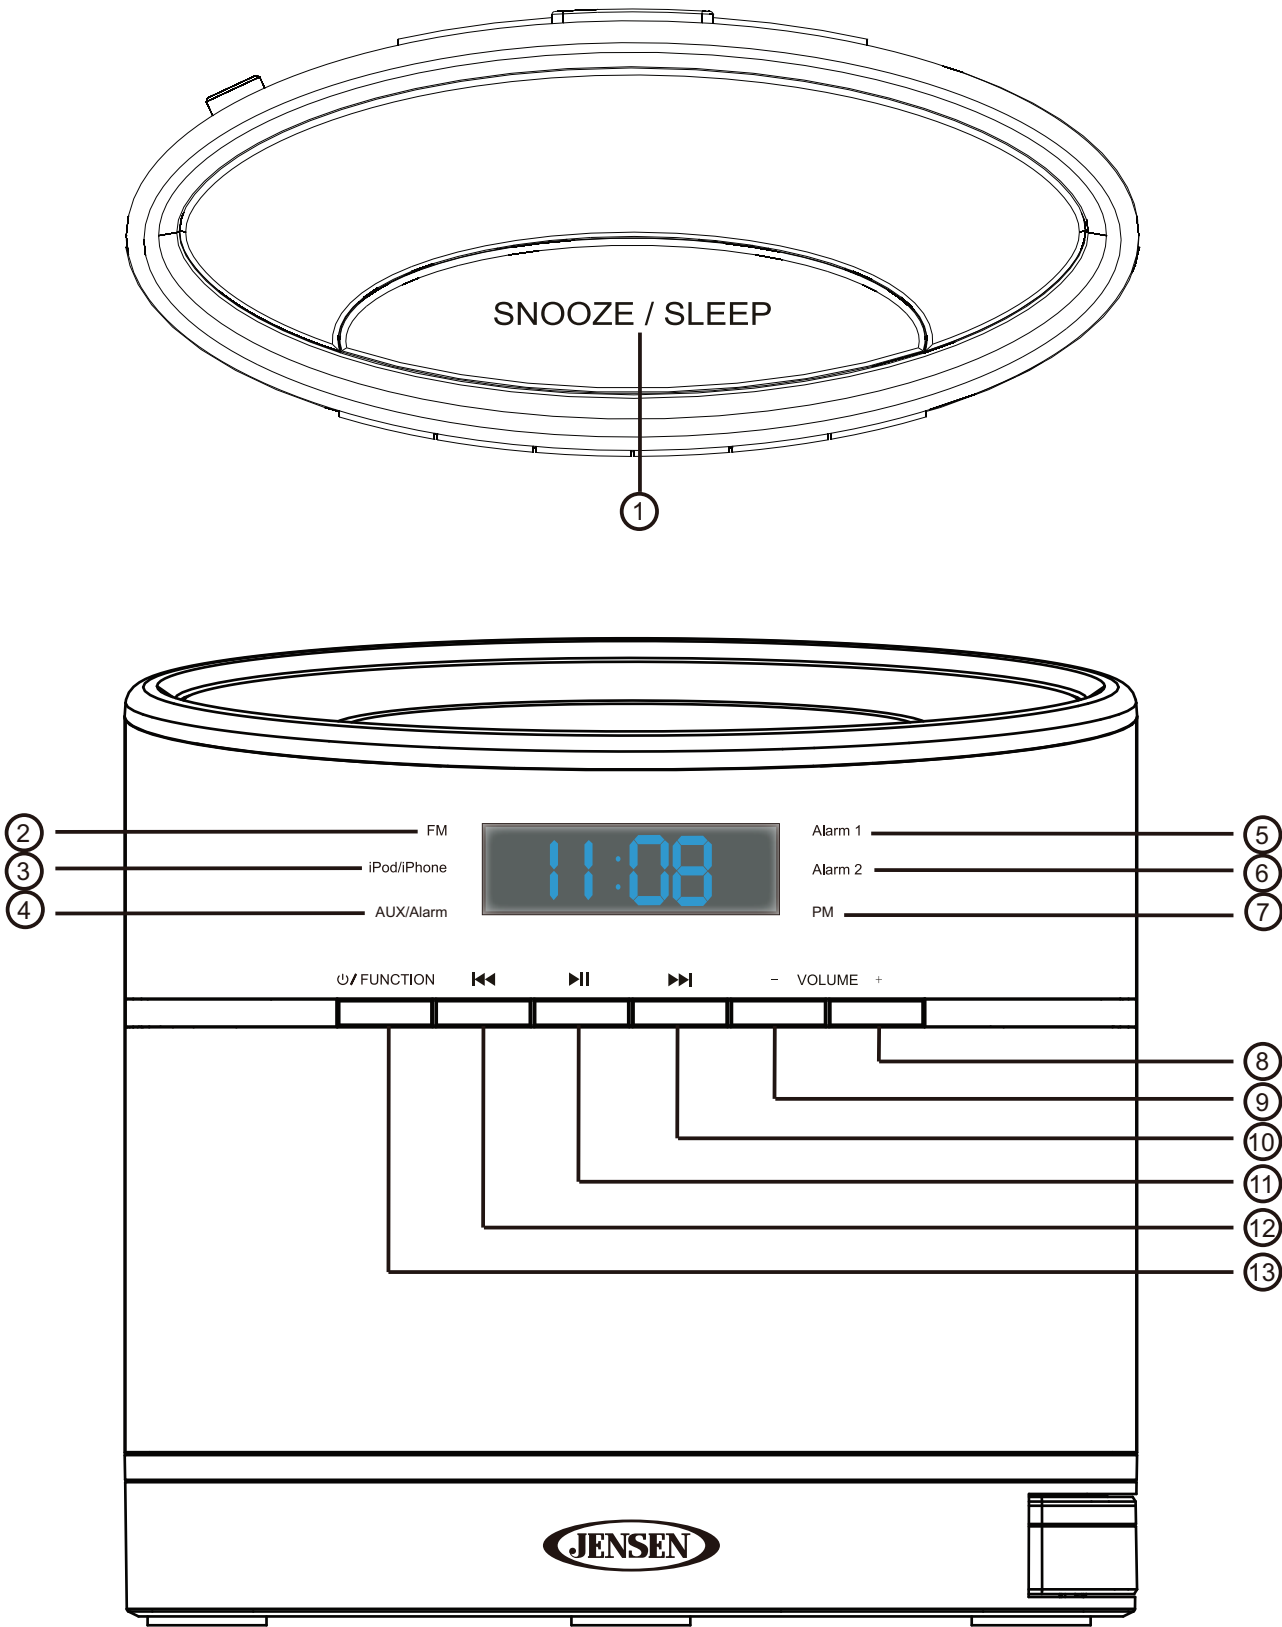

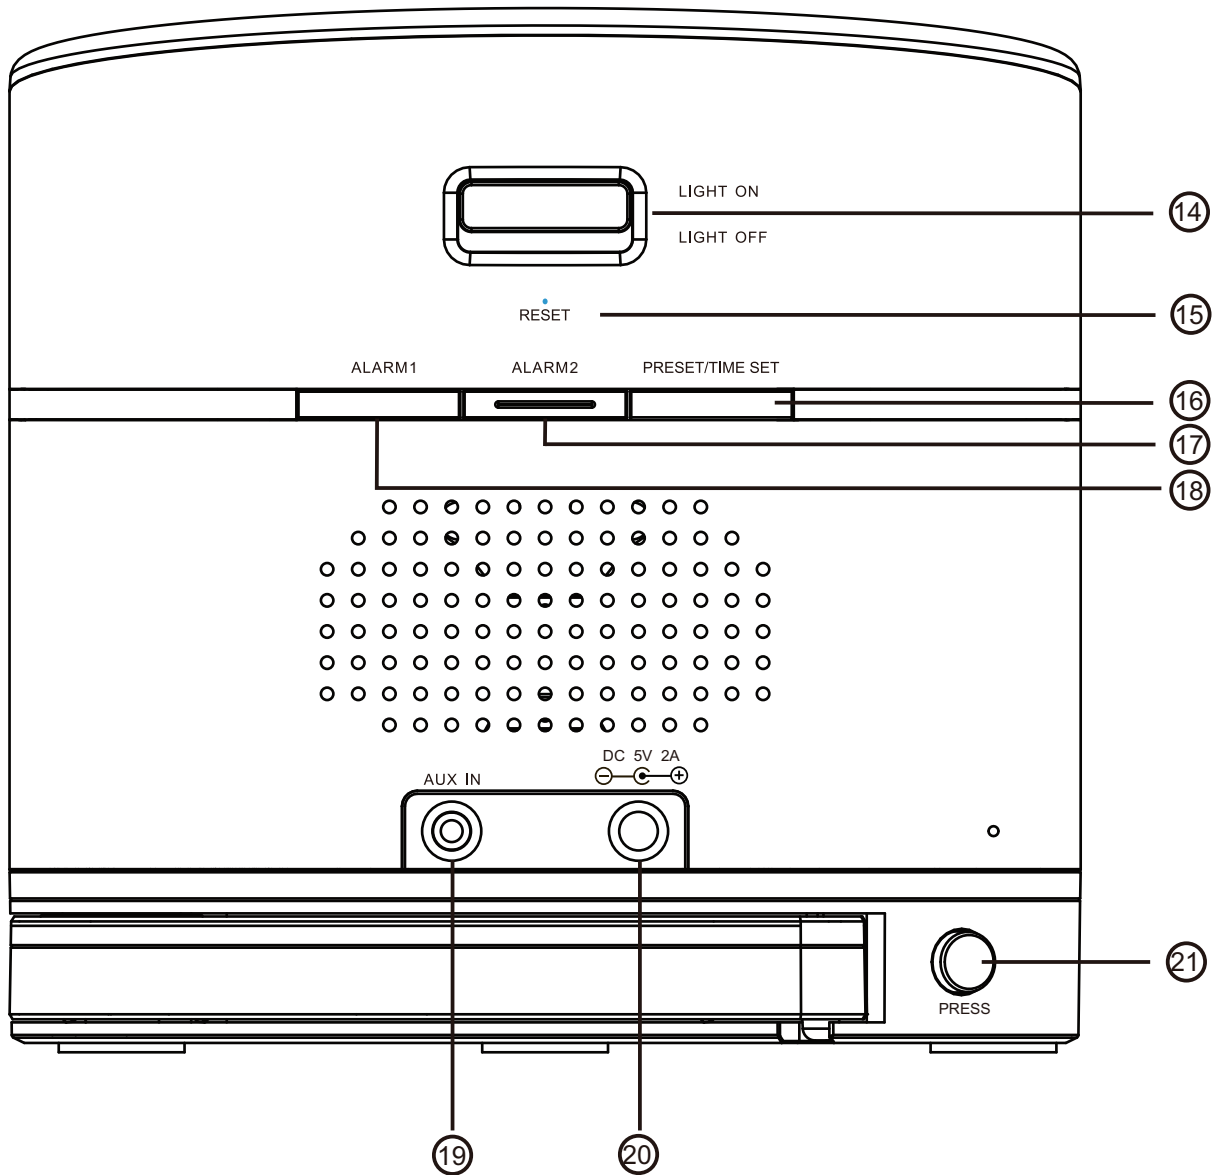

- | | |
|--------------------------------|----------------------------------|
| 1.Snooze/Sleep Button | 12. SKIP/Fast Backward ◀◀ Button |
| 2.FM indicator | 13. Standby ⏻/Function Button |
| 3.iPod/iPhone indicator | 14. Light On/Off Button |
| 4.Aux/Alarm indicator | 15. Reset Button |
| 5.Alarm 1 indicator | 16. Preset/ Time set Button |
| 6.Alarm 2 indicator | 17. ALARM 2 |
| 7.PM indicator | 18. ALARM1 |
| 8.Volume Up(+) Button | 19. AUX IN Jack |
| 9.Volume Down(-) Button | 20. DC IN Jack |
| 10.SKIP/Fast Forward ▶▶ Button | 21. DOCK Release Button |
| 11.Play/Pause ▶ Button | |

REMOTE CONTROL



- 1.Standby Button
- 2.Time set Button
- 3.ALARM 1 Button
- 4.ALARM 2 Button
- 5.SKIP/Fast Backward Button
- 6.iPod Menu Button
- 7.Mute Button
- 8.Function Button
- 9.Dimmer Button
- 10.Snooze Button

- 11.iPod Repeat Button
- 12.Sleep Button
- 13.Preset Button
- 14.iPod Menu Up Button
- 15.SKIP/Fast Forward Button
- 16.iPod Enter Button
- 17.Play/Pause Button
- 18.iPod Menu Down Button
- 19.Volume Up(+) Button
- 20.Volume Down(-)Button

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all accessories from the display carton. Please verify that you have all the following accessories if you are recycling the gift box.

 
- User Manual
- AC Adaptor Input:AC100-240V 50/60Hz
 Output:DC5V 2000mA, center-positive
- Remote control

POWER SOURCE

This unit operates on an external AC adaptor rated at DC5V 2000mA (included) and requires one DC3V type CR2025 Lithium battery (included) for remote control. Do not attempt to operate the unit from any other power source. You could cause damage to the unit and void your warranty.

CONNECTING THE AC ADAPTOR


1. Insert the plug located at the end of the AC adaptor wire into the DC Jack on the back of the unit.
2. Insert the AC Adaptor plug into a power outlet rated at 120V AC ~ 60Hz.

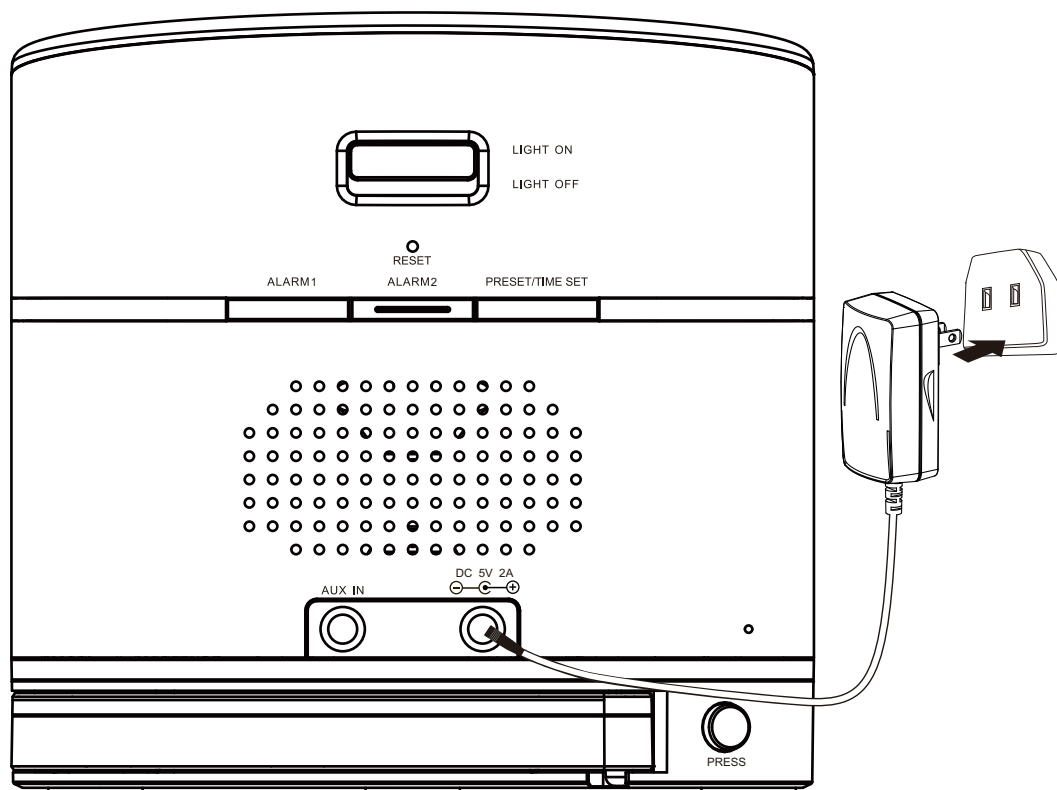

CAUTIONS: The AC Adaptor Plug will only fit into matching AC outlets. This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your AC outlets, you should have the outlet changed by a qualified, licensed electrician. Do not use an adaptor to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

NOTE ON NON-MAGNETICALLY SHIELDED SPEAKERS

 The speaker of this unit is not magnetically shielded and may cause color distortion on the screen of some older TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if unnatural color shifts or image distortion occurs.

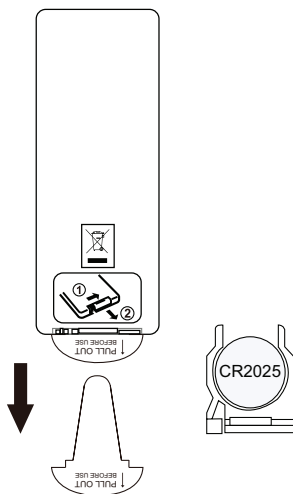

Remote Control

The remote control operates on one CR2025 battery (included). To activate the remote control, remove the insulation tab inserted in the battery compartment.

When the operation of the remote control becomes intermittent or unsatisfactory, replace the original battery with a new 3-volt lithium battery.

1. Slide out the battery holder from the remote control case.
2. Replace the 3V CR2025 battery. Be sure the battery is installed correctly. The remote will not work if the battery is installed with the wrong polarity.

CAUTION:

1. Danger of explosion if the battery is replaced incorrectly.
2. Replace only with the same or equivalent type battery.
3. Insert the battery holder back into the battery slot.

Note: Only use a well-known brand of cell battery to ensure the longest life and best performance.

BATTERY CARE

- If the unit is not used for an extended period of time, remove the battery. An old or leaking battery can cause damage to the unit and may void the warranty.
- Do not dispose batteries in fire. Batteries may leak or explode.
- Do not try to recharge batteries that are not intended to be recharged; they can overheat, rupture and leak (Follow battery manufacturer's directions).
- Only an adult should replace the battery. Do not leave it lying around where a young child or pet could play with swallow it.

SETTING THE TIME

AUTOMATIC TIME SYNC WITH iPod /iPhone

After plugging in the AC adaptor, "12:00" will appear and start blinking on the LED display. If you have an iPod or iPhone with the correct time showing, you can dock it securely onto the connector in the Docking Bay to take advantage of Automatic Time Sync.

1. When "12:00" is blinking on the LED Display after the initial power connection, dock your iPod/iPhone onto the connector in the docking bay
2. Your iPod/iPhone will communication with the unit and automatically sync the time with your iPod/iPhone time and show it on the LED Display after about 5 seconds.

Tips:

- The iPhone receives constant updates from the phone service provider, so the iPhone time will always be accurate.
- The time on your iPod was updated with your computer the last time the iPod was attached and synced with it. We recommend you to calibrate your computer's system clock and sync your iPod with iTunes right before docking into the unit to make sure the current time is accurate.
- The Automatic Time Sync does not support earlier iPod models, like iPod mini and iPod photo (4G/color display)
- When first docked, the iPod/iPhone will run an authentication process internally. The display will be off during this authentication process and the unit may not respond if any keys are pressed for about 5 seconds.
- A 59 seconds difference between the clock on the unit and the synced iPod/iPhone is possible.
- If you need to change the time after using the automatic time sync, you will have to do it manually.
- If you disconnected the power outlet longer than 3 minutes, you need to automatic time sync with your iPod/iPhone again.

Note:

1. The clock has to be set the first time you plug the unit in.
2. The Clock is default to 12 Hour format mode.

SETTING THE CURRENT TIME MANUALLY

1. With the unit in standby mode, press and hold the **PRESET/TIME SET** button on the main unit or press the **TIME SET** button on remote control until "12Hr" is blinking on the LED Display.
2. Press the **◀◀** or **▶▶** button on main unit or remote control to switch between 12 hour (12Hr) and 24 hour (24Hr) format. Press the **PRESET/TIME SET** on the main unit or **TIME SET** button on remote control again to confirm your time format selection.
3. The Hour digits will start to blink. Press the **◀◀** or **▶▶** button on main unit or remote control to set the correct hour. Press the **PRESET/TIME SET** on the main unit or **TIME SET** button on remote control again to confirm.

Note: Make sure the hour is set so that the **AM** or **PM** indicator is displayed correctly.

4. The Minute digits will start to blink. Press the **◀◀** or **▶▶** buttons on main unit or remote control to set the correct minute. Press the **PRESET/TIME SET** on the main unit or **TIME SET** button on remote control again to confirm.

ALARM OPERATIONS

This unit provides two different wakeup times, **ALARM1** and **ALARM2**. You can choose to use them independently or simultaneously: **ALARM1**, **ALARM2** or both **ALARM1** and **ALARM2**.

SETTING THE ALARM(S)

Note:

- Alarm time(s) can only be set in Standby mode.
- When alarm time is reached the clock display & the alarm indicator will blink together.
- Don't dock an iPod/iPhone onto the connector in the docking bay when the Alarm is sounding .

1. Press and hold the **ALARM 1** button on main unit or remote control, the **ALARM 1** indicator will go on, then press the **ALARM 1** button again the hour digits will blink.
2. When the hour digits are blinking, press the **◀◀** or **▶▶** buttons on main unit or remote control to set the hour.
3. Press the **ALARM 1** button on main unit or remote control to confirm, the minute digits will now begin blinking.
4. When the minute digits are blinking, press the **◀◀** or **▶▶** buttons on main unit or remote control to set the minutes.
5. Press the **ALARM 1** button on main unit or remote control to confirm the alarm time, a wake source indicator will begin blinking. Press the **◀◀** or **▶▶** buttons on main unit or remote control to select the source you want to wake to, FM Radio or iPod/iPhone.

6. Press the **ALARM 1** button on main unit or remote control to confirm, Press the **◀◀** or **▶▶** buttons on main unit or remote control to set the wake up volume level.
 7. Press the **ALARM 1** button on main unit or remote control button to confirm.
 8. Repeat steps 1 to 7 using the **ALARM 2** button when setting up **ALARM 2**.
- Note:** When “Wake to Radio” is selected, make sure the radio station you want to wake to is tuned. If “Wake to iPod” is selected but an iPod or iPhone is not docked, the Alarm source will be redirected to the Alarm automatically when the alarm time is reached. If “Wake to Alarm” is selected, the alarm will beep when the set Alarm time is reached.
9. If you want to turn off the alarm, press the **ALARM 1** or **ALARM 2** buttons on the main unit or remote and the **Alarm1** or **Alarm 2** indicator will go off.
 10. When the wake time is reached, the selected source, radio or iPod/iPhone or Alarm will begin to play. The sound will starts playing softly and gradually becomes louder until your preset volume level is reached. The alarm continues to sound for 60 minutes if no button is pressed and the unit will reset itself for the following day.
 11. To stop the alarm after the preset time is reached and the source begins to play, press the **STANDBY** **⏻** button on main unit or remote control to stop the alarm.
 12. Or press the **SNOOZE** button on main unit or remote control, the alarm will silence for nine minutes, the sound once again,
- Note:** The Snooze function can be used again repeatedly, but only within one hour from the original wake time.

RADIO OPERATION

TUNING THE RADIO

1. Press and hold the **STANDBY** **⏻** button on the main unit or press the **STANDBY** **⏻** button on remote control to turn on the unit. Press the **FUNCTION** button on main unit or remote control repeatedly to select the RADIO mode. The **FM** indicator will go on & the receiving frequency will appear on LED Display.
2. To automatically scan to next available radio station, press and hold either the **◀◀** or **▶▶** buttons on main unit or remote control for about 2 seconds until the frequency readout on display begins to scan then release the button. The tuner will stop on the first strong station signal it finds. The frequency readout will revert to the current time after about 5 seconds.

3. To manually tune to a weaker station that may have been skipped during the automatic tuning, tap the **◀◀** or **▶▶** buttons on main unit or remote control repeatedly until the station is properly tuned. The frequency readout will revert to the current time after about 5 seconds.
4. Adjust the sound level by pressing the **VOLUME - / +** button on main unit or remote control.

Note:

- Manual tune to select weaker stations that might be bypassed during automatic tuning.
- If the automatic tuning does not stop on the exact frequency of the station, for example, it stops on 100.9 MHz instead of 100.8 MHz, use the manual tuning method to "fine tune" to the exact frequency of the desired station.
- If a station is broadcasting in stereo, the unit will automatically receive the stereo broadcast.

Hints for the Best Reception

- To obtain the best FM Stereo reception, unwrap and fully extend the FM Antenna and adjust the position of the wire for best station reception.

Setting the Radio Station Presets

The unit allows you to store up to 10 FM stations for easy recall at any time.

1. In the FM mode, tune to the radio station you want to store in memory using the **◀◀** or **▶▶** buttons on the main unit or remote control.
2. Press and hold the **PRESET /TIME SET** button on the main unit or the **PRESET** button on remote control. The preset channel number "ch 1" will be flashing on display.
3. To change the preset channel number location, press the **◀◀** or **▶▶** buttons on main unit or remote control to step through the preset locations (ch 1– ch 10).
4. To confirm the preset location, press the **PRESET/TIME SET** button on the main unit or the **PRESET** button on remote control.
5. To store up to 10 FM station presets, repeat steps 1 to 4 above.

Note:

1. There will be a brief delay for programming, the unit will automatically switch back to normal tuner mode in 5 seconds.
2. You can overwrite a present station by overwriting and storing the new frequency in its place.

Recall Preset Radio Stations

1. Set the unit to RADIO mode.
2. Press the **PRESET/TIME SET** button on the main unit or the **PRESET** button on remote control and the preset channel appears on the display. Press the **◀◀** or **▶▶** button to recall preset stations.
3. Press the **PRESET/TIME SET** button on the main unit or the **PRESET** button on remote control again to confirm.

LISTENING TO YOUR iPod/iPhone

CHARGING YOUR iPod OR iPhone

This unit plays and charges various iPod and iPhone models in all modes using the 30-pin docking connector.

Even if the unit is in standby mode, once your iPod or iPhone is properly docked, the charging process will start automatically.

LISTENING TO MUSIC ON YOUR iPod/iPhone

1. Press the Dock Release button on the back the unit, the docking bay will slide out. Dock your iPod/ iPhone carefully and securely onto the Docking Connector.

Note: Please be careful when placing the iPod / iPhone into the docking bay to avoid damaging the 30-pin connector on the iPod/iPhone or on the docking system.

2. Press and hold the **STANDBY** ⏻ button on the main unit or press the **STANDBY** ⏻ button on remote control to turn on the unit.

3. Press the **FUNCTION** button on the main unit or remote control repeatedly to select iPod mode. The iPod/iPhone indicator will go on. The iPod/iPhone will ready for playing.

4. After selecting your favorite song, press the **▶||** button on main unit or remote control to play or pause iPod/iPhone playback.

5. Press the **◀◀** or **▶▶** buttons on main unit or remote control to skip to the next or previous song.

6. Press and hold the **◀◀** or **▶▶** button on main unit or remote control for fast-forwarding or fast-rewinding during playback.

7. From the remote control, press the **MENU,ENTER** and **▲/▼** buttons on the remote control to control the iPod/iPhone menu, menu up/down and enter selection.

Note:

1.The iPod/iPhone Menu Control function will work with most iPod touch/iPhone models in iPod mode. Please make sure your iPod/iPhone is in Music or iPod mode. The function will NOT work if the iPod/iPhone is the on the MAIN or LOCKED screen.

2.The iPod menu navigating function of remote control will work on most iPhone or iPod models except for iPod nano 6th generation.

8. Adjust the sound level by pressing the **VOLUME - / +** button on main unit or remote control.

Note: The volume level cannot be adjusted using the volume control on your iPod/iPhone after being docked.

AUXILIARY INPUT

This unit provides an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players and older, non-dockable iPods (except iPod shuffle 3rd generation) and listen to your external source through the speakers of this system.

1. Use an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end into the Aux-in jack of the main unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Press and hold the **STANDBY** ⏻ button on the main unit or press the **STANDBY** ⏻ button on remote control to turn on the unit.
4. Press the **FUNCTION** button on the main unit or remote control repeatedly to select AUX mode. The AUX/Alarm indicator will go on.
5. Turn on the external audio device.
6. The volume level can now be controlled through the main unit. Operate all other functions on the auxiliary device as usual.

Note:

- If you are connected to the Line Out Jack of your external device then you only need to adjust the volume control on this unit. If you are connected to the Headphone Jack of your external device then you may need to adjust both the volume controls of your external device and this unit to find the most desirable volume setting.
- Press and hold the **STANDBY** ⏻ button on main unit or press the **STANDBY** ⏻ button on remote control to turning off the unit when you finish listening. Don't forget to switch off the power of your external device as well.

SLEEP TIMER

You can use the sleep timer to automatically turn off the unit when the selected sleep duration has elapsed when in Radio, iPod/iPhone or AUX modes.

1. Turn the unit on and either dock your iPod/iPhone or tune to the desired radio station.
2. Press the **SLEEP** button repeatedly to select the desired sleep time. The sleep timer can be set for 90-10 minutes in 10 minute decremental steps. The unit will stop and go into standby mode automatically when the selected sleep duration has elapsed.
3. To cancel the sleep timer, press the **SLEEP** button on main unit or remote control until timer shows "OFF".
4. To turn the unit off before the sleep time has elapsed, press **STANDBY** ⏻ button at any time.

DIMMER

Press the **DIMMER** button to adjust the LED Display intensity from High/Mid/Low to obtain the best clarity of LED Display readout.

RESETTING

If the system does not respond or has erratic or intermittent operation, you have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, press the reset button on the back of the unit to reset the unit.

Note: Even though the unit has been internally reset when you press the "RESET" button, the clock time may still need to be adjusted to the current time. Please follow the instructions in the "Setting the Clock" section above.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. For better Clock Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
4. Unplug the unit from the electrical power outlet immediately in case of malfunction.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
The unit does not respond (no power).	AC Adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
iPod/iPhone does not respond to the speaker system.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseal it on the dock.
	Your iPod/iPhone is locked up.	Please make sure that your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for info on resetting the iPod/iPhone.
	iPod/iPhone is not iPod mode	Make sure the function of iPod/iPhone is set to music or iPod mode.
iPod/iPhone does not charge.	iPod/iPhone is not installed properly.	Remove your iPod/iPhone from the dock and check for obstruction on the connectors in the dock and on your iPod/iPhone. Then reseal it in the dock.
	iPod/iPhone is locked up/ frozen. iPod/iPhone battery has problem.	Please make sure your iPod/iPhone is working properly before docking into the unit. Please refer to your iPod/iPhone manual for details on resetting.
Weak FM reception	FM antenna wire is not fully extended.	Extend or reposition the wire antenna for best reception.
Sound is distorted.	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	If the iPod/iPhone original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
		If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower volume.

SPECIFICATIONS

Power Requirement

AC-DC adaptor:	Input: AC 120V, 60Hz
Main unit:	DC input: DC5V/ 2000mA
Remote Control:	1 x 3V CR2025 Lithium Battery

Frequency

FM:	87.5-108MHz
-----	-------------

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod and iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone or iPod may affect wireless performance.

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

90 DAY LIMITED WARRANTY AND SERVICE

VALID IN THE U.S.A . ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$35.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA.
1-800-777-5331

To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>

0812

Printed in China