

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SMPS-622

Serial Number: _____

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments / accessories specified by the manufacturer.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
12. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
13. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
14. There is a high energy rechargeable battery inside the speaker box, do not throw it into fire to avoid danger of explosion.
15. Do not charge the internal rechargeable battery longer than specified to prevent danger of fire. Overcharging rechargeable batteries may shorten their life span.
16. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
17. Caution marking and nameplate are located on back of product.

IMPORTANT NOTES

Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- Dusty, humid or moist places.
- Places subject to constant vibration.

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

PRODUCT FEATURES

The SMPS-622 is a Bluetooth portable stereo speaker with the following features:

- Auxiliary input jack to play music from your iPod or digital audio player
- Wireless playback of music from your cell phone via the Bluetooth connection

- Bluetooth Play/Pause control button
- Up to 33 feet (10 meters) operating range
- Digital volume control


PREPARATION FOR USE


ACCESSORIES

Unpack the unit carefully to remove all the accessories from the packing. Verify that the following accessories are present before setting up the unit.

- Main Unit X 1
- USB charging cable X 1
- User Manual X 1

LOCATION OF CONTROLS

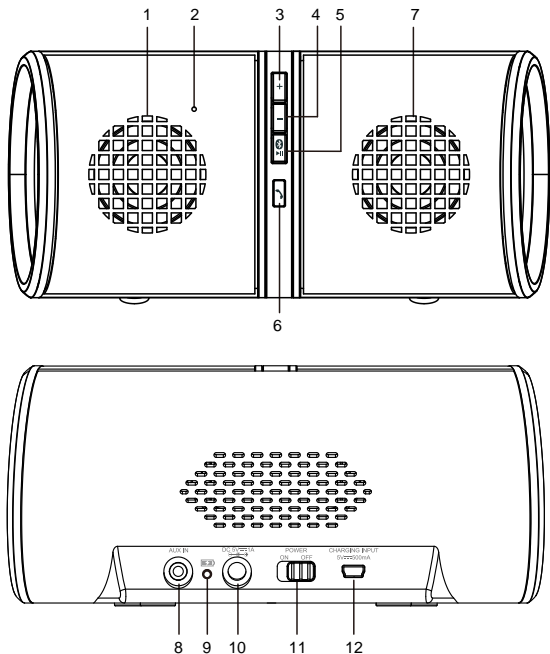

1. Left Speaker
2. Built in Microphone
3. Volume Up (+) Button
4. Volume Down (-) Button
5. Bluetooth Play/Pause / Pairing button
6. Phone  Button with LED backlight indicator
7. Right Speaker
8. AUX IN Jack
9. Battery charging LED
10. DC IN Jack
11. Power ON/OFF Switch
12. Mini USB charging Port

LED Status Indicators


LED Position	Discription	LED Status
Power/Function Indicator (Front Panel)	No Power	LED Off
	Power on/Ready to link	Blue LED flashing fast
	Power on/BT Connected	Blue LED flashing slow
	Power on/No BT Connection	Blue LED flashing very slow
	Power on/Pick up the phone	Blue LED lights steadily
	Power on/AUX Mode	Red LED lights steadily
Charging Indicator (Rear Panel)	No Charging	LED off
	Charging	Red LED on
	Fully charged	Green LED on

Remarks : Flashing Fast - less than 1 second apart.

Flashing Slow - around 2 seconds apart.

Flashing Very Slow - around 5 seconds apart.

Key Buttons Definition

No	Button names	Button action	Aux mode	Bluetooth mode
1	VOL+	Press	Increases the volume level	
2	VOL-	Press	Decreases the volume level	
3	PLAY/PAUSE	Tap	N/A	Play/Pause
		Press and hold for 2 seconds	N/A	Searching/Pairing
		Press and hold for 10 seconds	N/A	Clear all bluetooth connection
4	Phone 	Press and hold	N/A	hang up / re-dial call
		Tap		Pick up the call

POWER SOURCE

This unit operates on built-in Li-Polymer battery. Before first use, please charge the speakers for at least 6.5 hours because the battery may not fully charged, even though the Green charging LED lights.

CHARGING INSTRUCTION

This unit operates on a built-in Li-Polymer battery that can be recharged either using the USB port on your computer or from an AC adaptor (not included) with a rated output of DC 5V, 1000mA.

Note: The mini USB charging port and the DC input jack located on the back of this unit are designed for charging the built-in Li-Polymer battery. The unit will still operate normally while charging, but doing this may reduce the battery life.

CHARGING THE BATTERY WITH mini USB PORT

- Charge the built-in Li-Polymer battery a minimum of 6.5 hours prior to first use. Plug the unit into a USB port on your computer or into a USB power adaptor (not included) using the included USB cable.
- The Red charging LED located on the back of the unit turns Green when the battery is fully charged.
- Unplug the USB cable from the power source once the battery is fully charged.
- After prolonged use, the battery voltage may discharge and operation might become intermittent. When this happens, please recharge the internal battery.

CHARGING THE BATTERY WITH AC ADAPTOR (Not included)

1. Charge the built-in Li-ion battery a minimum of 6.5 hours prior to first use. Firmly and securely insert the DC plug of the adaptor into the DC Jack on the rear of the unit.
2. Plug the AC-DC adaptor into a wall outlet of 120V~, 60Hz. Connecting this system to any other power source may cause damage to the system.
3. The Red charging LED located on the back of the unit turns Green when battery is fully charged.
4. Unplug the adaptor from the power source once the battery is fully charged.
5. After prolonged use, the battery voltage may discharge and operation might become intermittent. When this happens, please recharge the internal battery.

- Note:**
- 1.) Charging time will vary if you are listening to music while charging the speaker battery. We recommend you switch off the speaker power during the charging process or until the speaker batteries are fully charged.
 - 2.) To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
 - 3.) Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.



Battery Note and Care

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Li-ion batteries. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

NOTE: These speakers are not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the speakers further away from the TV or monitor if unnatural color shifts or image distortion occurs.

