 




Note: This is a Consumer Electronic product and not a toy. It is not for designed for use by anyone under 12 years of age.

®™ M&M's the letter M and M&M's characters are registered trademarks of Mars, Incorporated and its affiliates. Manufactured and distributed under license by Brands Unlimited, LLC, Ridgefield, NJ 07087. ©Mars™, Inc.2011 www.mms.com

WARNING
TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

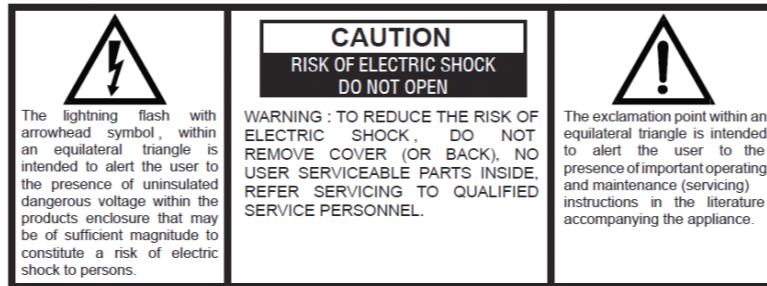

The warning icon with an overhead symbol, within intended to alert the user to the presence of unshielded dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
UNSHIELDING TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The warning icon within an equivalent triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read all instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

2

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
18. The marking information is located at the bottom of apparatus.
19. **CAUTION**
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

3

CAUTION:
TO PREVENT ELECTRIC SHOCK,
MATCH WIDE BLADE OF AC PLUG TO WIDE SLOT. FULLY
INSERT.

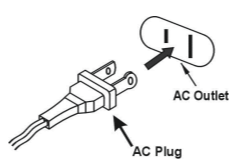

COMPLIANCE WITH FCC REGULATION

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
4

PROTECT YOUR FURNITURE!!

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.
To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

5

1. BAND SWITCH
2. HOUR SET
3. MINUTE SET
4. ALARM SET
5. POINTER
6. SLEEP SET
7. TIME SET
8. AUTO INDICATOR
9. SNOOZE OFF
10. VOLUME CONTROL
11. ON/OFF/AUTO
12. TUNING CONTROL
13. BATTERY BACK-UP
14. AC CORD
15. FM WIRE ANTENNA(Not Shown)
16. PM INDICATOR

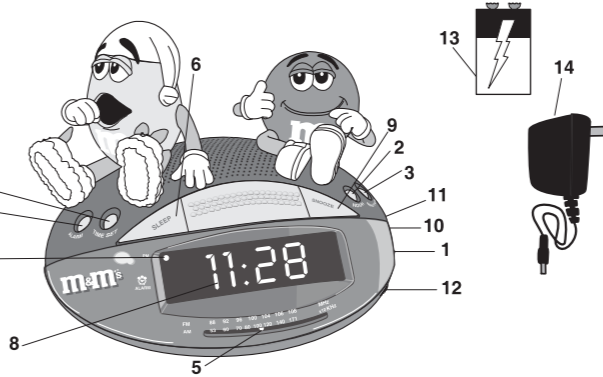

POWER SUPPLY

Before connecting to the power supply ensure that the supply corresponds to the rating information on the back of the apparatus: 120V ~60Hz
DC Power: 9V battery type 6LR61(not provided) for clock back-up system only. An alkaline type battery is recommended. For optimum performance, this Battery should be replaced every 6 months.

1. Insert the AC power cord (14) into a convenient standard AC wall outlet.
2. Connect the 9V battery inside the compartment at the bottom of the unit (13).

BACK-UP SYSTEM Ensure that the unit will continue to operate as normal during an AC power disruption in order to preserve the battery life the display will not light. All clock setting will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink "12:00" to indicate that you have to redo the time and alarm setting.

WARNING
Disconnect the mains plug from the supply socket when not in use. To avoid the risk of electric shock do not remove the cover of the apparatus. There are no user serviceable parts inside. To prevent fire or shock hazard do not expose the apparatus to rain or moisture.

6

SETTING THE TIME

1. Set the ON/OFF/AUTO Switch (11) to "OFF". Connect the Main Cord to the power supply. The clock display will blink "12:00" to indicate that you have to set your desired time.
2. Press and hold Time Set Button (7) and press Minute Set Button (3), or Hour Set Button (2) to adjust to your desired time.
3. Release Time Set button (7) to store your setting in memory.

LISTENING TO THE RADIO

1. Set the ON/OFF/AUTO Switch (11) to "ON" position.
2. Set to FM or AM position with the Band Switch (1).
3. For a better reception in FM, extend the wire antenna (15). In AM, rotate the unit.
4. Adjust the Volume Control (10) to the desired level.
5. Select your desired radio station by Tuning (12)
6. To turn off the radio, set the ON/OFF/AUTO Switch (11) to "OFF".

SETTING THE ALARM AND WAKE-UP MODE

1. Press and hold the Alarm Set Button (4) and Minutes Set Button (3), or Hour Set Button (2) to adjust your desired alarm time, then release the ALARM Set Button (4) to store your setting in memory.
2. To wake up radio, follow 1 to 5 in "LISTENING TO THE RADIO", then select to the AUTO position (11), the Auto indicator (3) will light.
3. To wake-up to alarm sound, Switch the ON/OFF/AUTO Switch (11) to AUTO position. Turn the volume control – OFF (2) fully anti-clockwise to select the BUZZ position, the AUTO indicator(3) will light.
4. The alarm can be temporarily stopped for 9 minutes by pressing the Snooze off Button (9).
5. The alarm will activate again after 24 hours unless the ON/OFF/AUTO Switch (11) is set to "OFF".

Note: When setting the time or alarm time, observe the PM indicator (16) to ensure you have set to the correct 12 hour period. When setting alarm time always remember to release the Minute Set or Hour Set Button before releasing the Alarm Set/Off Button to ensure that the real time will not be affected.

SLEEP

1. Set your favorite radio station, slide the ON/OFF/AUTO Switch (11) to "OFF" or "AUTO".
2. Press the Sleep Set Button (8) and the display 59 minutes as default timer period. The setting may be decreased by pressing Minute Set Button (3) while holding down "Sleep set (8) simultaneously.
3. The sleep timer may also be set up to 1 hour 59 minutes by pressing "Hour set (2) once while holding down "Sleep set (8) simultaneously.

7

4. The radio will play for the set period and turn itself off automatically off.
5. To turn off the radio prior to the end of sleep timer setting simply press "SNOOZE off" (9) once.

CLEANING

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasives or alcohol-based products risks damaging the appliance.
- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.
- Make sure to disconnect the mains lead from the supply before cleaning.

WARNING

1. **Dripping Warning:** The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
2. **Ventilation Warning:** The normal ventilation of the product shall not be impeded for intended use. The ventilation should not be impeded by covering the table-cloths, curtains, etc.,
3. **Flame:** No naked flame sources such as lighted candles, should be placed on the product.
4. **MAINS:** Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device will remain readily operable.
5. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
6. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
7. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.
8. Minimum 5cm distances around the apparatus for sufficient ventilations.
9. Attention should be drawn to the environmental aspects of battery disposal.
10. The use of apparatus in moderate climates.

SPECIFICATIONS

Power Source: AC 120 V ~60Hz
AM 520 – 1710 kHz
FM 88 – 108 MHz

Marking information is located at rear enclosure of the apparatus.

Due to continuous product development, design and specifications are subject to change without notice.

8

90 DAY LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 90 days from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
 - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

9

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for \$10.00 to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectrand.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL 60634, USA
1-800-777-5331

To register your product, visit the link below to enter your information.
<http://www.spectrand.com/wform.htm>

Printed in China

10