

*Studebaker*

# Personal Bluetooth CD/MP3 Player with Bookmark Feature and FM PLL Radio

## SB3706 OWNER'S MANUAL



BC

Please read this Instruction Manual carefully before using  
the unit and retain it for future reference

Please contact Spectra Customer Service at 1-800-777-5331 if  
you have any questions about operating this product

## COMPLIANCE WITH FCC REGULATIONS

**FCC ID: 2A38HSB3706**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

 
This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

**Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

## CAUTION

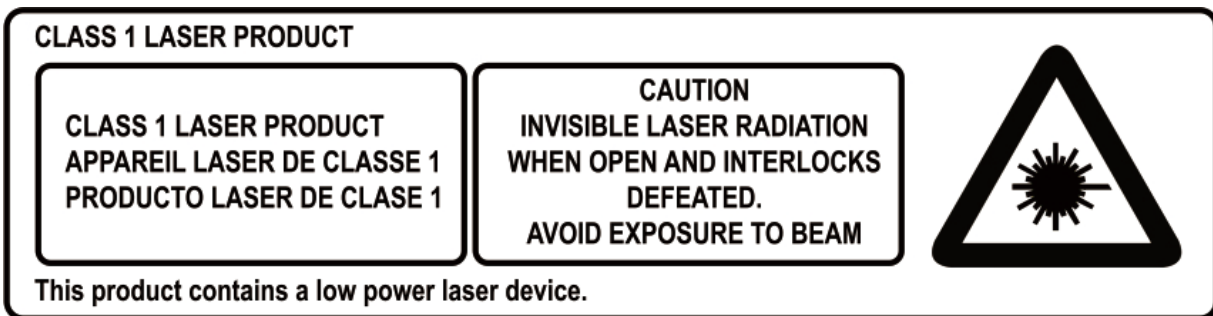

Follow the advice below for safe operations.

### ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door

is still open.

- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

## **PROTECT YOUR FURNITURE**

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.

To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

## DEAR STUDEBAKER ® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Once you have established a comfortable sound level: Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



 
### Customer's Record:

The serial number of this product is found on its back cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: SB3706

Serial Number:

## LOCATION OF CONTROLS

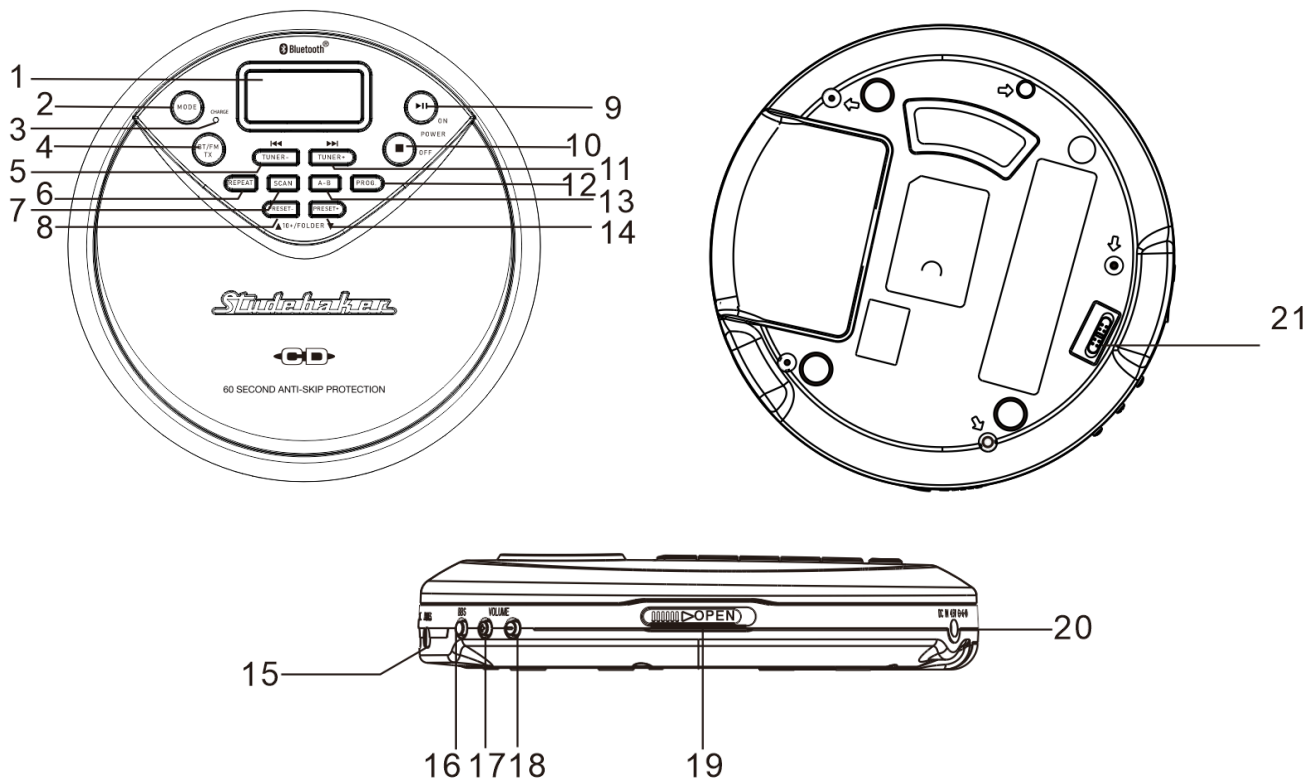

- |     |                            |     |                          |
|-----|----------------------------|-----|--------------------------|
| 1   | LCD DISPLAY                | 12  | PROGRAM BUTTON           |
| 2   | MODE BUTTON                | 13  | A-B BUTTON               |
| 3   | BATTERY CHARGING INDICATOR | 14  | PRESET+ / FOLDER+ BUTTON |
| 4   | BLUETOOTH/FM TX BUTTON     | 15  | HEADPHONE JACK           |
| 5   | ◀◀ / TUNER- BUTTON         | 16  | EQ/BBS ON/OFF BUTTON     |
| 6   | REPEAT BUTTON              | 17  | VOLUME + BUTTON          |
| 7   | FM SCAN BUTTON             | 18  | VOLUME - BUTTON          |
| 8   | PRESET- / FOLDER- BUTTON   | 19. | CD DOOR OPEN SWITCH      |
| 9.  | POWER ON / CD ▶▶ button    | 20. | USB-C JACK               |
| 10. | POWER OFF / CD ■ button    | 21  | HOLD SWITCH              |
| 11  | ▶▶ / TUNER + BUTTON        |     |                          |

## POWER SOURCE

### Built-in Lithium Battery

This unit operates on a built-in Li-ion battery that can be recharged either by using DC 5V, 1A USB charger (not included) or from an AC adaptor (not included) with a rated output of DC 5V, 1000mA. The internal battery may not be fully charged out of the box, even if the RED charging LED turns off. We recommend that you charge the SB3706 for at least 5 hours before first use.

**Note:** The Type-C USB and DC IN jack are located on the righthand side of the unit. They are designed for charging the internal Li-ion battery. The unit will still operate while charging, but doing this may reduce the battery life and increase the charging time.

### LOW BATTERY INDICATOR

When using battery power to operate this unit and the battery power becomes weak, the "BATTERY LOW" will show on display for few seconds and repeat. You are recommended to charge the rechargeable battery.

**Note:**

1. After prolonged use, the battery voltage will discharge, and operation might become intermittent. When this happens, please recharge the internal battery.
2. Charging time will vary if you are listening to music while charging the unit battery. We recommend you turn off the unit power during the charging process or until the unit battery is fully charged.
3. To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
4. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.



### BATTERY NOTE AND CARE

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Li-ion batteries. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

### CHARGING THE BATTERY USING THE TYPE C USB PORT

1. Charge the built-in Lithium battery a minimum of 5 hours prior to first use.
2. Use the included charging cord and plug the SB3706 into a USB power adaptor (not included).
3. The BATTERY CHARGING INDICATOR (#3) will light solid Red showing that the internal battery is being charged.
4. After the battery is fully charged, the BATTERY CHARGING INDICATOR (#3) will turn off.
5. Unplug the USB to Type-C cable from the power source once the battery is fully charged.



## NOTE

 
1. You can use an USB AC adaptor with an output current of 500 mA or computer USB port as well, but it may take a very long time (10 hours or more) before the SB3706 has a full charge. When using such a USB AC adaptor, it's recommended that you turn off the SB3706 power before charging the battery.
2. Use of a USB AC adaptor with an output current of less than 500 mA is not guaranteed to charge the unit's battery.

## CHARGING THE BATTERY USING THE AC Adaptor (Not included)

Use an AC adaptor with output DC 5V  $\equiv$  1000mA.

1. Plug the AC adaptor (not included) into normal AC power outlet socket.
2. Insert the DC plug of the AC adaptor cord into the DC IN JACK.
3. The BATTERY CHARGING INDICATOR (#3) will light solid Red showing that the internal battery is being charged.
4. After the battery is fully charged, the BATTERY CHARGING INDICATOR (#3) will turn off.
5. Unplug the AC adaptor once the battery is fully charged.

**WARNING:** Before connecting to the power supply, ensure that the supply corresponds to the information on the rating label at the back of the apparatus.

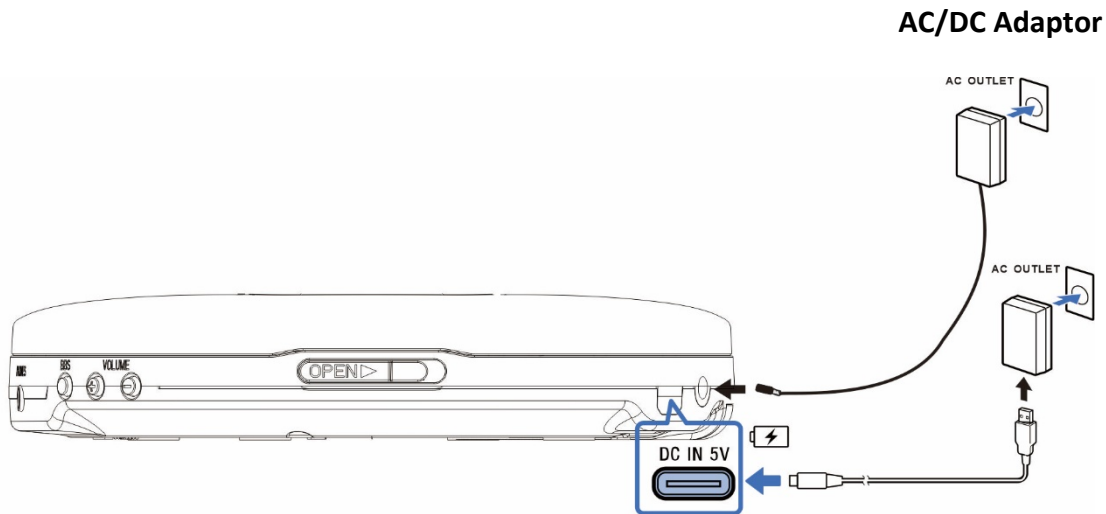

## EARPHONES CONNECTION (PLUG-IN TYPE)

Connect the plug of the stereo earphone (included) into the EARPHONES JACK (#15).

### CAUTION

- Avoid excessive volume levels for long period of time when using the earphones. Prolonged use at high levels may impair your hearing.
- Do not use earphones while operating a motorized vehicle, as it may create a traffic hazard and is illegal in many areas.

## CD/MP3 CD OPERATION

### PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs, however it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the CD-R/RW disc as this may cause a malfunction.

### FOR WINDOWS USERS:

When using the "Burn a CD" feature to create an MP3 CD in Windows, you must select the "With a CD/DVD player" option when it asks, "How do you want to use the disc?". The MP3 CD will not play on this unit if you select the "Like a USB flash drive" option or if the MP3 CD is not finalized.

### PLAYING A COMMERCIAL CD

1. Make sure the HOLD SWITCH (#21) located on the bottom of the unit is set to OFF position. Press the POWER ON BUTTON (#9) to turn on the unit.
2. Press the MODE BUTTON (#2) to enter CD mode if necessary.
3. Slide the CD DOOR OPEN SWITCH (#19) to open the CD door. Carefully place an audio CD with its label side upward in the CD compartment and close the CD door.
4. The player will start reading TOC of the disc and LCD DISPLAY (#1) showing "READ" during CD loading.
5. The total number of tracks and time on the CD will show on the LCD DISPLAY (#1) after a few seconds.
6. Press the ►|| BUTTON (#9) to start to play the CD.
7. Press the VOLUME +/- BUTTONS (#17/18) to obtain the desired volume level.
8. While playing, press the ►|| BUTTON (#9) to pause playback. The current track number will be flashing on the LCD DISPLAY (#1). Press the ►|| BUTTON (#9) again to resume playing.
9. You can choose to play your favorite track directly by pressing either the ►► or ◀◀ BUTTONS (#5 or #11) repeatedly. The LCD Display (#1) will indicate the correct track number selected.
10. To locate a particular passage within a track, press and hold the ►► or ◀◀ buttons (#5 or #11) until it is found.  
**Note:** Low level audio will be heard during the search process to assist in locating the desired point of the track.
11. To stop playing, press the STOP ■ BUTTON (#10).
12. Press and hold the POWER OFF BUTTON (# 10) to turn off the unit.

### REPEAT MODE PLAYING A COMMERCIAL CD

#### REPEAT 1:

When you first start playing a CD, press the REPEAT BUTTON (#6) once and "REP 1" will show on the LCD DISPLAY (#1). The current track that is playing will now repeat continuously



until you stop playback or change the mode.

#### **REPEAT ALL:**

Press the REPEAT BUTTON (#6) again and “REP ALL” will show on the LCD DISPLAY (#1). All tracks on the CD will play in order and will repeat continuously until you stop playback or change the mode.

#### **RANDOM PLAY:**

Press the REPEAT BUTTON (#6) again and “RND” will show on the LCD DISPLAY (#1). All tracks on the CD will play in random order until you stop playback or change the mode.

#### **INTRODUCTION PLAY:**

Press the REPEAT BUTTON (#6) again and “INTRO” will show on the LCD DISPLAY (#1). All tracks on the CD will play the first 10 seconds in order until you stop playback or change the mode.

#### **CANCELLING THE REPEAT MODES:**

Press the REPEAT BUTTON (#6) again or until all the symbols on the LCD DISPLAY (#1) turn off.

#### **PLAYING A MP3 CD**

1. Make sure the HOLD SWITCH (#21) located on the bottom of the unit is set to OFF position. Press the POWER ON BUTTON (#9) to turn on the unit.
2. Press the MODE BUTTON (#2) to enter CD mode if necessary.
3. Slide the CD DOOR OPEN SWITCH (#19) to open the CD door. Carefully place an MP3 CD with its label side upward in the CD compartment and close the CD door.
4. The CD will spin and start reading the disc information. When finished, the LCD DISPLAY (#1) will show the total number of folders followed by the total number of tracks on the MP3 CD.
5. Press the ►|| BUTTON (#9) to start playing the MP3 CD.
6. Press the VOLUME +/- BUTTONS (#17/#18) to obtain the desired volume level.
7. While playing, press the ►|| BUTTON (#9) to pause playback. The current track number will be flashing on the LCD DISPLAY (#1). Press the ►|| BUTTON (#9) again to resume playing.
8. Pressing the FOLDER ▲/▼ BUTTONS (#8/#14) allows you to switch folders (if available on your MP3 CD). Repeatedly press the FOLDER ▲/▼ BUTTON (#8/#14) to step through all the available folders on the MP3 CD. The LCD DISPLAY (#1) will show F01 is folder #1, F02 is folder #2 and so on.
9. You can choose to play your favorite track directly by pressing either the ►► or ◀◀ BUTTONS (#5 or #11) repeatedly. The LCD Display (#1) will indicate the correct track number selected.
10. To locate a particular passage within a track, press and hold the ►► or ◀◀ BUTTONS (#5 or #11) until it is found.  
**Note:** Low level audio will be heard during the search process to assist in locating the desired point in the track.
11. To stop playing, press the STOP ■ BUTTON (#10).
12. Press and hold the POWER OFF BUTTON (#10) to turn off the unit.

## **REPEAT MODE PLAYING AN MP3 CD**

### **REPEAT 1:**

When you first start playing an MP3 CD, press the REPEAT BUTTON (#6) once and "REP 1" will show on the LCD DISPLAY (#1). The current track that is playing will now repeat continuously until you stop playback or change the mode.

### **REPEAT FOLDER (ALBUM):**

Press the REPEAT BUTTON (#6) again and "REP DIR(FOLDER)" appears on the LCD DISPLAY (#1). Repeatedly press the FOLDER ▲/▼ BUTTONS (#8/#14) to step through all the available folders and select the folder you want to reply. All tracks in that folder will play in order and will repeat continuously until you stop playback or change the mode.

### **REPEAT ALL:**

Press the REPEAT BUTTON (#6) again and "REP ALL" will show on the LCD DISPLAY (#1). All tracks on the MP3 CD will play in order and will repeat continuously until you stop playback or change the mode.

### **RANDOM PLAY:**

Press the REPEAT BUTTON (#6) again and "RND" will show on the LCD DISPLAY (#1). All tracks on the MP3 CD will play in random order until you stop playback or change the mode.

### **INTRODUCTION PLAY:**

Press the REPEAT BUTTON (#6) again and "INTRO" will show on the LCD DISPLAY (#1). All tracks on the MP3 CD will play the first 10 seconds in order until you stop playback or change the mode.

### **CANCELLING THE REPEAT MODES:**

Press the REPEAT BUTTON (#6) again or until all the symbols on the LCD DISPLAY (#1) turn off.

### **NOTE:**

The unit will automatically go into power saver mode and turn off if the CD player is stopped for longer than 2 minutes.

## **PROGRAM PLAY MODE (COMMERCIAL CD and MP3 CD)**

This function allows the tracks to be played in a programmed sequence. Programs can be set in STOP mode.

1. Press the PROGRAM BUTTON (#12) once. The track number "001" and Program Channel Number "P01" will appear on display. "001" of the track number will blink on the LCD DISPLAY (#1) to prompt for input.
2. Press the ►► or ◄◄ BUTTONS repeatedly (#5 or #11) to select the track to be programmed.

**Note:** Press the FOLDER+/- BUTTON (#8/14) button to select the next/previous MP3 folder if you are programming tracks of an MP3 CD. Press the FOLDER+/- BUTTON (#8/14) button repeatedly to cycle the folder selection.

3. Press the PROGRAM BUTTON (#12) again to store selection. The Program Channel Number will change to "P02" and the track number will continue to blink, prompting for input the next track to be programmed.

4. You may repeat steps #2 - #3 to program up to 24 tracks for CD or 99 tracks for MP3 CD.
5. Press PLAY/PAUSE ►|| BUTTON (#9) to start the programmed play, "PROG" icon appears on the LCD DISPLAY (#1).
6. You may repeat the current programmed track or all programmed tracks by pressing the REPEAT BUTTON (#2) once or twice at programmed play mode.
7. Press STOP ■ BUTTON (#10) once to stop playback.
8. Press PLAY/PAUSE ►|| BUTTON (#9) to resume programmed play.
9. To cancel programmed play, press the STOP ■ BUTTON (#10) twice.

## A\_B REPEAT PLAYBACK

1. During CD or MP3 CD playback, press A-B BUTTON (#13) at the desired point where you would like to set the starting time of A-B playback.  
"SET A" is displayed on the LCD display (#1) and will show the track time after 3 seconds.
2. Press REPEAT A-B BUTTON (#13) at the point where you want to set the end time of the A-B playback.  
"Ab ON" is displayed on the LCD DIAPLAY (#1) will show the track time after 3 seconds.  
"A-B" will display on the LCD DISPLAY (#1) and selected period (point A to point B) will playback repeatedly.
3. Press the STOP ■ BUTTON (#10) to clear the A-B repeat playback setting and stop playback. Or press A-B BUTTON (#13) to cancel the A-B repeat and carry on the playback.

## AUTOMATIC RESUME FUNCTION

If the CD Player turns off during playback due to power failure or the CD door accidentally being opened, you can resume playback from the same position after restarting the unit or closing the CD door again. Auto resume also works if you turn the CD Player off and want to continue listening at a later time.

## ANTI-SHOCK PROTECTION

This player incorporates an electronic anti-skip circuit to prevent interruption of the sound output when the unit is subjecting to shock, vibration or rolling during CD playback. The anti-shock system will automatically activate when a disc is playing, the ESP indicator will appear on the LCD DISPLAY (#1).

Once the anti-skip buffer is full, it will give you approximately 60 seconds of protection against interruption of sound output. If the player is subjected to shock or rolling for longer than the buffer memory, some interruption of sound output will occur. This is normal and to be expected. Afterwards, the sound will resume once the player has stabilized from the shock or rolling disturbance.

**Note:** The anti-skip function provides for continuous playback when the unit is subjected to shock or vibration. It will not compensate for errors arising from the use of defective, scratched or dirty discs.

## RADIO OPERATION

1. Press and hold the POWER ON BUTTON (#9) to turn on the unit.
2. Press the MODE BUTTON (#2) to enter FM mode if the unit is in CD mode. "FM" will appear on the LCD DISPLAY (#1) along with the current FM radio station frequency.
3. To automatically scan and store radio stations, press and hold the SCAN BUTTON (#7) until frequency readout on the display begins to scan and then release the button.
4. To manually tune to a specific radio station, press the TUNER- or TUNER+ BUTTON (#5 or #11) repeatedly. Use the manual tuning method to tune in weaker stations that are bypassed during Automatic Tuning.
5. To automatically tune to the next available radio station, press and hold the TUNER- or TUNER+ BUTTON (#5 or #11) for 1-2 seconds until frequency readout on the display begins to scan and then release the button. The tuner will stop scanning when it receives the next broadcasting station of adequate signal strength.
6. Press the volume control VOLUME +/- BUTTON (#17/#18) to the desired volume level.

### FM OPERATION:

During FM reception, always keep the earbuds wire fully extended for best performance. However, if FM reception is weak, try repositioning the unit near an open window until you get the best reception.

### TIPS FOR BEST RECEPTION

The earbuds cord acts as an aerial and must be fully extended for the best reception.

### PRESET RADIO STATIONS

1. Press the POWER ON BUTTON (#9) to turn on the unit.
2. Press the MODE BUTTON (#2) to enter FM mode when the unit is at CD mode, the FM radio frequency will appear on the LCD DISPLAY (#1).
3. Tune to the desired radio station utilizing either "manual" or "automatic" tuning methods.
4. Press the PROGRAM BUTTON (#12), the preset memory number will flash on the LCD DISPLAY (#1). (Note: P01 will blink in the display if you are programming a preset for the first time).
5. Press the PRESET+/- BUTTON (#8/14) repeatedly to select the preset number you want to assign the station to.
6. Press the PROGRAM BUTTON (#12) to confirm the setting.
7. Repeat above steps #3 - #6 to preset up to 30 FM stations.

### NOTE:

This unit features an AUTO SEARCH function that will automatically save the first 30 strong stations found. To use this feature, make sure the unit is in FM mode. Press and hold the SCAN BUTTON (#7) until the station frequency begins to scan. The unit will scan from the lowest frequency to the highest frequency within the frequency band. The first strong radio stations found will be stored in the preset locations starting from P01. This will continue storing P02 and up until all 30 presets are stored, or until it runs out of stations to scan.

### RECALLING PRESET RADIO STATIONS

Press the PRESET+/- BUTTON (#8/#14) repeatedly to select the desired station is located.

## BLUETOOTH TRANSMIT MODE

The SB3706 has a built-in Bluetooth transmitter that allows you to wirelessly stream to Bluetooth compatible devices like speakers, headphones or earbuds. Follow the steps below to connect to a Bluetooth device and stream your favorite CDs to that device.

### PAIRING WITH A BLUETOOTH DEVICE (SPEAKERS, HEADPHONES OR EAR BUDS)

1. Press and hold the MODE BUTTON (#2) to enter CD mode (CD stopped).
2. Make sure the Bluetooth device you want to stream to is ON and set to pairing mode.  
**NOTE:** For best results, have the Bluetooth device as close as possible or within 3 feet of the SB3706 when pairing.

3. Press the BLUETOOTH/FM TX BUTTON (#4) once to switch to Bluetooth Search Mode. "BT TX" shows on the LCD Display (#1) (Fig 1).

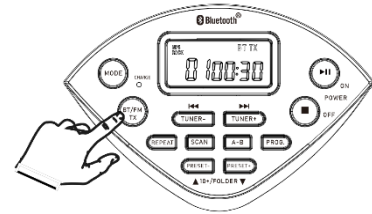 


Fig. 1

4. The SB3706 will search for the closest available Bluetooth device and automatically connect to that device.

5. Once Bluetooth pairing is successful, the display will change back to the CD screen and "BT TX" will be showing in the upper right the LCD Display (#1) (Fig 2). This confirms the unit is transmitting Bluetooth.

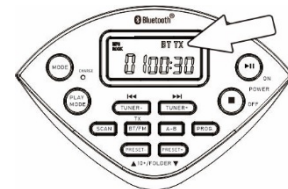 


Fig. 2

**NOTE:** Please note that the pairing time could be longer when connecting with a device for the first time.

6. Press the PLAY/PAUSE ►|| BUTTON (#9) to start playing the CD and begin streaming (Fig 3). The music from the CD will be heard on the connected Bluetooth device.



Fig. 3

7. If you move out of Bluetooth range (33 feet) with the SB3706, the "BT TX" indicator on the LCD Display (#1) will begin flashing. Move the SB3706 or your Bluetooth device back within range and reconnect the Bluetooth device if necessary.
8. If you want to connect to another Bluetooth device, first turn OFF the power on the current device you are connected to.
9. Make sure the new Bluetooth device to you want to connect to is ON, set to pairing mode and placed near the SB3706
10. Repeat Follow steps #3 – #7 to connect to the new Bluetooth device.

### Notes:

- Bluetooth streaming is not available in FM radio mode.
- If Bluetooth speaker or headphone has been connected before turning off, it will

automatically connect back to the previous one during next connection.

- If the CD player is stopped for approximately 120 seconds, the power will automatically turn off, so you may need to repeat the Bluetooth connection steps above to stream again.
- If you need to remove a previously connected device from the SB3706 press and hold the A-B BUTTON (# 12) to disconnect it. Immediately turn off the Bluetooth device to prevent the SB3706 from reconnecting to it.
- This model is compatible with Bluetooth versions 4.0 & 5.0. Please try your other Bluetooth speaker or headphone if it is unable to find by this model.
- This CD player may not connect to certain vehicle entertainment systems if the manufacturer requires a passcode during the connection process.

### **TURNING OFF BLUETOOTH TRANSMISSION**

1. Press the BLUETOOTH/FM TX BUTTON (#4) repeatedly until "OFF" appears on the LCD Display (#1) as shown in Fig 4.
2. The Bluetooth transmitter is now off and no longer connected to any device.

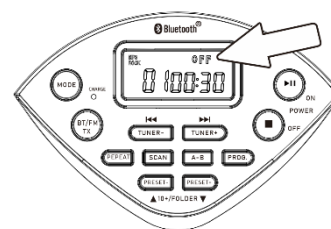 


Fig. 4

## **FM TRANSMIT MODE**

1. Press the MODE BUTTON (#2) to enter CD mode (while CD stopped).
2. Press the BLUETOOTH/FM TX BUTTON (#4) once to switch to Bluetooth Search Mode. "BT TX" shows on the LCD Display (#1) (Fig 1).
3. Press the BLUETOOTH/FM TX BUTTON (#4) again to switch to FM transmit mode, LCD DISPLAY (#1) will change to show "FM" and one of the FM TX frequencies. e.g. 88.5MHz (Fig. 5).
4. Press the ►► or ◄◄ BUTTON (#5 or #11) repeatedly to select 1 of the 3 FM transmit frequencies available.  
88.5MHz ► = 93.7MHz ► = 102.9MHz.
5. Tune the FM radio in your car to the same FM transmit frequency selected above.
6. Press the Play button on the SB3706 to start playing the CD. The music from the CD will be heard on the radio in your car.
7. If the music from the CD is not playing through your car radio, please repeat steps 1-5 above and select another FM transmit frequency. Make sure you readjust the FM radio station in your car

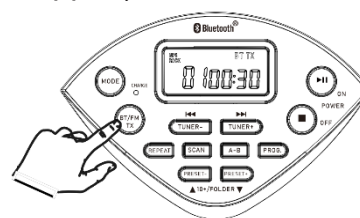 


Fig. 1

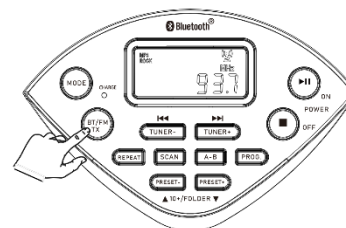 


Fig. 5



to the new frequency selected.

8. Adjust volume of the CD player and your car radio if necessary.
9. Turn off CD player after listening.

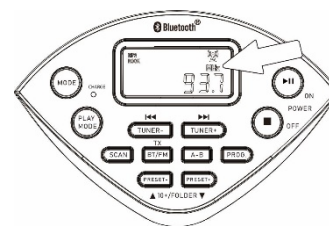 


Fig. 6

#### Notes:

- FM transmit is not available while the SB3706 is in FM radio mode.
- Bluetooth transmit and FM transmit will not run at the same time.
- If you're experiencing static or interference when listening to a CD on your car radio, reposition where the SB3706 is located and position it closer to the radio if possible.

### BBS FUNCTION

1. Press and hold the BBS BUTTON (#16) to turn on the BBS to enhance the bass effect of the music. Display will show "BBS ON" once.
2. Press and hold the button again to turn off the BBS. Display will show "BBS OFF" once again.

**Note:** EQ will be reset to "FLAT" if you turn BBS ON/OFF.

### EQ MODES

This unit provides 4 different EQ modes to enhance your listening experience. You can select the desired effect by press the BBS BUTTON (#16) repeatedly in following sequence:

FLAT ➡ CLASSIC ➡ ROCK ➡ POPS ➡ JAZZ

**Note:** BBS will be off if you select EQ mode.

### HOLD FUNCTION

To prevent accidental function changes during active use, this unit is fitted with a function hold. After the unit has been powered on and playing in CD or FM mode, slide the HOLD SWITCH (#21) to ON position. "HOLD" message will show on the LCD DISPLAY (#1). LCD DISPLAY (#1) will off for 2 seconds when you press a key. Set the HOLD SWITCH (#21) to OFF position to unlock the hold function.

**Note:** Auto power off for saving battery power will not be affected by hold function.

### RESETTING THE UNIT

In case of malfunction due to electrostatic discharge, reset the unit by pressing and holding the POWER OFF BUTTON (#10) until the unit turns off. Waiting for 30 seconds and then press POWER ON BUTTON (#9) to turn on the unit again.

## CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.




## TROUBLE SHOOTING GUIDE

If you experience difficulties in the use of this clock radio, please check the following or call 1-800-777-5331 for Customer Service and support

SYMPTOM	POSSIBLE	SOLUTION
No Sound	Battery no power	Fully recharge the built-in rechargeable battery.
	Volume set at minimum	Increase Volume.
Noise or sound distorted on FM broadcast	Earphone cord is not extended	Extend earphone cord
Radio no sound	The unit is not in RADIO (FM) mode	Switch to FM mode
	The station is weak	Retune the station again
CD player will not play	Unit not in CD mode	Switch to CD mode
	CD is installed incorrectly	Insert CD with label side up.
	Battery becomes exhausted	Fully recharge the built-in rechargeable battery.
	It the CD is self-compiled, the media used may not be compatible with the player.	Use better quality blank media and retest.
CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
	Dirty or defective disc	Clean or replace the defective disc
	Dirty pick up lens	Use a CD-lens cleaning disc to clean the lens
	Player is subject to excessive shock or vibration	Relocate the player away from shock or vibration

CD skips while playing	Battery becomes exhausted	Fully recharge the built-in rechargeable battery.
Cannot pair with Bluetooth speaker	The unit is not in Bluetooth (TX) mode	Switch to Bluetooth (TX) mode
	No power is turned on is Bluetooth speaker or headphone	Turn Power on the Bluetooth speaker or headphone

## SPECIFICATION

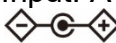Power Requirement : 5V DC (1.0A) Type-C USB (cable supplied)  
 : Built-in lithium-ion rechargeable battery (3.7V/1500mAh)  
 : AC Adaptor (not included): Input: AC 120V ~ 60Hz  
 : Output: DC 5V  $\overline{\text{---}}$  1000mA   
 FM Receiver Frequency : 87.5 – 108 MHz  
 FM Transmitter Frequency : 88.5MHz, 93.7MHz, 102.9MHz  
 Bluetooth : Version 5.0



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.

## 1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

1. The warranty applies to the SPECTRA product only while:
  - a. It remains in the possession of the original purchaser and proof of purchase is demonstrated.
  - b. It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
  - c. Claims are made within the warranty period.
2. This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
3. Warranty of all SPECTRA products applies to residential use only and is void when products are used in nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

IF THE UNIT IS OUTSIDE THE WARRANTY PERIOD, please include a check for **\$49.99** to cover the cost of repair, handling and return postage. All out of warranty returns must be sent prepaid.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at [custserv@spectraintl.com](mailto:custserv@spectraintl.com) for updated information on the unit requiring service. In some cases, the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.  
4230 North Normandy Avenue,  
Chicago, IL60634, USA. 1-800-777-5331

To register your product, visit the link on the website below to enter your information.  
<http://www.spectraintl.com/wform.htm>

0724

Printed in China

(SB3706MW/SB3706BP/SB3706BW/SB3706RW)