

Studebaker



Retro CD Player with Bluetooth

SB3720 OWNER'S MANUAL



Please read this Instruction Manual carefully before using the unit and retain it for future reference

Please contact Spectra Customer Service at 1-800-777-5331 if you have any questions about operating this product

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The Caution Marking is located at the bottom enclosure of the apparatus.
The Rating plate is located at the bottom enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.



17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Mains plug is used as disconnect device and it should remain readily operable during intended use. To disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Excessive sound pressure from headphones and earphones can cause hearing loss.
25. Minimum distances of 4 inches around the apparatus for sufficient ventilation.
26. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
27. No naked flame sources, such as lighted candles, should be placed on the apparatus.
28. The use of apparatus in moderate climates.
29. Attention should be drawn to the environmental aspects of battery disposal.

SAVE THESE INSTRUCTIONS

COMPLIANCE WITH FCC REGULATIONS

FCC ID: 2AQTN-YM2353

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

This product contains a low power laser device.

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

Caution:

- Any use of the controls or performing any of the procedures in a way other than those specified herein may result in hazardous radiation exposure.
- This unit should not be adjusted or repaired by anyone except qualified service personnel.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air-flow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.

- When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occur, disconnect the USB Power Adapter and refer servicing to qualified personnel.

PROTECT YOUR FURNITURE

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil-based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften and leave marks, or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR STUDEBAKER® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So, what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.
- Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

 
Model Number: SB3720

Serial Number: _____

CONTENTS OF YOUR PRODUCT

- Main Unit X 1
- USB-A power adapter (DC 5V --- 1A) X 1
- USB-A to type C charging cable X 1
- User Manual X 1

LOCATION OF CONTROLS

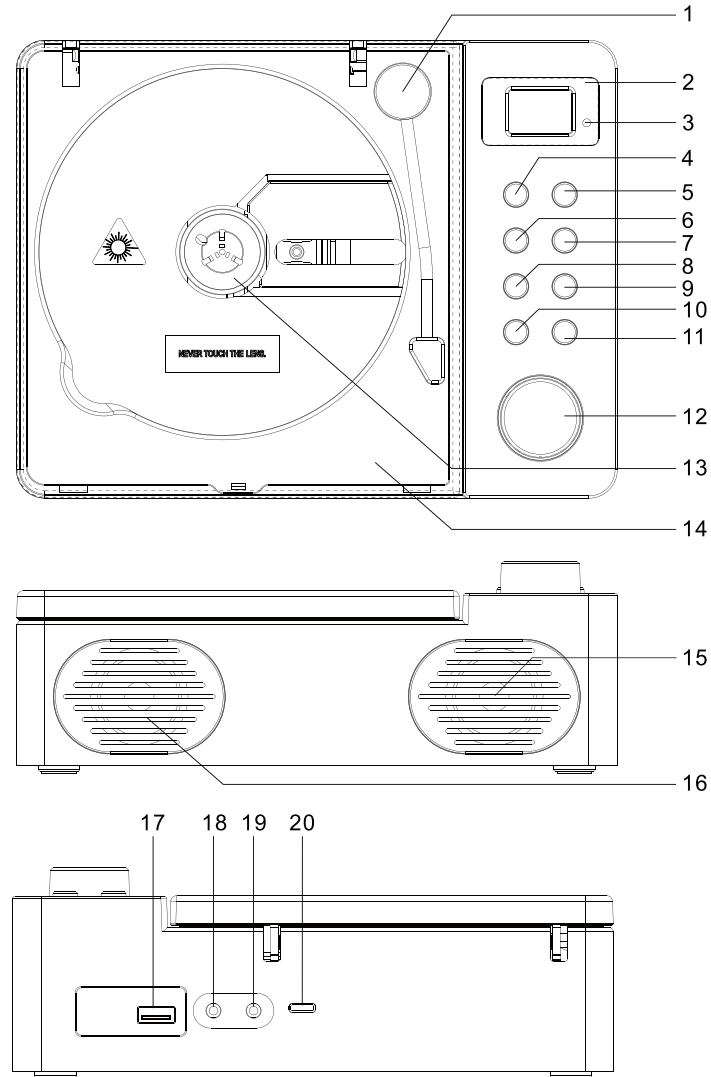

1	DECORATION TONE ARM	11	FUNCTION MODE BUTTON (CD/USB/Bluetooth/FM Radio/AUX)
2	LCD DISPLAY	12	POWER ON/OFF BUTTON; ROTARY VOLUME KNOB
3	POWER INDICATOR	13	CD COMPARTMENT
4	◀◀ SKIP/FAST BACKWARD BUTTON	14	CD DOOR
5	▶▶ SKIP/FAST FORWARD BUTTON	15	RIGHT SPEAKER
6	STOP BUTTON	16	LEFT SPEAKER
7	CD/USB/BT MODE; PLAY/PAUSE ; FM MODE: AUTO SCAN; BLUETOOTH PAIR BUTTON	17	USB PORT (PLAYBACK)
8	REPEAT BUTTON	18	HEADPHONE JACK/RESET BUTTON
9	+10 BUTTON	19	AUX IN JACK
10	MEMORY(PROGRAM) BUTTON; FM PRESET+ (UP) BUTTON	20	DC INPUT JACK (USB type C)

POWER SOURCE

 
This unit can be operated using either AC power, the built-in Lithium-ion rechargeable battery.

AC POWER OPERATION

USB-A to USB type C Power Adapter with the output of DC 5V, 1A (included) is required for operating the main unit when using AC power mode. To connect the USB Power Adapter to the unit and 120V~ 60Hz AC Outlet:


1. Plug the USB-A plug of the included charging cable into the power adapter USB-A port.
2. Firmly and securely insert the USB type C plug of the charging cable into the USB type C Jack on the back of the unit.
3. Plug the Power Adapter plug into the 120V AC outlet. The CHARGE indicator on the LCD display will light and blink during battery charging. Connecting this unit to any other power source may cause damage to the system.
4. Press and hold the POWER button on the top panel to turn on the unit, the POWER INDICATOR will light.

Note: When the unit is not operated for long periods of time, unplug the USB power adapter from the unit and wall outlet.

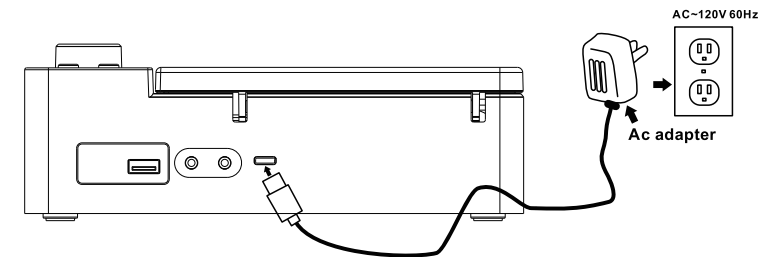


BUILT-IN RECHARGEABLE BATTERY OPERATION

1. This unit will also operate using the built-in Lithium rechargeable battery. Fully charge

the built-in rechargeable battery before first use, the CHARGE INDICATOR  will turn from blinking to solid on when the built-in battery is fully charged.

2. Unplug the USB type C jack of the main unit, the unit will enter Battery Operating mode automatically.

LOW BATTERY INDICATION

1. When the built-in battery power remains around 10%, the low battery icon  will show on the LCD display and blink, please connect the unit to the USB-C power adapter for charging.
2. After prolonged use, the battery voltage may discharge, and operation might become intermittent. When this happens, please recharge the internal battery.

CHARGING INSTRUCTIONS

CHARGING THE BATTERY WITH THE INCLUDED USB ADAPTER

1. Charge the built-in Lithium battery a minimum of 5 hours prior to first use. Firmly and securely insert the type C plug of the power adapter into the USB type C Jack on the back of the unit.
2. Turn the unit into Power Off mode. Plug the power adapter plug into the 120V AC outlet. Connecting this system to any other power source may cause damage to the system.
3. When the AC power is connected, the battery icon will start blinking, indicating that the internal battery is being charged.
4. After the battery is fully charged, the battery icon will turn to solid on.

Notes:



 
 

 
- 1.) Charging time will vary if you are listening to music while charging the internal battery. The charging indicator will keep running in Power On mode. We recommend you place the unit in Power off mode during the charging process or until SB3720 batteries are fully charged.
- 2.) To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
- 3.) Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

Battery Note and Care

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Lithium batteries. Do not dispose of in the trash.
- Use only chargers rated for Lithium cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than the recommended charging time. Unplug the charger when the battery is charged or not in use.

NOTE: These speakers are not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the speakers further away from the TV or monitor if unnatural color shifts or image distortion occurs.

 

RADIO OPERATION

1. Press and hold the POWER  button to turn on the unit, the unit will be "On" and the power LED indicator will light.
2. If the unit is in "other function mode", tap the MODE button repeatedly to select FM mode. "rAd" will briefly appear on the LCD DISPLAY and then "FM" along with the current FM radio station frequency.
3. To automatically scan and store radio stations, press and hold the SCAN  BUTTON until frequency readout on the display begins to scan and then release the button.
4. To manually tune to a specific radio station, tap the TUNE-  or TUNE+  BUTTON repeatedly. Use the manual tuning method to tune to weaker stations that are bypassed during Automatic Tuning.
5. To automatically tune to the next available radio station, press and hold the  or  BUTTON for 1-2 seconds until frequency readout on the display begins to scan and then release the button. The tuner will stop scanning when it receives the next broadcasting station of adequate signal strength.
6. Adjust the ROTARY VOLUME knob to obtain the desired sound level.


FM / FM STEREO OPERATION:

If an FM stereo broadcast program is being received, the FM STEREO INDICATOR "ST" will appear on the display. However, if FM reception is weak, try repositioning the unit near an open window until you get the best reception.

PRESET RADIO STATIONS

1. Press and hold the ON/OFF BUTTON to turn on the unit.
2. Tap the MODE BUTTON repeatedly to enter FM mode. The FM radio frequency will appear on the LCD DISPLAY.
3. Tune to the desired radio station either by "manually" or "automatically" tuning method.
4. Press and hold the MEMORY BUTTON (MEM/M+ BUTTON 10), the preset memory number flash on the LCD DISPLAY. (Note: P01 will blink in the display if you are programming preset for first time).
5. Tap the  or  button repeatedly to select the preset number you want to assign the station to.
6. Tap the MEM/M+ BUTTON to confirm your preset station.
7. Repeat the above steps, 3 - 6 to preset up to 20 FM stations.

NOTE:

This unit features an AUTO SEARCH function that will automatically save the first 20 strong stations found. To use this feature, make sure the unit is in FM mode. Press and hold the  BUTTON until the station frequency begins to scan. The unit will scan from the lowest frequency to the highest frequency within the frequency band. The strongest radio stations found will be stored in the preset locations starting from P01 and up until all 20 presets are stored (P20), or until it runs out of stations to scan.

RECALLING PRESET RADIO STATIONS

Tap the MEM/M+ BUTTON repeatedly to select the location of the station you want to listen to.

CD OPERATION

PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs, but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer is not responsible for the playback quality of CD-R/RW discs. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

1. In power on mode, tap the MODE button repeatedly to select CD mode, the display will show "--" briefly. If no CD has been loaded in the CD compartment, LCD display will change to show "NO".
2. Open the CD door by lifting it up.
3. Carefully load an audio CD with its label side upward in the CD compartment then lower the CD door down to close it.
4. The player will start reading TOC of the disc, total number of tracks on the CD will appear on the LCD DISPLAY after a few seconds.
5. Press the PLAY/PAUSE ►|| button to start playing.
6. Rotate the VOLUME knob to obtain the desired sound.
7. To temporarily stop playing, press the PLAY/PAUSE ►|| button. The play/pause indicator "►" on the LCD display will begin to flash. To resume playing, press the PLAY/PAUSE ►|| button again. The play/pause indicator "►" will turn to solid on.
8. You can skip up or down to a specific track number by pressing the SKIP BACKWARD ◀◀ button or SKIP FORWARD ▶▶ button. The LCD Display will indicate the correct track number selected.
9. To locate a particular section within a track, press and hold the ◀◀/▶▶ button until the section is found.
10. To stop playing, press the STOP ■ button.
11. Press and hold the POWER ⏻ button to turn off the unit after listening.

+10 button control

Press the +10 button once to advance the music search by increment of 10 tracks.

REPEAT MODE

Repeat 1

To repeat the current track, press the REPEAT BUTTON (BUTTON 8) once, the REPEAT INDICATOR ⏮ will begin to flash on the LCD display. The track will continue to play until the repeat function is turned off by pressing the REPEAT BUTTON again.

Repeat All

To repeat all the tracks, press the REPEAT BUTTON twice, the REPEAT INDICATOR ⏮ will be solid on. All the tracks on the disc will be played repeatedly.

REPEAT FOLDER

When playing a MP3 CD, tap the REPEAT BUTTON repeatedly until the REPEAT FOLDER indicator 📁 appears on the LCD DISPLAY, allowing you to repeat songs in the folder.

SHUFFLE TRACKS

To shuffle all tracks in the CD, tap the REPEAT BUTTON repeatedly until the SHUFFLE indicator 🎲 appears on the LCD display. All the tracks on the disc will be played randomly.

To Cancel Repeat/Shuffle Function: Tap the REPEAT BUTTON repeatedly until REPEAT/SHUFFLE indicator goes off from LCD display.

PROGRAM OPERATION

This function allows the tracks to be played in a programmed sequence.

NOTE: Programs can only be set in STOP mode.

1. In CD stop mode, press and hold the MEM/M+ button, the PROGRAM indicator "MEM" will flash and Program Number "P01" will show on LCD display.
2. Press the SKIP ◀◀ or ▶▶ button to select the desired track. The track number "001" will blink on the LCD display to prompt for input.
3. Tap the MEM button to confirm the selection. Program Number advances to "P02".
4. Repeat step 2 to 3 to program up to maximum of 30 tracks.
5. When a maximum of 30 tracks have been programmed, the LCD display will show "FUL" to indicate the program is full.
6. When you have completed programming, press the PLAY/PAUSE ►|| button to start playing. Both PROGRAM (MEM) and PLAY/PAUSE (►) indicators will light steadily.
7. To cancel programmed play, press the STOP ■ button twice. PROGRAM indicator "MEM" will then no longer show on the LCD display.

USB OPERATION

This unit is designed to play MP3 files stored within the USB flash-drives. If the files on the USB device do not conform to the MP3 standard, they may not be played.

1. Press and hold the POWER ⏻ button to turn on the unit. Tap the MODE button repeatedly until USB mode indication "USB" shows on LCD display.
2. Insert your USB flash-drive into the USB port located at back of the unit, it will start to read the USB flash-drive.
Note: USB supports flash drive capacity up to 64 GB maximum.
3. After reading the USB flash-drive, the unit will display the total number of tracks/files in the flash-drive.

USB Playback

After reading the USB flash-drive, press the PLAY/PAUSE ►|| button once, the first track/file on the USB flash-drive will be played back. The PLAY/PAUSE indicator "►" will be solid on during playback.

Play/Pause Control

To temporarily stop playing, press the ►|| button, music playback will be paused, and the PLAY/PAUSE indicator "►" will be blinking. Press the ►|| button again to resume playback.

Stop Playback

To stop playback, press the STOP ■ button on the unit. The total number of tracks/files on the USB flash-drive will be shown on the LCD display.

Skip Track

During playback, press the SKIP backward ◀◀ or forward ▶▶ buttons to skip to the previous or next track/file.

High-speed Music Search

During playback, press and hold the SKIP forward ▶▶ or backward ◀◀ buttons to search through the current track/file at high speed in forward or backward directions. When the SKIP


buttons are released, normal playback speed will be resumed immediately.

+10 Control


Press the +10 button to advance the music search by increments of 10 tracks.

REPEAT MODE


Repeat 1

To repeat the current track, tap the REPEAT BUTTON once, the REPEAT INDICATOR  will begin to flash on the LCD display. The track will continue to play until the repeat function is turned off.


REPEAT FOLDER

If there is more than one folder of MP3 music in your flash-drive, tap the REPEAT BUTTON repeatedly until the REPEAT FOLDER indicator  appears on the LCD DISPLAY to repeat playing songs in the selected folder.

Repeat All

To repeat all the tracks, tap the REPEAT BUTTON repeatedly, the REPEAT INDICATOR  will be solid on. All the tracks on the disc will be played repeatedly.







SHUFFLE PLAY

To shuffle tracks in your flash-drive, tap the REPEAT BUTTON repeatedly until the SHUFFLE play indicator  appears on the LCD display. All the tracks on the flash drive will be played randomly.

To Cancel Repeat/Shuffle Function: Press the REPEAT BUTTON until REPEAT/SHUFFLE indicator goes off from LCD display.

Programmed USB playback


 




This unit can be programmed to play up to 99 tracks in USB mode.

1. With your flash-drive plugged into USB port, make sure the unit is in stop mode.
2. Press and hold the MEM/M+ button, the PROGRAM Indicator "MEM" will flash and program Channel Number "P01" will show on the LCD DISPLAY.
3. Press  or  button to select the track to be programmed. The track number "001" will flash on the LCD DISPLAY to prompt for input.
4. Tap the MEM button again to store selection. The Program Channel Number will change to "P02".
5. You may repeat steps 3 - 4 to program as many as 99 tracks. When the memory is full, "FUL" will show on the LCD DISPLAY.
6. Press the PLAY/PAUSE  button to start the programmed play.
7. Press STOP  button once to stop playback.
8. Press the  button to resume programmed play.
9. To cancel programmed play, press the STOP  button twice.

BLUETOOTH OPERATION

PAIRING A SMARTPHONE OR BLUETOOTH ENABLED DEVICE

The Bluetooth feature enables you to stream and play the digital music on your Bluetooth enabled device to your unit.

1. Press and hold the POWER  button to turn on the unit. Tap the MODE button repeatedly to select Bluetooth mode, the indicator "bt" will flash on the LCD display.
2. The unit will start in auto connection mode and search for a previously paired device that is active and in range (30 feet/10 meters). If found, a brief welcome melody will be heard and the Bluetooth indicator "bt" on the LCD display will change to solid on. If no active device is found, the unit will switch to interactive pairing mode and the Bluetooth indicator will continue to flash.
3. To establish a new link, turn on the Bluetooth function of your Bluetooth enabled device and enable the search or scan feature to find "SB3720" in the list of discoverable Bluetooth devices. Select the "SB3720" from your available device list when it appears on its screen and a brief welcome melody will be heard if pairing and connection is successful. If you are asked for a password, enter "0000".
4. If no successful pairing and connection is made within 5 minutes, the unit can enter manual pairing mode. You need to press and hold the /PAIR button until the Bluetooth indicator flashes to initiate a pairing/connecting request to a new or old Bluetooth enabled device. Follow step #3 to complete the process.
5. After successfully pairing and connecting your device with SB3720, the unit will emit a brief welcome melody and the Bluetooth indicator will change to solid on. You can now play music from your Bluetooth enabled device wirelessly to the SB3720.
6. If you want to connect the SB3720 to another external Bluetooth enabled device while paired with another device, press and hold the /PAIR button for a few seconds to disconnect the existing connection. The unit will emit two short beeps and Bluetooth indicator will begin to flash. Repeat steps #3 to #4 above to establish a new pairing.
7. Rotate the VOLUME CONTROL on the top panel to increase the listening volume gradually until a comfortable listening level is reached.
8. Press the PLAY/PAUSE  button to control play/pause.
9. Press the SKIP FORWARD  button to skip to the next song and SKIP BACKWARD  button to skip to the previous song.

Notes:

- If you cannot pair the unit with your Bluetooth enabled device, try solving the problem by turning the unit power off, then power on, and then starting the pairing process again.
- The Bluetooth function of the unit will remain paired unless the paired device goes out of range of 30 feet (10 meters). If the broken link is re-established within 20 seconds, the SB3720 will reconnect to the current paired device automatically. Otherwise, you will need to make a manual connection again later.
- You may need to turn off the Bluetooth function of the paired external device first before making a new link.
- Refer to manual of your smartphone or external Bluetooth enabled device for correct Bluetooth operation instructions since it may vary from model to model.
- If your Bluetooth enabled device does not support A2DP, it will not play the music through the SB3720 system even after it is paired and connected successfully.
- If you are pairing and connecting your personal computer to the SB3720 using Bluetooth, you may need to set the SB3720 as your computer's default sound device.

RE-LINKING TO A SMARTPHONE OR BLUETOOTH ENABLED DEVICE


Even if your smartphone or Bluetooth device is already paired with the SB3720 and with both Bluetooth functions turned on, they can become unlinked at some point due to

intentional manual disconnection or undesirable external signal interferences or over-range for more than 10 seconds. If this happens, the unit will emit two short beeps. You can re-link them and resume play by:

1. Select "SB3720" from the device list on your smartphone or Bluetooth device. The SB3720 should re-link to your Bluetooth enabled device within 5 seconds.
2. Tap the play button of the music player on your Bluetooth enabled device to resume playback.

AUX IN OPERATION

You can play other music sources (iPod, MP3 or other digital audio players) through the speakers of the unit by connecting the AUX IN JACK to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN JACK and the other end of the cable to the headphone jack of your digital audio player.
2. Press and hold the POWER  button to turn on the unit. Tap the MODE button repeatedly to select AUX mode, the indication "AUX" will show on the LCD display.
3. Turn on and start playing the external device you plugged into the AUX IN JACK.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and this unit after use. Unplug the audio cable from AUX IN jack.

Notes:

- If you connect the unit to the Line-Out Jack of your external device, you only need to adjust the VOLUME CONTROL of your unit. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the unit to obtain the desirable listening level.
- Remember to turn off the unit and unplug the AUX in cable from the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.

USE HEADPHONES (NOT INCLUDED)

Inserting the plug of your stereo headphones (not included) into the headphone jack located on the top panel will enable you to listen in private. When using headphones, the speakers will be disconnected.

Read this Important Information before Using Your Headphones

- 1.) Avoid extended play at very high volume as it may impair your hearing.
- 2.) If you experience ringing in your ears, reduce the volume or shut off the unit.
- 3.) Keep the volume at a reasonable level even if your headset is an open-air type, designed to allow you to hear outside sounds. Please note that excessively high volume may still block outside sounds.

 
DECORATION ARM

The decoration arm in this model does not have a function in operation, although you can rotate it like the tone arm of turntable to have fun. Please gently rotate it to the position above the CD or return it to its original position to avoid damage. **Do not position the arm above the CD while playing a CD as this may damage your CD.** Do not attempt to pull or remove the arm. It will violate the warranty if you do so.

RESETTING THE UNIT

If the unit experiences a power surge or electric shock, it is possible that the internal micro-controller may lock up and the unit will not respond to any commands from the panel controls. In this event, holding the main unit body, use a long and straightened out paper clip, toothpick, or similar objects less than 3 mm diameter to press the RESET button which hidden inside the headphone jack located on the back of the unit (see the below figure).

CAUTION: DO NOT USE A SHARP OR POINTED OBJECT TO PRESS THE RESET BUTTON. IT MAY DAMAGE THE RESET SWITCH OR INTERNAL COMPONENTS.

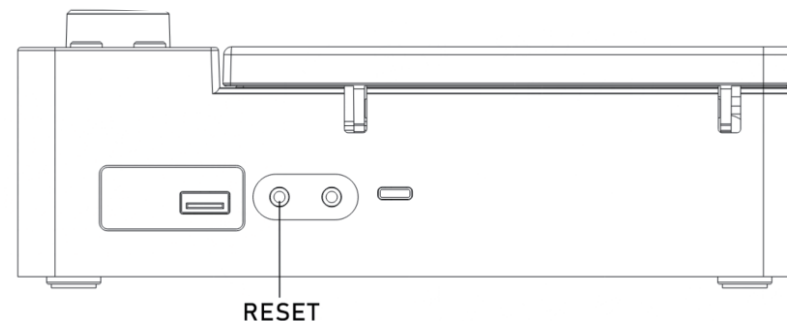

Factory Reset

In FM mode, press and hold the REPEAT button and the MODE button at same time until the LCD display shows all characters at once. The unit will enter to power off mode automatically. The factory reset operation clears the system memory and all of your previous settings, stations, and memory will be erased.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust, or extreme temperature.
2. Do not tamper with the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid, or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.



CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source and turn off the unit when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty, wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Solution
The unit does not respond (no power)	The unit is disconnected from the AC outlet.	Reconnect the AC outlet.
	The AC outlet has no power.	Try the unit on another outlet.
Unit is ON but there is low or no volume	Volume set too low.	Slowly rotate the VOLUME knob to increase the volume level.
FM no sound	Unit not in Radio mode.	Tap the MODE button repeatedly to select RADIO mode until FM shows on the LCD screen.
Bluetooth No Sound	Unit is not linked with your Bluetooth enabled device.	Go through "Bluetooth Operations" process to link the speakers.
	Unit placement out of range.	Relocate the unit within Bluetooth operating range (30 feet)
	Your Bluetooth enabled device Volume set too low.	Increase Volume level of your Bluetooth enabled device.
Noise or sound distorted on FM broadcast	Station not tuned properly.	Fine tune the FM broadcast station.
	FM reception is weak.	Try repositioning the unit near an open window until you get the best reception.
USB player will not play	Unit not in USB function mode.	Tap the MODE button repeatedly to select USB mode.
	Can't read USB data.	USB flash drive at fault, change to another good one.
CD player will not play	Unit not in CD function mode.	Tap the MODE button repeatedly to select CD mode.
	The CD is installed incorrectly.	Insert CD with label side outward.
	If the CD is self-compiled, the media used may not be compatible with the player.	Use better quality blank media and retest.
CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc.	Clean or replace the defective disc.
	Dirty pick up lens.	Use a CD-lens cleaning disc to clean the lens.
	Player is subject to excessive shock or vibration.	Relocate the player away from shock or vibration.
Sound is distorted	Volume level is set too high.	Decrease the volume.
	Sound source is distorted.	Try a different sound source. If you are using an external sound source like older generations of iPod, try reducing the output volume on the device itself.
Unit gets warm after extended play at high volume	This is normal.	Turn the unit off for a period of time or lower volume

SPECIFICATION

Radio Frequency Range : FM: 87.5 – 108 MHz
Bluetooth : V5.3
USB : Support USB device up to 64GB

Power Source:
AC Adapter : Input AC 120V~ 60Hz
Output DC 5V--- 1A (USB type C)
Built-in Rechargeable Lithium Battery : DC 3.7V---, 2000mAh

Due to continuing improvement, the features and the design are subject to change without notice.



At Spectra, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling. Please visit us at <http://www.spectraintl.com/green.htm> for more information on Spectra's green initiatives or to find a recycler in your area.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.

1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt. You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.

This warranty is valid only in accordance with the conditions set forth below:

- The warranty applies to the SPECTRA product only while:
 - It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - Claims are made within the warranty period.
- This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
- Warranty of all SPECTRA products applies to residential use only and is void when products are used in a nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit

without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so please include your name, address, phone number and email address to expedite the process.

It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectrainintl.com for updated information on the unit requiring service. In some cases the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.

SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL 60634, USA.
1-800-777-5331

To register your product, visit the link below to enter your information.
<http://www.spectrainintl.com/wform.htm>

0324

Printed in China
(SB3720B)
(SB3720BL)
(SB3720L)
(SB3720RG)
(SB3720TE)