

### JBS-350 WALL MOUNT INSTRUCTIONS


PLACE THIS WALL MOUNTING TEMPLATE AGAINST THE WALL IN THE LOCATION WHERE YOU WANT TO MOUNT THE JBS-350.

MARK THE TWO MOUNTING HOLES  USING A PENCIL.

**MAKE SURE THE MARKS ARE LEVEL PRIOR TO DRILLING HOLES IN THE WALL.**

BE SURE YOUR SCREWS ARE ATTACHED TO WOOD STUDS OR ANCHORS (FOR DRYWALL) OR CONCRETE ANCHORS (FOR BRICK/CONCRETE WALLS – NOT INCLUDED).

**DETACH THE STAND FROM MAIN UNIT PRIOR TO MOUNTING ON THE WALL.**

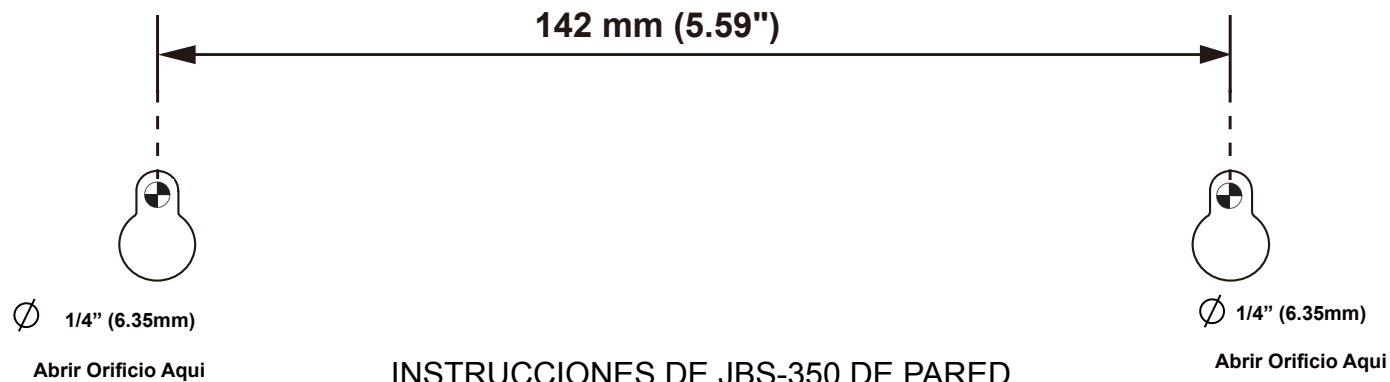

MONTAJE EN PARED PLANTILLA ESTE LUGAR CONTRA LA PARED EN EL UBICACIÓN EN LA QUE DESEA MONTAR EL JBS-350.

MARQUE LOS DOS ORIFICIOS DE MONTAJE  CON UN LÁPIZ.

**HAZ QUE LA MARCAS SON NIVEL ANTES DE PERFORAR AGUJEROS EN LA PARED.**

ASEGÚRESE DE QUE SU TORNILLO FIJADO A LA MADERA POSTES O ANCLAJES (PARA DRYWALL) O ANCLAJES CONCRETO (DE LADRILLO / PAREDES DE CONCRETO - NO INCLUIDO).

**SEPARAR EL SOPORTE DEL ANTES DE LA UNIDAD PRINCIPAL DE MONTAJE EN LA PARED.**